

User's Manual

JOHANNUS

Rembrandt 200, 300, 2000 and 3000

Document information

Document Code	REMBV102US.wpd
Document Title	User's Manual JOHANNUS Rembrandt 200, 300, 2000 and 3000
Issue date	October 1998
Serial number	

© Copyright 1998 JOHANNUS Orgelbouw b.v. The Netherlands

All rights reserved. No part of this publication may be reproduced and/or published by print, microfilm, audiotape, electronically, mechanically or any other means, or stored in an information retrieval system, without prior written permission from JOHANNUS Orgelbouw.

The information in this document is subject to change without notice and should not be considered a commitment by Johannus Orgelbouw b.v. No responsibility is assumed for any error which may be appear in this document.

Introduction

Congratulations on your **decision to purchase a new** JOHANNUS organ. You are now the owner of an instrument with a well-chosen and balanced selection of stops. This organ **gives** you the opportunity to perform the full repertoire of classical and liturgical organ music.

This User's Manual contains a lot of useful information. First we present an overview of the organ, and then we present tips on use. Finally, we investigate all of your new organ's technical possibilities, including; how to choose another temperament; using free combinations; using the general crescendo; MIDI applications and so on.

In the appendices you will find options, technical information, MIDI implementation charts and registration examples.

Table of Contents

An overview	1
The organ cabinetry	1
The console	1
The music rack	1
The roll-top cover	1
The pedalboard	2
The organ bench	2
Set up	3
Connecting the organ	3
Switching on the organ	3
The console in detail	4
Overview of the controls by type	4
Rembrandt 200	4
Rembrandt 300	5
Rembrandt 2000	6
Rembrandt 3000	7
Accessories	8
Couplers	8
Tremulants	8
Chorus	9
Intonation 2	9
MIDI-tabs	9
Display	9
Key switch	10
MEMORY LOCK	10
Stops	11
Flue pipes	11
Reeds	11
Overview of stops per type	12
Expression pedals	13
Expression pedal Choir (only for Rembrandt 300/3000)	13
Expression pedal Great + Pedal	13
Expression pedal Swell	13
Thumb pistons	13
WM = Werckmeister	13
MT = Meantone	13
MB = Manual Bass	13
CF = Cantus Firmus	13
FA = Fix Accessories (Freeze accessories)	14
SET	14
1 thru 8	14
– and +	14
GC = General Crescendo	14
PG = Program General crescendo	14
PP thru T	14
0	15
RO = Reeds Off	15
VOL. = Volume	15
TUNE	16
TRANS. = Transposer	17
Acoustics	19
ACOUSTIC (volume)	19
ACOUSTIC (program)	19
External Connections	20

MIDI IN	20
MIDI THRU	20
MIDI OUT	20
AUX IN	20
AUX OUT	20
EXT. REV.	20
PHONES	21
Choice of temperament	22
Equal temperament	22
Werckmeister III temperament	22
Meantone temperament	22
Using free combinations (Capture system)	23
What are free combinations?	23
How to set free combinations	23
Recalling free combinations	24
Using the general crescendo	25
Programming the general crescendo	26
Recalling the factory settings of general crescendo	27
Midi applications	28
What is MIDI?	28
How and what to connect?	28
Options	29
Voice-module	29
Toe Studs	29
Expanded capture	29
Programmable MIDI	29
MIDI SEQ	29
MIDI MOD	29
Program MIDI manually	30
Program MIDI into capture system	31
External Loudspeaker systems	34
3-position switch	34
Maintenance	35
Guarantee	35
Appendices	36
Technical specifications	36
Technical specifications Cabinet	37
MIDI Implementation charts	38
REMBRANDT 200	38
REMBRANDT 300	39
REMBRANDT 2000	40
REMBRANDT 3000	41
Registration Examples	42
Registration Examples Rembrandt 200	42
Personal registrations Rembrandt 200	43
Registration examples Rembrandt 300	44
Personal registrations Rembrandt 300	45
Registration examples Rembrandt 2000	46
Personal registrations Rembrandt 2000	47
Registration examples Rembrandt 3000	48
Personal registrations Rembrandt 3000	49

An overview

The organ cabinetry

The organ cabinet consists of the console shell, music-rack, pedalboard and bench. Our standard organ cabinet is designed in dark or light oak with solid wood panels. Your organ may be custom-ordered in another finish, color or wood.

The console

Typically, the console consists of two or three manuals and several accessories. The keyboards have a church organ touch and are normally designed with synthetic key surfaces. You may custom-order wooden keys. For more information, read "The console in detail."

The music rack

The music rack is typically not yet installed at the time of delivery.

If this is the case when your new organ is a Rembrandt 200 or 300, simply insert the music rack into the groove provided on the top panel of the organ cabinet.

On the Rembrandt 2000 and 3000 there are two supports left and right. Insert the music rack with the two wooden pins into the grooves provided. The music rack rests against the front of the roll-top cover. To close the roll-top cover the music rack has to be turned downwards until it rests on the side blocks of the keyboards. After that the roll-top cover may be closed.

The roll-top cover

The wooden roll-top cover is provided with a lock and key. The lock is placed behind the music-rack on the top of the organ.

Open the organ in the following way:

1. Put the key in the lock.
2. Rotate the key a quarter turn; the lock moves upwards.
3. Push the roll-top upwards.
4. In case of the Rembrandt 2000 or 3000, turn up the music rack until it rests against the front of the roll-top cover.

Lock the organ in the following way:

1. Make certain that you have the key handy (see warning).
2. In case of the Rembrandt 2000 or 3000, turn down the music rack until it rests on the side blocks of the keyboard.
3. Pull at the roll-top toward you.
4. Push in the cover-lock.

Warning

You **can** lock the organ without using of the key. However, the key is necessary to open the organ. Therefore, always take care that the key is not left withing the console before depressing the lock!

The pedalboard

Typically, organs have a 30-note BDO pedalboard. Other pedalboards are optional. E.g., In the US Rembrandt organs are equipped with 32-note AGO pedalboards.

The pedalboard is removable. At the front of each pedal key is a magnet. This magnet normally sits in close proximity to a reed switch, which is invisibly mounted behind the black painted front panel **at** the bottom of the console. When you depress a pedal key, the reed switch is activated by the magnet at the end of the key.

Your new organ has lighting above the pedalboard which is switched on and off automatically with the organ.

The following points are important for installing the pedal-board:

1. Make sure that the surface under the console in combination with the pedalboard is flat.
2. For the best alignment of the pedal-board, it may be necessary to adjust the console height slightly while positioning the pedalboard.
3. Shift the pedalboard against the black painted front panel as **close** as possible.

The organ bench

Your organ is provided with a bench that contains a music shelf. If you wish, you can order an adjustable-height bench.

Set up

Connecting the organ

pay **close** attention to the following points when you connect the organ:

1. Check the Main voltage before you connect the organ. This voltage must be the voltage as printed on the serial numberplate located on the left side under the keyboards.
2. Connect the organ to a grounded outlet. When this is not possible there is a chance some functions will not always work properly.

Switching on the organ

Switch on the organ by depressing the Main power switch located on the right side of the keyboards. The red pilot lamp will light up as soon as the organ is switched on. It takes a few seconds before **all** controls are working. **The computer circuits need this time** to initialize.

The display of the organ (located on the right side above the keyboards) will show the following text:

Mem :	I	Vol :	12	Tune :	440
Trans :	0	Crescendo :	Off		

Depending on the programmed settings the gray areas may have a different value.


Also the '0' thumb piston will light up.

The console in detail

Overview of the controls by type


The number and the location of the controls are different by type. The following pages show the controls by type of the different Rembrandt models.

Rembrandt 200

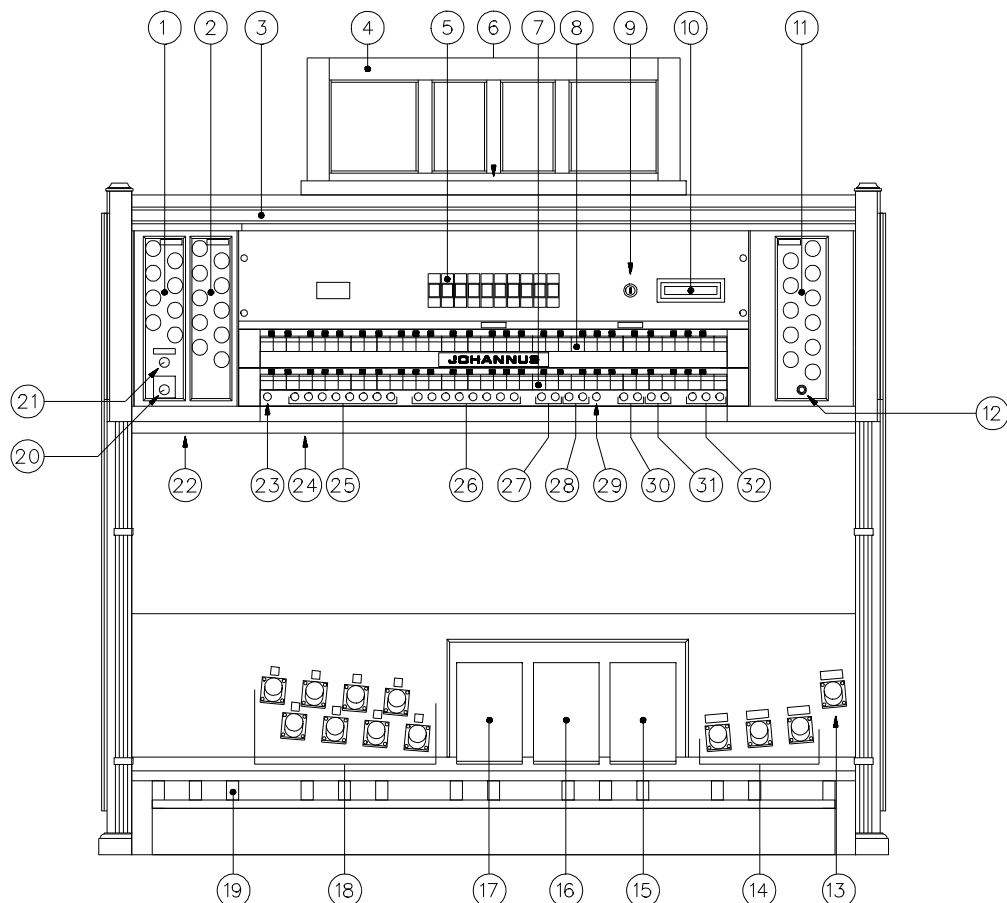


- | | | |
|-----------------------------------|----------------------------------|-------------------------------------|
| 1. Pedal stops | 17. Expression pedal Great+Pedal | 28. Thumb pistons |
| 2. Great stops | 18. Toe Studs capture (optional) | • MB (Manual Bas) |
| 3. Roll-top cover | 19. Pedalboard | • CF (Cantus Firmus) |
| 4. Music rack | 20. Acoustical control (program) | 29. Thumb pistons |
| 5. Accessories | 21. Acoustical control (volume) | • FA (Fix Accessories) |
| 6. Roll-top cover lock | 22. External connections | 30. Thumb pistons |
| 7. Great keyboard | 23. Thumb piston | • - (min) |
| 8. Swell keyboard | • SET | • + (plus) |
| 9. Key switch Memory Lock | 24. Serial numberplate | 31. Thumb pistons |
| 10. Display | 25. Thumb pistons | • GC (General Crescendo) |
| 11. Swell stops | • 1 - 8 | • PG (Program General crescencendo) |
| 12. Power switch | 26. Thumb pistons | 32. Thumb pistons |
| 13. Toe stud Tutti (optional) | • Presets | • VOL. (Volume) |
| 14. Toe studs couplers (optional) | 27. Thumb pistons | • TRANS. (Transposer) |
| 15. General crescendo pedal | • WM (Werckmeister III) | • TUNE (Tuning) |
| 16. Expression pedal Swell | • MT (Meantone) | |

Rembrandt 300

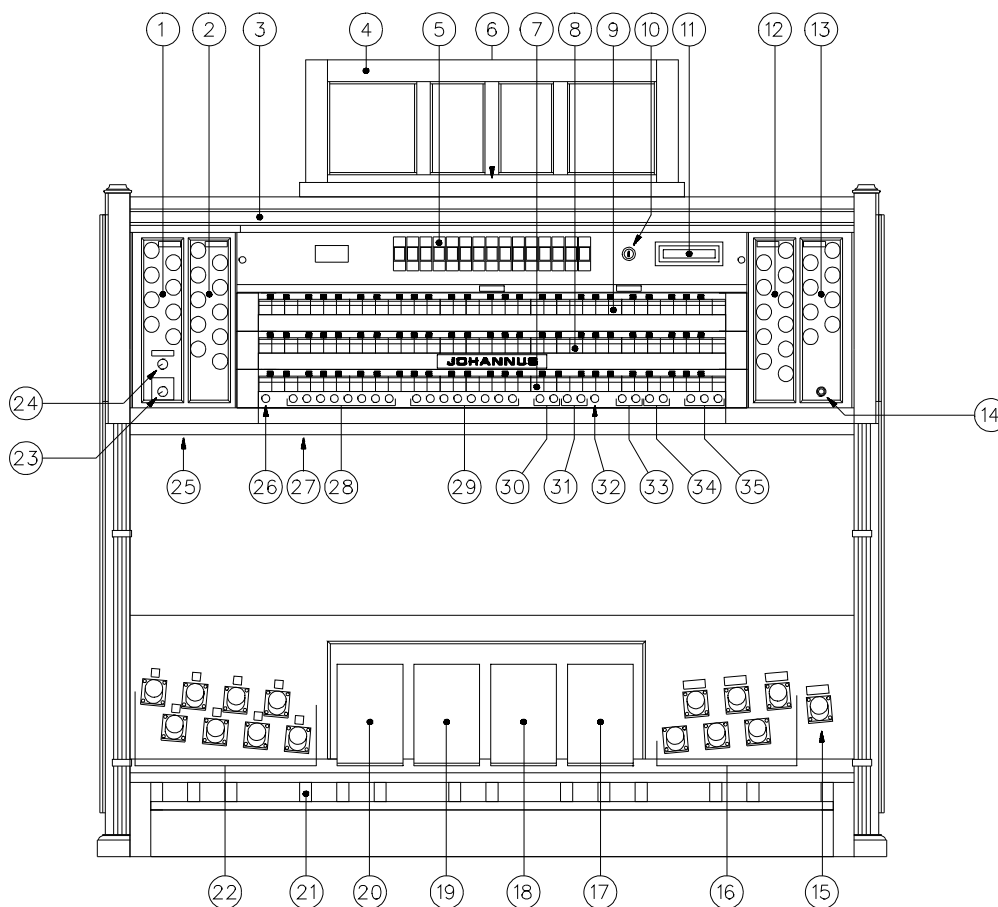


- | | | |
|-----------------------------------|------------------------------------|----------------------------------|
| 1. Pedal stops | 19. Expression pedal Great + Pedal | 31. Thumb pistons |
| 2. Great stops | 20. Expression pedal Choir | • MB (Manual Bas) |
| 3. Roll-top cover | 21. Pedalboard | • CF (Cantus Firmus) |
| 4. Music rack | 22. Toe studs capture (optional) | 32. Thumb piston |
| 5. Accessories | 23. Acoustical control (program) | • FA (Fix Accessories) |
| 6. Roll-top cover lock | 24. Acoustical control (volume) | 33. Thumb pistons |
| 7. Choir keyboard | 25. External connections | • - (min) |
| 8. Great keyboard | 26. Thumb piston | • + (plus) |
| 9. Swell keyboard | • SET | 34. Thumb pistons |
| 10. Key switch Memory Lock | 27. Serial number plate | • GC (General Crescendo) |
| 11. Display | 28. Thumb pistons | • PG (Program General crescendo) |
| 12. Swell stops | • 1 - 8 | 35. Thumb pistons |
| 13. Choir stops | 29. Thumb pistons | • VOL. (Volume) |
| 14. Power switch | • Presets | • TRANS. (Transposer) |
| 15. Toe stud Tutti (optional) | 30. Thumb pistons | • TUNE (Tuning) |
| 16. Toe studs couplers (optional) | • WM (Werckmeister III) | |
| 17. General crescendo pedal | • MT (Meantone) | |
| 18. Expression pedal Swell | | |

Rembrandt 2000

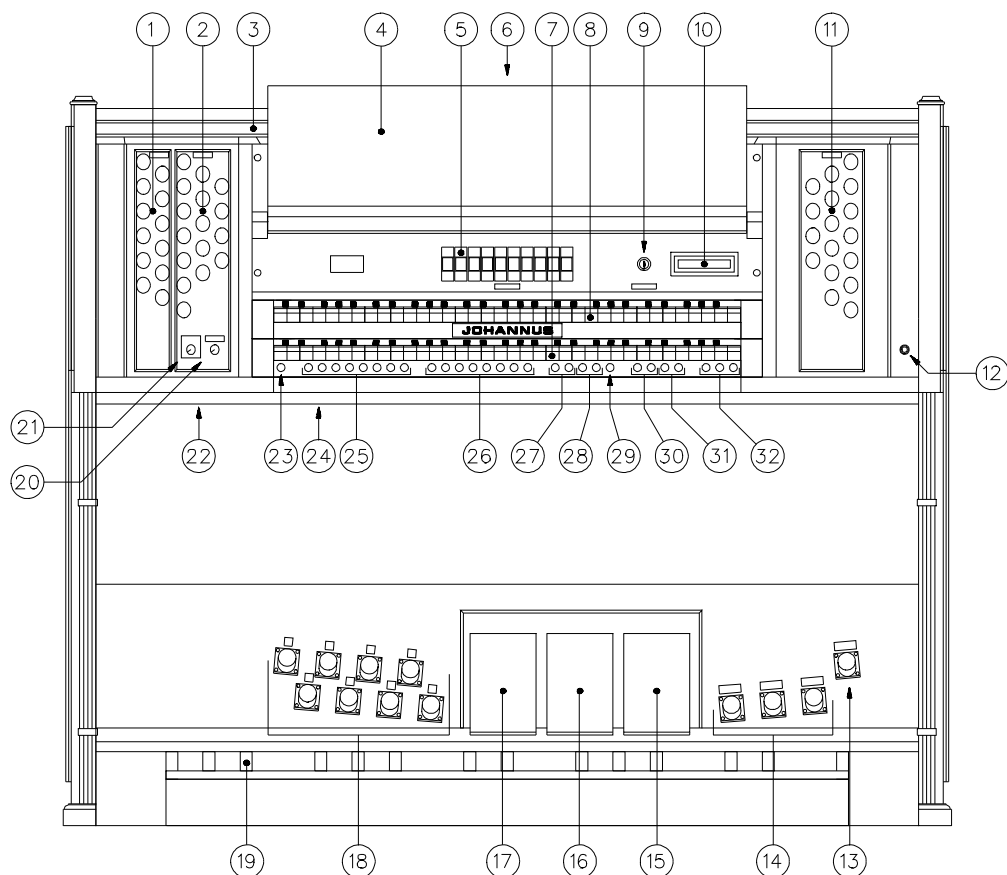

- | | | |
|-----------------------------------|----------------------------------|------------------------------------|
| 1. Pedal stops | 17. Expression pedal Great+Pedal | 28. Thumb pistons |
| 2. Great stops | 18. Toe Studs capture (optional) | • MB (Manual Bas) |
| 3. Roll-top cover | 19. Pedalboard | • CF (Cantus Firmus) |
| 4. Music rack | 20. Acoustical program control | 29. Thumb piston |
| 5. Accessories | 21. Acoustical volume control | • FA (Fix Accessories) |
| 6. Roll-top cover lock | 22. External connections | 30. Thumb pistons |
| 7. Great keyboard | 23. Thumb piston | • - (min) |
| 8. Swell keyboard | • SET | • + (plus) |
| 9. Key switch Memory Lock | 24. Serial number plate | 31. Thumb pistons |
| 10. Display | 25. Thumb pistons | • GC (General Crescendo) |
| 11. Swell stops | • 1 - 8 | • PG (Program Geneneral crescendo) |
| 12. Power switch | 26. Thumb pistons | 32. Thumb pistons |
| 13. Toe Studs Tutti (optional) | • Presets | • VOL. (Volume) |
| 14. Toe Studs couplers (optional) | 27. Thumb pistons | • TRANS. (Transposer) |
| 15. General crescendo pedal | • WM (Werckmeister III) | • TUNE (Tuning) |
| 16. Expression pedal Swell | • MT (Mean tone) | |

Rembrandt 3000

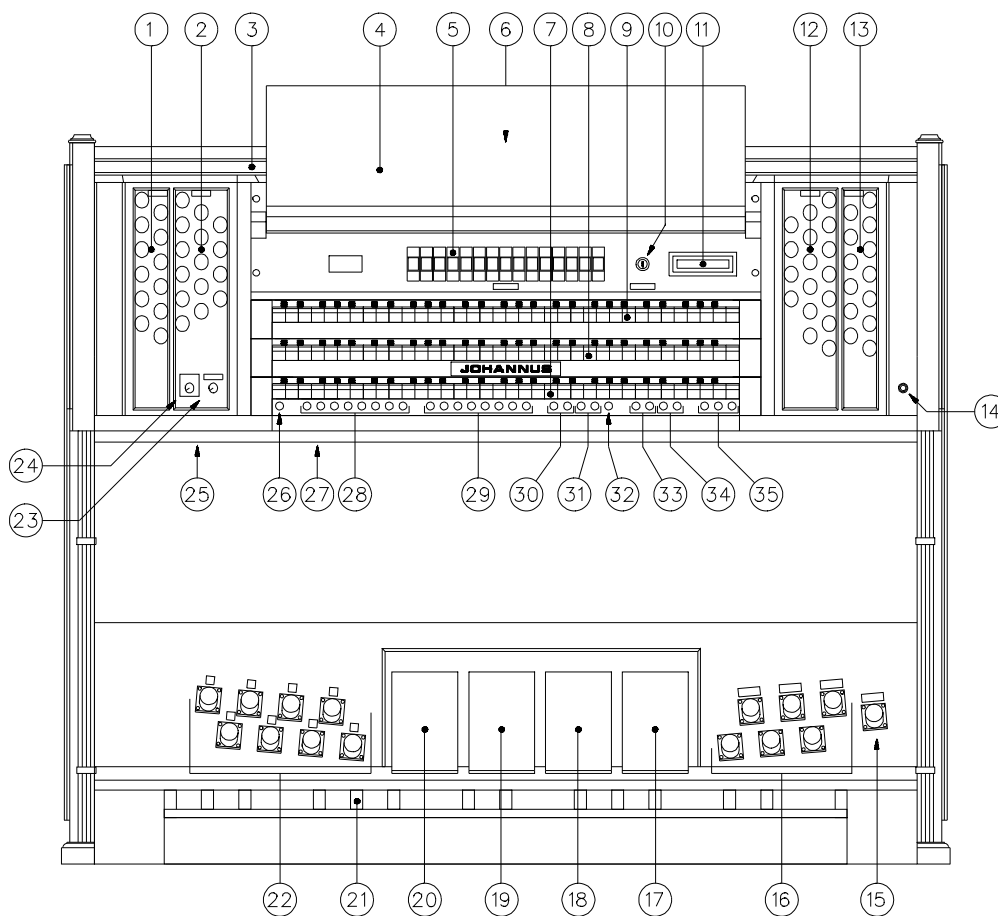

- | | | |
|-----------------------------------|----------------------------------|----------------------------------|
| 1. Pedal stops | 19. Expression pedal Great+Pedal | 31. Thumb pistons |
| 2. Great stops | 20. Expression pedal Choir | • MB (Manual Bas) |
| 3. Roll-top cover | 21. Pedalboard | • CF (Cantus Firmus) |
| 4. Music rack | 22. Toe studs capture (optional) | 32. Thumb piston |
| 5. Accessories | 23. Acoustical program control | • FA (Fix Accessories) |
| 6. Roll-top cover lock | 24. Acoustical volume control | 33. Thumb pistons |
| 7. Choir keyboard | 25. External connections | • - (min) |
| 8. Great keyboard | 26. Thumb piston | • + (plus) |
| 9. Swell keyboard | • SET | 34. Thumb pistons |
| 10. Key switch Memory Lock | 27. Serial number plate | • GC (General Crescendo) |
| 11. Display | 28. Thumb pistons | • PG (Program General crescendo) |
| 12. Swell stops | • 1 - 8 | 35. Thumb pistons |
| 13. Choir stops | 29. Thumb pistons | • VOL. (Volume) |
| 14. Power switch | • Presets | • TRANS. (Transposer) |
| 15. Toe Stud Tutti (optional) | 30. Thumb pistons | • TUNE (Tuning) |
| 16. Toe Studs Couplers (optional) | • WM (Werckmeister III) | |
| 17. General crescendo pedal | • MT (Meantone) | |
| 18. Expression pedal Swell | | |

Accessories

The following accessories are standard:

- Couplers
- Tremulants
- Chorus
- Intonation 2
- MIDI-stops

Couplers

All couplers are full **unison** couplers. This means all depressed keys are coupled.

Choir - Great (only for Rembrandt 300/3000)

This coupler couples the Choir to the Great. When playing keys on the Great the corresponding keys on the Choir will be played **as well**. This way you can add all stops of the Choir to the Great.

Swell - Great

This coupler couples the Swell to the Great. When playing keys on the Great the corresponding keys on the Swell will be played **as well**. This way you can add all stops of the Swell to the Great.

Swell - Choir (only for Rembrandt 300/3000)

This coupler couples the Swell to the Choir. When playing keys on the Choir the corresponding keys on the Swell will be played **as well**. This way you can add all stops of the Swell to the Choir.

Choir - Pedal (only for Rembrandt 300/3000)

This coupler couples the Choir to the Pedal. When playing keys on the Pedal the corresponding keys on the Choir will be played **as well**. This way you can add all stops of the Choir to the Pedal.

Great - Pedal

This coupler couples the Great to the Pedal. When playing keys on the Pedal the corresponding keys on the Great will be played **as well**. This way you can add all stops of the Great to the Pedal.

Swell - Pedal

This coupler couples the Swell to the Pedal. When playing keys on the Pedal the corresponding keys on the Swell will be played **as well**. This way you can add all stops of the Swell to the Pedal.

Tremulants

The Tremulants are meant to vibrate the sound of the organ especially with slow or soft music. Every division has its own independent tremulant.

When you use couplers and/or the CF piston the Tremulants will be coupled to the corresponding keyboards.

Chorus

To avoid the organ sounding too sterile, the instrument is designed with various stops tuned differently, in relation to each other. These small differences give the organ a broader, more lively character. Switching on this stop will intensify the difference in tuning between the various voices.

Intonation 2

Intonation determines the sound of the organ. In pipe organ-building the voicing is a very important part of the building process. Every stop will be adjusted note by note to the room where the organ is installed.

Standard your organ has two intonations, a romantic and a baroque intonation. In general a romantic organ is wider and sounds symphonic while a baroque organ is brighter and more tightly tuned. Also see under "Choice of temperament."

MIDI-tabs

The MIDI-tabs are a special group of accessories. See under "MIDI applications."

Display

An LCD-display is located on the right side above the keyboards. On the display different settings are shown like:

- Selected capture memory level (Memory 1 - 8). See "Using free combinations".

```
Mem : 1  Vol : 12-  Tune : 440
Trans : 0  Crescendo : Off
```

- Volume-setting (Volume 1 - 25). See "Thumb pistons, setting the volume".

```
Mem : 1  Vol : 12  Tune : 440
Trans : 0  Crescendo : Off
```

- Pitch adjustment (426Hz - 454Hz). See "Thumb pistons, setting pitch".

```
Mem : 1  Vol : 12  Tune : 440
Trans : 0  Crescendo : Off
```

- Transposer-position (Transposer -3 Thru +3 half steps). See "Thumb pistons, Transposer".

```
Mem : 1  Vol : 12  Tune : 440
Trans : 0  Crescendo : Off
```

- General crescendo setting.
Typically the general crescendo is not switched on and the status display will show the text Off. See "Using the General Crescendo".

```
Mem : 1  Vol : 12  Tune : 440  
Trans : 0  Crescendo : Off
```

When the general crescendo is switched on the display will show to which level the general crescendo pedal is depressed (level 1 - 20). See "Using the General Crescendo".

```
Mem : 1  Vol : 12  Tune : 440  
Trans : 0  Crescendo : 5
```

Key switch

MEMORY LOCK

To save your registrations, modified general crescendo levels, volume, tuning, and transposer settings into the organ memory, this switch must be switched on. As soon as the key switch of the memory is switched on the SET button will light up. See "Using free combinations", "Using the general crescendo", and the description of the thumb pistons Volume, Tune and Transposer.

Stops

The organ is equipped with two kinds of stops. The speaking voices are on lighted drawknobs, while the accessories are on tabs. Both kinds of stops are switches that will come back in their middle position after being switched on or off. In every drawknob or tab a light will light up when that stop is switched on. These stop lights also work with the use of presets, free combinations and general crescendo.

On a pipe organ you switch a rank of pipes on or off with the stops. By varying the combinations of stops the organist can create dynamic- and colorful changes. This means that some knowledge of the traditional pipe organ is necessary to make good stop combinations. You should know a little bit about the different sounds of the different organ stops. That is why we give a brief explanation about these different kinds of organ stops.

In the appendices you'll find extensive examples of

Organ pipes can be divided in two main groups:

- Flues
- Reeds

Flue pipes

The principle of the tone generation with flue pipes is the same than with a record. Flue pipes occur in two versions: open or (half) stopped. An example of a half-stopped pipe is the Rohrflute. On the canister-stopper a small open tube has been soldered. An example of an open flue pipe is the Principal. Normally the pipes of this stop are located in the facade of a pipe organ. Flues can be subdivided in the following categories:

Principals

Principals are the Diapason, Octave, Twelfth, Fifteenth, Mixture, Scharff, Cymbel, Rauschpfeife and Sesquialter. The last 5 stops sound with more than one pipe of different pitch together per note. So called multi rank stops.

Strings

These are the narrow scaled, open flue pipes like: Viola di gambe, Vox Celeste and Salicet.

Flutes

Flute stops, open as well as stopped are made of metal or wood. For example: Hohlf flute, Gedeckt, Bourdon, Subbass, Nazard, Waldflute, Gemshorn and Rohrflute.

Reeds

In a reed pipe the wind is blown into the pipe bringing a reed into resonance. This resonance is 'amplified' and 'colored' by a tube (resonator). Reeds with a conical resonator are: Bombarde, Trumpet, Schalmey, etc. The group of cylindrical resonators are: Fagotto, Cromorne, Krummhorn etc. The following reeds have a short resonator: Regal, Vox Humana, Ranket.

Overview of stops per type

You will find an overview of stops per organ in the appendix under examples of registrations. Next to the stopnames you normally find the length, e.g. 8'. This means that the body of this pipe for the lowest C key is 8' (Appr. 240 cm). A stop with 16' sounds one octave lower.

Expression pedals

The volume of each keyboard is adjustable with:

Expression pedal Choir (only for Rembrandt 300/3000)

With the left expression pedal you adjust the volume of the choir.

Expression pedal Great + Pedal

With the left (for Rembrandt 300/3000 the middle) expression pedal you adjust the Great and Pedal Volume at the same time.

Expression pedal Swell

With the right expression pedal you adjust the volume of the Swell.

The expression pedals work independently from the adjusted General Volume. For adjusting General Volume see: "Thumb pistons, Volume."

Thumb pistons

Thumb pistons are switches that after being switched on or off remain in the same position. For that every thumb piston has a light build in that lights on as soon as it is switched on.

WM = Werckmeister

By pushing this piston you choose for the Werckmeister III temperament. See under chapter "Choice of temperament." As soon as you switch on this temperament the Meantone temperament will be switched off automatically in case it was on.

By pushing the WM thumb piston again its function will be switched off again.

MT = Meantone

By pushing this piston you choose for the Meantone temperament. See under chapter "Choice of temperament." As soon as you switch on this temperament the Werckmeister III temperament will be switched off automatically in case it was on.

By pushing the MT thumb piston again its function will be switched off again.

MB = Manual Bass

By pushing this piston the pedal board will be coupled to the Great keyboard automatically. When you play a chord on the Great, the lowest key of this chord will be coupled from the Pedal to the Great.

By pushing the MB thumb piston again its function will be switched off again.

CF = Cantus Firmus

By pushing this piston the Swell will be coupled to the Great keyboard. When you play a chord on the Great, the highest key of this chord will be coupled from the Swell to the Great. This way the effect of an automatic solo can be **achieved**. In case the Swell to Great coupler already **in use** the CF function has no effect.

By pushing the CF thumb piston again its function will be switched off again.

FA = Fix Accessories (Freeze accessories)

When you use the couplers and tremulants in the fixed combinations (presets) or in the free combinations (capture system) or using the thumb piston "0" (cancel) these will change to 0. You can avoid this by using the FA thumb piston. As long as this piston is switched on you can only switch the couplers and tremulants on or off by hand. By pushing the FA piston again its function will be switched off again.

SET

A thumb piston to program:

- Free combinations (see under "Using free combinations").
- Stop combinations of the General Crescendo (see under "Using the General Crescendo").
- Volume-, Tune- en Transposer-adjustments (see under the description of the thumb pistons Volume, Tune and T Transposer).

1 thru 8

Thumb pistons to store a personal registration into the capture memory by giving these registrations a number (1 thru 8) within a memory level (bank). These thumb pistons you need again to call these stored registrations from the capture memory. See under "Using free combinations".

- and +

Thumb pistons with which you:

- Choose a Memory level (bank 1 thru 8). (See under "Using free combinations/ capture system".)
- Choose a step to be programmed in the General Crescendo. (See under using the General Crescendo.)
- Adjust the volume, tune en transposer (see under the description of the thumb pistons Volume, Tune and Transposer).

When you keep on pushing the - or the + piston these will automatically count down or up.

GC = General Crescendo

Piston to switch the General Crescendo function on or off. See under "Using the General crescendo".

PG = Program General crescendo

Piston that enables you to change the stop combinations of the General Crescendo. See under "Using the General crescendo".

PP thru T

The fixed combinations (presets) are registrations, preset according to musical standards, starting with PP (Pianissimo: very soft) thru T (Tutti: full organ).

The Tutti piston has two functions. When you play a stop combination chosen by yourself or from the presets (PP thru FF) the T piston calls the full organ; the normal function of this piston. However, when you push the T once more you will recall the previous registration.

The presets have been fixed in the factory and cannot be changed by the user.

When you push one of the preset pistons the factory programmed stops will light up accordingly. It is always possible to switch stops on or off by hand.

0

The 0 piston is located to the right of the "T" piston.

This piston has two functions. It may happen that you switch on a preset or add a stop by hand by mistake. By pushing the "0" short you will undo the latest change.

Example

You play the registration of Flute 8', Flute 4', and Flute 2'. After some time you add the Principal 8' and Principal 4'. There is always a very short time between switching on the Principal 8' and the Principal 4'. By pushing the "0" piston briefly only the Principal 4' will be switched off (undo the latest change). Not the Principal 8' as well as the Principal 4' will be switched off (according to the organist this would be his last change.) Actually the organ sees the Flute 8', Flute 4', Flute 2' and the Principal 8' as the previous registration and the organist the combination Flute 8', Flute 4', and Flute 2 as the last one.

When pushing the "0" piston longer all stops will be switched off at once. Exceptions are: the couplers and tremulants when the FA piston is switched on and the stops Chorus, Intonation 2 and the MIDI-tabs.

RO = Reeds Off

Located to the far right of the presets is the RO (Reeds Off) thumb piston. By pushing this piston all reeds will be switched off at once. As long as the RO piston is switched on no reeds can be switched on. By pushing the RO piston again this function will be switched off.

VOL. = Volume

Independent from the position of the expression pedals you may adjust the total volume of the organ with the piston VOL. in combination with the - and + pistons. The adjusted volume you can store in the memory. When you switch on the organ the in the memory preprogrammed volume setting will automatically be chosen. If desired you can always change the programmed volume setting again.

The memory of the volume adjustment is protected so that it cannot be erased when you switch off the organ or when you unplug the organ from the main power.

The volume can be adjusted between 1 and 25. The choice of volume can be seen in the display:

Mem : 1	Vol : 12	Tune : 440
Trans : 0	Crescendo : Off	

The volume can be adjusted as follows:

1. Push the VOL. Piston. As long as the light of the VOL. piston remains lighting up you can change the volume setting.
2. Adjust the desired volume by pushing the - or + piston as many times as necessary to reach the desired volume.
3. After some seconds the lights of the VOL. As well as the - and + pistons will switch off automatically.
4. This volume setting has not been programmed and you will lose it as soon as you switch off the organ.

A volume setting can be programmed as follows:

1. Make the memory accessible by turning the MEMORY LOCK a quarter turn to the right. The SET piston will light up to indicate the memory can be accessed.
2. Push the VOL. Piston. As long as the light of the VOL. piston remains lighting up you can change the volume setting.
3. Adjust the desired volume by pushing the - or + piston as many times as necessary to reach the desired volume.
4. Push the SET piston when the right volume level has been reached. As long as you push the SET piston a P will show up in the display to indicate that the chosen volume setting is being programmed.

Mem : P 6	Vol : 1 2	Tune : 4 4 0
Trans : 0	Crescendo : Off	

The programming into the memory can be done only if the piston VOL. lights up. After some seconds the lights of the VOL. as well as the - and + pistons will switch off automatically.

5. Close the memory by turning the key switch MEMORY LOCK a quarter turn to the left and eventually remove the key from the switch. The light in the SET piston will go off to indicate that the memory is not accessible anymore.

The volume setting has been stored in the memory. Every time the organ will be switched on from now on the in the memory programmed volume setting will be chosen automatically.

TUNE

The standard pitch for musical instruments is A=440Hz.

You can change the pitch with the TUNE piston in combination with the - and + pistons in steps of 1 Hz. From 426 Hz (a quarter step lower than the std pitch) until 454 Hz (a quarter step higher than the std pitch). An adjusted pitch can be programmed into the memory. When the organ is switched on this programmed pitch will be chosen automatically. If desired you can always change the programmed volume setting again.

The memory of the pitch adjustment is protected so that it cannot be erased when you switch off the organ or when you unplug the organ from the main power.

The adjusted pitch you can read in the display:

Mem : 1	Vol : 1 2	Tune : 4 4 0
Trans : 0	Crescendo : Off	

The pitch can be adjusted in the following way:

1. Push piston TUNE. As long as the light in the thumb piston lights up you can adjust the pitch.
2. Adjust the desired pitch by pushing the - or the + piston one or more times.
3. After some seconds the lights of the piston TUNE as well as the - and the + piston will be switched off automatically.

The pitch setting has not been stored and will be erased when you switch off the organ.

You may program a pitch setting as follows:

1. Make the memory accessible by turning the MEMORY LOCK a quarter turn to the right. The SET piston will light up to indicate the memory can be accessed.
2. Push the TUNE Piston. As long as the light of the TUNE piston remains lighting up you can change the volume setting.
3. Adjust the desired pitch by pushing the - or + piston as many times as necessary to reach the desired pitch.
4. Push the SET piston when the right pitch level has been reached. As long as you push the SET piston a P will show up in the display to indicate that the chosen pitch setting is being programmed.

Mem : P 6	Vol : 12	Tune : 440
Trans : 0	Crescendo : Off	

The programming into the memory can be done only if the piston TUNE lights up. After some seconds the lights of the TUNE as well as the - and + pistons will switch off automatically.

5. Close the memory by turning the key switch MEMORY LOCK a quarter turn to the left and eventually remove the key from the switch. The light in the SET piston will go off to indicate that the memory is not accessible anymore.

The volume setting has been stored in the memory. Every time the organ will be switched on from now on the in the memory programmed volume setting will be chosen automatically.

TRANS. = Transposer

With the TRANS. Thumb piston in combination with the - and the + piston it is possible to transpose the organ. This means the organ can be tuned some steps higher or lower. The adjusted setting can be stored in the memory. When the organ is switched on this programmed TRANS. will be chosen automatically. If desired you can always change the programmed transposer setting again.

The memory of the transposer adjustment is protected so that it cannot be erased when you switch off the organ or when you unplug the organ from the main power.

You are able to transpose the organ 3 half steps lower and 3 half steps higher. The adjusted transposer setting you can read in the display.

Mem : 1	Vol : 12	Tune : 440
Trans : -2	Crescendo : Off	

The transposer can be adjusted as follows:

1. Push thumb piston TRANS. As long as the light in the thumb piston lights up you can adjust the pitch.
2. Adjust the desired transposer position by pushing the - or the + piston one or more times.
3. After some seconds the lights of the piston TRANS. as well as the - and the + piston will be switched off automatically.

The transposer setting has not been stored and will be erased when you switch off the organ.

You may program a transposer setting as follows:

1. Make the memory accessible by turning the MEMORY LOCK a quarter turn to the right. The SET piston will light up to indicate the memory can be accessed.
2. Push the TRANS. piston. As long as the light of the TRANS. piston remains lighting up you can change the volume setting.
3. Adjust the desired transposer setting by pushing the - or + piston as many times as necessary to reach the desired pitch.
4. Push the SET piston when the right pitch level has been reached. As long as you push the SET piston a P will show up in the display to indicate that the chosen pitch setting is being programmed.

Mem : P 6	Vol : 12	Tune : 440
Trans : -2	Crescendo : Off	

The programming into the memory can be done only if the piston TRANS. lights up. After some seconds the lights of the TRANS. as well as the - and + pistons will switch off automatically.

5. Close the memory by turning the key switch MEMORY LOCK a quarter turn to the left and eventually remove the key from the switch. The light in the SET piston will go off to indicate that the memory is not accessible anymore.

The transposer setting has been stored in the memory. Every time the organ will be switched on from now on the in the memory programmed transposer setting will be chosen automatically.

Acoustics

The build-in digital acoustics provide a spacial reverberation of the organ sound.


ACOUSTIC (volume)

With this control the volume of the reverberations can be adjusted. To completely switch off the reverberations you turn the control to the left.

ACOUSTIC (program)

With the position switch you may choose from 3 different acoustical environments.

External Connections

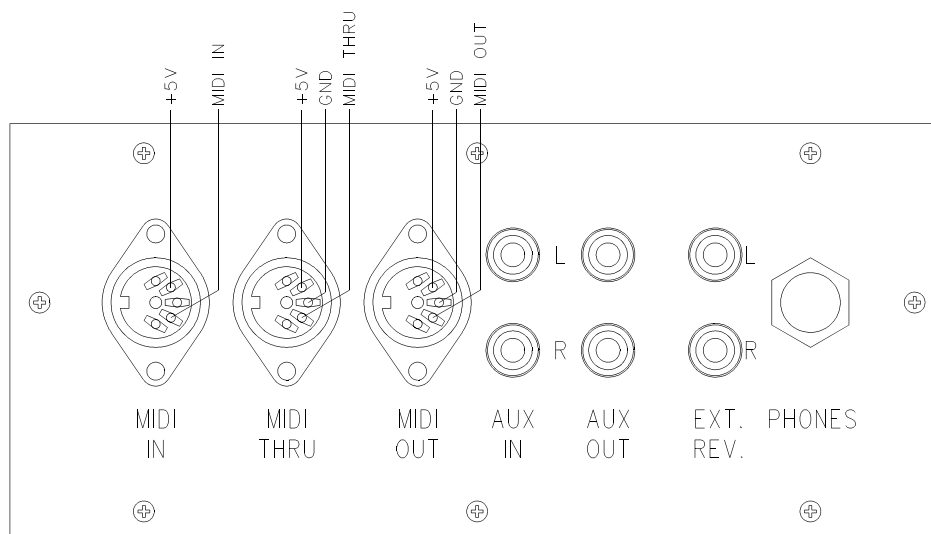

The following external connections are located left under the console:

MIDI IN

To receive MIDI-codes from other devices.

MIDI THRU

For relaying incoming MIDI codes from other devices.

MIDI OUT

To send MIDI-codes to other devices.

AUX IN

This input can be used to amplify the sound of an external device through the speakers of the organ. E.g. It is possible to play the sound of an expander module that is controlled by the organ's MIDI out through the organ's speakers.

The volume of the device that is connected to the AUX IN cannot be adjusted by the expression pedals or the VOLUME control. (Except external devices that are controlled by the organ's MIDI OUT).

AUX OUT

This output is meant to connect an external stereo amplifier.

EXT. REV.

The connection EXTERN REVERB is specifically for the JOHANNUS external surround acoustics device. This system that works with 4 independent loudspeaker boxes in the room, creates a realistic acoustical impression of a concert hall, church or cathedral. It is not recommended to use this output for other purposes.

PHONES

This is the connection for a stereo headphone and suited for up to 2000 ohm. Using a low impedance headphone (e.g. 8ohm) may give a too loud volume. This can be regulated with the control VOLUME.

When using a headphone the organ loudspeakers will be automatically switched off. All loudspeaker channels will be divided stereophonically through the two headphone channels.

Choice of temperament

The temperament is the way the different notes within an octave are tuned. This has been changed through the ages, depending on taste, different instruments and new instruments.

On this JOHANNUS organ you may choose from 3 different temperaments.

- Equal temperament
- Werckmeister III temperament
- Meantone temperament

Equal temperament

Today the **most widely** used and accepted temperament is the 'equal temperament'. This is a tuning where all 12 quints have been under tuned and all tierces have been overtuned to keep the octave pure. **Equal temperament is standard on the Johannus organ.** In addition you have a choice out of a Romantic voicing and a Baroque voicing. On an instrument with Equal temperament you may play in any key.

Werckmeister III temperament

Andreas Werckmeister introduced his tuning approximately in 1691 in Germany. Within this temperament the often used tierces are more or less pure tuned. Every key has his own specific character. This effect has been used extensively in the baroque age and even after that. Johann Mattheson writes in 1713 that e.g. f-flat is used to express a resigned, deep and desperate agony. According to him C major is impertinent, but not unsuitable to also express feelings of joy. This temperament is recommended with "intonation 2".

Meantone temperament

In Meantone the often used tierces **are tuned** pure. E.g. c-e, d-f#, etc. Because the tierces in chords with quints and tierces are **determining the** purity of a chord we experience these pure chords as very restful. Playing a chromatic scale it appears there are clear differences between the half steps. It is impossible to play pure sounding chords on the a#, f# g# and b in a Meantone temperament.

This Meantone temperament was **in use until appr. 1650.** Music from this **period of time** is based on this temperament, using it to a maximum and avoiding the impossibilities. Because all the half steps are different the chromatical parts of music sound violent. This possibility has often been used to create special feelings among the listeners. The more false the chords, the deeper the emotion.

From the period of time of appr. 1550-1650 there are many examples where also the less pure chords have been used for expressive purposes. Composers that lived and worked then were e.g. Michael Praetorius (1571-1621) and Jan Pieterszoon Sweelinck (1562-1621).

In fact this music needs a Meantone temperament to give it an extra dimension. In our modern equal temperament this music sounds accentless and the true dimension gets lost. This Meantone temperament sounds best with the "intonation 2" switched on.

Using free combinations (Capture system)

What are free combinations?

Free combinations are a special kind of presets. The combinations of stops in presets are fixed. With free combinations you are able to store your choice of stop combination into the memory and recall them when needed. This of course is especially helpful when many different registrations occur in a piece of Music. It makes the help of assistants redundant.

The memory of the free combinations is protected so that it cannot be erased when you switch off the organ or when you unplug the organ from the main power.

The capture system exists of the following:

- Key switch MEMORY LOCK
- Thumb pistons – and +
- Display
- Thumb piston SET
- Thumb pistons 1 thru 8

With the capture system you can program 64 personal registrations. These registrations can be recalled at any time. The capture system has eight memory banks to be chosen with the pistons - and +. Every memory bank can store 8 combinations accessible by the pistons 1 thru 8. On every setter location you may store a personal registration. Only the accessories Chorus, Intonation 2 and the Midi stops cannot be stored in the capture system.

How to set free combinations

A free combination is programmed as follows:

1. First check if the pistons GC and PG are not switched on. This to **avoid modifying a** stop combination of the General Crescendo.
2. Make the memory accessible by turning the MEMORY LOCK a quarter turn to the right. The SET piston will light up to indicate the memory can be accessed.
3. Choose the registration you want to store in the capture system.
4. Choose a memory bank (e.g. memory bank M6) by pushing one or more times on the - or the + piston until the display shows the **correct** memory bank (in this example M6).

Mem : 6	Vol : 12	Tune : 440
Trans : 0	Crescendo : Off	

5. Push SET (keep on pushing) and choose the memory number (e.g. piston number 3). On the display you will see the letter P to indicate that the registration is programmed in the capture.

Mem : P6	Vol : 12	Tune : 440
Trans : 0	Crescendo : Off	

6. First release the piston for the memory number (in this example number 3) and then the SET piston. After releasing the SET piston the letter P will disappear in the display.
7. Close the memory by turning the key switch MEMORY LOCK a quarter turn to the left and eventually remove the key from the switch. The light in the SET piston will go off

to indicate that the memory is not accessible anymore.

8. Write the programmed combination (e.g. M6-3) in your music paper where you want to use it.

The personal registration now has been stored in memory bank 6 in number 3.

Recalling free combinations

To recalling the personal registrations it is not necessary to make the capture system accessible with the key switch MEMORY LOCK. Recalling goes as follows:

1. Determine the setter combination you want to recall (e.g. M2-3).
2. Choose the memory bank with the - and the + pistons (e.g. M2). The memory bank shows up in the display.

Mem : 2	Vol : 12	Tune : 440
Trans : 0	Crescendo : Off	

3. Then choose the memory number (push e.g. piston 3).

In the registration you recalled you may add or remove stops by hand.

Using the general crescendo

With the general crescendo you can add stops in 20 steps from very soft (pianissimo) till Full organ (Tutti). The 20 steps are preset according to musical standards.

The general crescendo always has priority above the manual registration, fixed combination or free combination. Also the stops switched on by the general crescendo cannot be canceled with the 0 piston. Within a stop combinations of the general crescendo it is possible to add extra stops. Reeds which have been switched on by the general crescendo can be switched off by the RO (Reeds off) switch.

When desired you may change the standard stop combination setting of each general crescendo step - except the 0 - and store in the general crescendo memory.

It is always possible to restore the stop combinations as initially stored by the designer of the organ into the general crescendo memory. However, this can only be done with all 20 steps at once. This will erase all personal combinations too.

The memory of the general crescendo is protected so that it cannot be erased when you switch off the organ or when you unplug the organ from the main power.

The general crescendo exists of the following:

- Pistons GC and PG
- Display
- General crescendo pedal
- Key switch MEMORY LOCK
- Thumb piston – and +
- Thumb piston SET

When the general crescendo is not switched on the display will show the text Off.

```
Mem : 1 Vol : 12 Tune : 440  
Trans : 0 Crescendo : Off
```

To use the general crescendo the piston GC must be pushed. The display now shows until which step the general crescendo has been switched on.

```
Mem : 1 Vol : 12 Tune : 440  
Trans : 0 Crescendo : 12
```

Programming the general crescendo

A stop combination in the general crescendo can be changed as follows:

1. Make the memory accessible by turning the MEMORY LOCK a quarter turn to the right. The SET piston will light up to indicate the memory can be accessed.
2. Push the pistons GC and PG. The display will show a 0 (level 0, meaning all stops of the general crescendo off).

```
Mem: I Vol: I 2 Tune: 4 4 0
Trans: 0 Crescendo: 0
```

Also all stops will switch off. Changing the general crescendo pedal will have no effect anymore.

3. Choose the level of the general crescendo you want to change by pushing one or more times on the - or the + piston until the display shows the level you want to change. (E.g. level 5).

```
Mem: I Vol: I 2 Tune: 4 4 0
Trans: 0 Crescendo: 5
```

The stops that belong to this level in the general crescendo will light up.

4. Choose the personal registration for the level (in this case level 5) of the general crescendo you want to store in the general crescendo memory.
5. Push the SET piston. As long as you push the SET piston a P will show up in the display to indicate that the personal registration is programmed into the general crescendo memory.

```
Mem: P 6 Vol: I 2 Tune: 4 4 0
Trans: 0 Crescendo: 5
```

6. Close the general crescendo memory by turning the key switch MEMORY LOCK a quarter turn to the left and eventually remove the key from the switch. The light in the SET piston will go off to indicate that the memory is not accessible anymore.
7. Push the PG piston again to switch it off. The general crescendo can be used as normal again.

Recalling the factory settings of general crescendo

The factory setting of stop combinations in the general crescendo can be restored as follows.

1. Make the memory accessible by turning the MEMORY LOCK a quarter turn to the right. The SET piston will light up to indicate the memory can be accessed.
2. Push the pistons GC and PG. The display will show a 0 (level 0, meaning all stops of the general crescendo off).

Mem : I	Vol : 12	Tune : 440
Trans : 0	Crescendo : 0	

Also all stops will switch off. Changing the general crescendo pedal will have no effect anymore.

3. Push the 0 piston (keep on pushing) and push the SET then. As long as you push the SET piston a P will show up in the display to indicate that the personal registration is programmed into the general crescendo memory.

Mem : P 6	Vol : 12	Tune : 440
Trans : 0	Crescendo : 0	

4. Release the SET piston before releasing the 0 piston.
5. Close the general crescendo memory by turning the key switch MEMORY LOCK a quarter turn to the left and eventually remove the key from the switch. The light in the SET piston will go off to indicate that the memory is not accessible anymore.
6. Push the PG piston again to switch it off. The general crescendo can be used as normal again.

Midi applications

What is MIDI?

MIDI is the abbreviation of Musical Instruments Digital Interface. With MIDI different musical instruments can be connected with each other or with a computer. For example it is possible to play on your organ and at the same time on a synthesizer or an expander module. The MIDI standard is partly based on hardware. Next to that it is a worldwide agreement about the way music and sound are being interpreted and communicated between devices that have MIDI capability. The MIDI codes sent by a Johannus organ tells e.g. which key is played.

Midi exists of the following parts:

- MIDI-connections (MIDI IN, MIDI THRU, MIDI OUT).
- MIDI-stops.
- A device (e.g. synthesizer) that you want to connect through MIDI.
- Connection cables

The MIDI stops have a number. The MIDI number for Great on the Rembrandt 200/2000 is number 1 and with Rembrandt 300/3000 the MIDI Great is number 2. This number indicates the MIDI channel used to transfer key information when playing the Great. MIDI has at least 16 channels to transfer Data. The MIDI stops determine from which keyboard(s) you send key information to other device(s).

How and what to connect?

Imagine you want to connect 3 expanders to your organ. One you want to play from the Great, the other from the Swell and the third one from the Pedal.

The following has to be done:

1. Connect the expanders with the MIDI cables (DIN).
2. Switch on MIDI stop Great 1. The expander must be configured so that it can only receive data through channel 1.
3. Switch on MIDI stop Swell 2. Set the second expander for channel 2.
4. Switch on the MIDI stop Pedal 3. Set the third expander for channel 3.

Options

Depending on your choice the instrument may have some options.

Voice-module

The organ can be expanded with a number of special voices divided over the different divisions (Great, Swell and Choir). These stops can be seen as extensions of the division.

Toe Studs

Depending on your choice the organ may have the following Toe Pistons/Studs.

COUPLER pistons

With these toe studs you can control couplers. When a coupler is switched off you can switch it on with the toe studs. Reverse is possible too.

TUTTI piston

This toe stud has the same function as the T thumb piston of the fixed combinations.

CAPTURE pistons

These toe studs have the same function as the memory pistons **1 thru 8**.

Expanded capture

A standard Rembrandt configuration has 64 general free programmable combinations. This can be expanded with 64 free combinations per division. This means 64 memories for the pedal, 64 for the great, 64 for the swell and for the Rembrandt 300/3000 64 for the **choir**.

The so called separates (divisionals) can be programmed independently. The programming of the divisionals is the same than the description under "Using free combinations" .

Programmable MIDI

When your organ is configured with Programmable MIDI the MIDI thru output is removed. Instead there is a MIDI MOD output to control e.g. an expander module. The 'normal' MIDI out becomes MIDI SEQ to control e.g. a sequencer module.

On organs that have a programmable MIDI the PG piston has an extra function. This piston is not only used for general crescendo but also to program the MIDI. The piston gets another name: PGM (Program General crescendo and Midi).

MIDI SEQ

The MIDI SEQ is a MIDI output that is not programmable. This MIDI output gives a constant data out (e.g. for a sequencer) with all necessary information (data dump). This of course includes that, in the contrary with a 'normal' MIDI out, no channels can be switched on or off with the MIDI stops.

When using our personal voicing software INTONAT you should use the MIDI SEQ output to send data to the computer. (In fact, a data dump too).

MIDI MOD

The MIDI MOD is a MIDI output which is programmable. This output is programmable to better use external devices as e.g. an expander module.

Programmable MIDI allows you to access a module voice/patch (1-128) through one of the channels (1-16) by switching on a MIDI stop. (MIDI Great 1; MIDI Swell 2; MIDI Pedal 3 etc.).

E.g. the MIDI stop MIDI Great 1 is programmed to module voice number 7, channel 15. When playing, and MIDI stop Great 1 is switched on, the key data will be transferred through channel 15 and module voice 7 can be heard.

The memory is protected so that it can not be erased when you switch off the organ or when you unplug the organ from the main power.

Program MIDI manually

Items to programming the MIDI stops are:

- Key switch MEMORY LOCK
- Thumb pistons – and +
- Display
- Piston SET
- Piston PGM
- MIDI-stops

A MIDI stop can be programmed as follows:

1. First push the 0 or one of the preset pistons. This to be sure that you don't change a MIDI stop that was already programmed in the capture.
2. Also check if the GC is not switched on. This to be sure that you don't change a general crescendo level.
3. Make the memory accessible by turning the MEMORY LOCK a quarter turn to the right. The SET piston will light up to indicate the memory can be accessed.
4. Push the PGM piston. The display will show the following text:

```
M i d i   P r o g r a m
V o i c e :           C h a n n e l :
```

5. Switch on the MIDI stop you want to program (e.g. Swell 2). The display will show which MIDI stop is switched on and the current channel.

```
M i d i   P r o g r a m   S w e l l
V o i c e :           C h a n n e l : 2
```

6. Choose, by pushing one or more times on the - or the + piston, the channel you want to assign to the MIDI stop. The channel (1 thru 16) will show up in the display.

7. Push SET when you selected the right channel (e.g. channel 6). The selected channel has been assigned now to the MIDI stop.
The display now will show the existing module voice too.

Midi Program	Swell
Voice: I	Channel: 6

8. Choose, by pushing one or more times on the - or the + piston, the module voice you want to assign to the MIDI stop. The module voice (e.g. 40) will show up in the display.

Midi Program	Swell
Voice: 40	Channel: 6

9. Push SET when you selected the right module voice (e.g. patch 40). To indicate that the selected channel and module voice are being programmed a P will show up in the display as long as you push SET.

Midi Program	P Swell
Voice: 40	Channel: 6

10. The MIDI stop MIDI Swell 2 now has been programmed with channel 6, module voice 40. This means that switching on MIDI Swell 2 while playing the swell, key data will be transferred over channel 6 to the module and that module voice 40 will be switched on.
11. Close the memory by turning the key switch MEMORY LOCK a quarter turn to the left and eventually remove the key from the switch. The light in the SET piston will go off to indicate that the memory is not accessible anymore.
12. Switch off the PGM by pushing it again.

Program MIDI into capture system

In fact this means storing a module voice into the capture system of the organ, possibly in combination with some other normal organ voices.

A MIDI-stop can be programmed in the memory as follows:

1. Check if the GC is not switched on. This to be sure that you don't change a general crescendo level.
2. Make the memory accessible by turning the MEMORY LOCK a quarter turn to the right. The SET piston will light up to indicate the memory can be accessed.
3. Switch on the MIDI-stop that has to be programmed (E.g. MIDI Swell 2) together (when desired) with other stops that you want to store into the capture system.

4. First store this registration in the chosen free combination (see under “Using free combinations”). This can be a free combination from the generals as from the divisionals (if present).

Note: 1. Do not store the chosen module registration in the capture memory first because the programmed manual registration of this MIDI stop will be changed unintentionally.

2. Concerning the divisionals (separates) you can only program MIDI-stops into the accompanying divisions. For example, you can only program MIDI Swell 2 **into** the Swell divisionals and not into e.g. Great divisionals.

5. Push the PGM piston. The display will show which MIDI stop you switched on including the channel.

```
Midi Program      Swell 1
Voice:           Channel: 2
```

6. Choose, by pushing one or more times on the - or the + piston, the channel you want to assign to the MIDI stop. The channel (1 thru 16) will show up in the display.

7. Push SET when you selected the right channel (e.g. channel 7). The selected channel has been assigned now to the MIDI stop.

The display now will show the existing module voice too.

```
Midi Program      Swell
Voice:           1 Channel: 7
```

8. Choose, by pushing one or more times on the - or the + piston, the module voice you want to assign to the MIDI stop. The module voice (e.g. 41) will show up in the display.

```
Midi Program      Swell
Voice:           41 Channel: 7
```

9. Push SET when you selected the right module voice (e.g. patch 41). To indicate that the selected channel and module voice are being programmed a P will show up in the display as long as you push SET.

```
Midi Program      P Swell
Voice:           41 Channel: 7
```

10. The MIDI stop MIDI Swell 2 now has been programmed with channel 7, module voice 41. This means that recalling the concerning free combination the key data from the Swell is transmitted through channel 7 to the external module while module voice (patch) 41 is switched on.

11. Close the memory by turning the key switch MEMORY LOCK a quarter turn to the left and eventually remove the key from the switch. The light in the SET piston will go off to indicate that the memory is not accessible anymore.

12. Switch off the PGM by pushing it again.

Using the capture system you can assign one MIDI-stop to several channels/module voice (patches). E.g. a Rembrandt 300 with expanded capture system may have 129 different

settings **per** MIDI stop. (1x manual setting, 64 general settings and 64 separate settings). The entire organ can handle $4 \times 129 = 516$ different settings.

When programming more than one MIDI stop (with or without a combination with normal organ voices) in one free combination you should start with the lowest numbered MIDI stop.


Program e.g. MIDI-Great 1, MIDI Swell 2 and MIDI Pedal 3 in one free combination as follows:

1. Switch on the three MIDI switches (upon wish including other organ stops).
2. First store this registration into the **free** combination of your choice. (see under "Using free combinations").
3. Push the PGM piston.
4. Choose the channel for MIDI Great 1 (the MIDI with the lowest number) by using the - and + pistons.
5. Push the SET piston.
6. Choose the module voice (patch) for MIDI Great 1 by using the - and + pistons.
7. Push the SET piston. The setting for MIDI Great 1 is programmed now.
8. Switch off the MIDI Great 1 stop.
9. Choose the channel for MIDI Swell 2 (now the MIDI with the lowest number) by using the - and + pistons.
10. Push the SET piston.
11. Choose the module voice (patch) for MIDI Swell 2 by using the - and + pistons.
12. Push the SET piston. The setting for MIDI Swell 2 is programmed now.
13. Switch off the MIDI Swell 2 stop.
14. Choose the channel for MIDI Pedal 3 (now the MIDI with the lowest number) by using the - and + pistons.
15. Push the SET piston.
16. Choose the module voice (patch) for MIDI Pedal 3 by using the - and + pistons.
17. Push the SET piston. The setting for MIDI Pedal 3 is programmed now.
18. Switch off PGM.

External Loudspeaker systems

The organ can be extended with an external loudspeaker system, for example a pipe facade with several speaker boxes behind it. At the back side (or kept internally) are 2 connectors (octal sockets). With a special cable you connect the loudspeaker system to the instrument. In that case there will be a 3-position switch on the instrument too.

The 8 pins of the octal sockets are connected as follows:

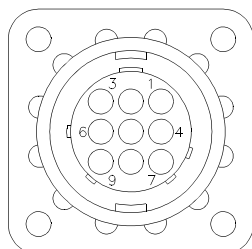

Number	Channel	Organ model
LS1-1 LS1-2	Ground (-) ch. 1 Signal (+) ch. 1	Rembrandt 200, 300, 2000, 3000
LS1-3 LS1-4	Ground (-) ch. 2 Signal (+) ch. 2	Rembrandt 200, 300, 2000, 3000
LS1-5 LS1-6	Ground (-) ch. 3 Signal (+) ch. 3	Rembrandt 200, 300, 2000, 3000
LS1-7 LS1-8	Ground (-) ch. 4 Signal (+) ch. 4	Rembrandt 200, 300, 2000, 3000
LS2-1 LS2-2	Ground (-) ch. 5 Signal (+) ch. 5	Rembrandt 200, 300, 2000, 3000
LS2-3 LS2-4	Ground (-) ch. 6 Signal (+) ch. 6	Rembrandt 2000, 3000
LS2-5 LS2-6	Ground (-) ch. 7 Signal (+) ch. 7	Rembrandt 2000, 3000
LS2-7 LS2-8	Ground (-) ch. 8 Signal (+) ch. 8	Rembrandt 3000

3-position switch

This switch enables you to choose between loudspeakers in the organ and the external loudspeakers.

The switch has the following positions.

Position A

The organ sound comes from the loudspeakers in the organ console and not from the external speakers.

Position AB

The organ sound comes from the loudspeakers in the organ console as well as from the external loudspeakers. However, the sound from the loudspeakers in the organ console is softer than in the A Position.

Position B

The organ sound comes from the external speakers and not from the console speakers.

Maintenance

The console consists of wooden veneer and solid wooden parts.

To clean the cabinet use a normal duster or a light wet cloth or chamois and polish with a dry cloth.

We do not recommend furniture- or teak oil because it may be harmful for the lacquer. Direct sunlight may change the color of the cabinet, especially light oak consoles.

The keys can be treated the same than the woodwork. Little scratches that may originate from playing can be removed with car polish. **NEVER** try to remove spots with aggressive liquors like thinner, acetone etc. These will irrevocably damage the instrument.

Guarantee

With the purchase of your JOHANNUS organ you received a limited warranty card. Please read the conditions carefully and send the bottom part to JOHANNUS orgelbouw b.v. in Ede as soon as possible. Again we want to emphasize that modifications on the organ or incompetent handling will end the warranty.

Appendices

Technical specifications

	Rembrandt 200	Rembrandt 300	Rembrandt 2000	Rembrandt 3000
Voices:				
Romantic	29	37	45	57
Baroque	29	37	45	57
Keyboards (churchorgan touch):				
5 octaves (C-c''''') synthetic	2	3	2	3
5 octaves (C-c''''') wood	option	option	option	option
Amplifiers.channels (100 Watt max. 8Ω each)	5	5	7	8
Acoustics				
Ajustable volume	●	●	●	●
Programs (length)	3	3	3	3
Transposer (+/- 3 half steps, programmable)	●	●	●	●
Pitch (426-454Hz = +/- ¼ tone, programmalbe)	●	●	●	●
Fixed combinations (Presets) PP-P-MF-F-FF-T	●	●	●	●
Free combinations (Capture system)	64	64	64	64
General volume (MIDI controlled, programmable)	●	●	●	●
Expression pedals (MIDI controlled)	2	3	2	3
General Crescendo (20 steps programmalbe)	●	●	●	●
3-position switch for external loudspeakers	option	option	option	option
Toe studs	option	option	option	option
Pedal:				
30 note straight (C-f')	option	option	option	option
30 note concave (C-f')	●	●	●	●
32 note concave (C-g')	option	option	option	option
32 note AGO (C-g')	option	option	option	option
Accessories:				
Couplers	3	6	3	6
Tremulants	2	3	2	2
Chorus	●	●	●	●
MB = Manual Bass	●	●	●	●
CF = Cantus Firmus	●	●	●	●
FA = Fix Accessories	●	●	●	●
RO = Reeds off	●	●	●	●
0 = cancel	●	●	●	●
Temperaments:				
Equal	●	●	●	●
Werckmeister III	●	●	●	●
Meantone	●	●	●	●
External connections:				
MIDI In-Thru-Out	●	●	●	●
Headphone Stereo up to 2kΩ	●	●	●	●
External Reverb 470Ω/300mV	●	●	●	●
Aux In1kΩ/70mV (stereo)	●	●	●	●
Aux Out 470Ω/300mV (stereo)	●	●	●	●
Loudspeaker Outputs 8Ω	option	option	option	option

Technical specifications Cabinet

	Rembrandt 200	Rembrandt 300	Rembrandt 2000	Rembrandt 3000
Furniture:				
Dark Oak or Light Oak	•	•	•	•
Other colors or kinds of wood	option	option	option	option
Solid wooden panels	•	•	•	•
Wooden roll cover	•	•	•	•
Wooden expression pedals	•	•	•	•
Pedal lights	•	•	•	•
Bench with storage space	•	•	•	•
Bench with lid	option	option	option	option
Bench with adjustable height	option	option	option	option
Dimensions:				
Height (without musicrack)	123 cm	123 cm	135 cm	135 cm
Height (with musicrack)	145 cm	145 cm	157 cm	157 cm
Width (30 note concave pedal)	145 cm	145 cm	165 cm	165 cm
Depth (without pedalboard)	75 cm	75 cm	75 cm	75 cm
Depth (with 30 note concave pedal)	91 cm	91 cm	91 cm	91 cm

MIDI Implementation charts

JOHANNUS Organ
REMBRANDT 200

MIDI Implementation Chart

Date: July 1998
Version 1.00

Functions	Transmitted	Recognized	Remarks
Basic Channel Default Changes ¹	1, 2, 3, 12 1, 2, 3	1, 2, 3, 12 N	1 = Great 2 = Swell 3 = Pedal 12 = Stops
Mode Default Messages Altered	Mode 3 N * * * * *	Mode 3 N N	
Note Number True voice	36 - 96 * * * * *	36 - 96 36 - 96	
Velocity Note ON Note OFF	9nH (v=64) 9nH (v=0)	9nH v=1 - 127 9nH v=0, 8nH v=*	*=irrelevant
After Touch Keys Channels	N N	N N	
Pitch Bend	N	N	
Control Change 7 11 100/101/6 100/101/6	Y Y Y Y	Y Y N N	General volume Expression pedals Pitch Transposer
Program Change :True#	0 - 73 ² * * * * *	0 - 73 ² 0 - 73 ²	0 - 7 Stops Pedal 8 - 18 Stops Swell 41 - 50 Stops Great 64 - 73 Accessories
System Exclusive	Y	Y	All stops off
Common :Song Pos :Song Sel :Tune	N N N	N N N	
System Real Time :Clock :Commands	N N	N N	
Aux :Reset All Controller :Local On/OFF :All Notes OFF :Active Sense :Reset	N N N N N	N N Y N N	
Notes	¹ Only note events can be changed ² Except 19-40 and 51-63		

Mode 1: OMNY ON, POLY
Mode 3: OMNY OFF, POLY

Mode 2: OMNY ON, MONO
Mode 4: OMNY OFF, MONO

Y = YES
N = NO

Functions		Transmitted	Recognized	Remarks
Basic Channel	Default Changes ¹	1, 2, 3, 4, 12 1, 2, 3, 4	1, 2, 3, 4, 12 N	1 = Choir 2 = Great 3 = Swell 4 = Pedal 12 = Stops
Mode	Default Messages Altered	Mode 3 N * * * * *	Mode 3 N N	
Note Number	True voice	36 - 96 * * * * *	36 - 96 36 - 96	
Velocity	Note ON Note OFF	9nH (v=64) 9nH (v=0)	9nH v=1 - 127 9nH v=0, 8nH v=*	*=irrelevant
After Touch	Keys Channels	N N	N N	
Pitch Bend		N	N	
Control Change	7 11 100/101/6 100/101/6	Y Y Y Y	Y Y N N	General volume Expression pedals Pitch Transposer
Program Change	:True#	0 - 78 ² * * * * *	0 - 78 ² 0 - 78 ²	0 - 7 Stops Pedal 8 - 18 Stops Swell 32 - 39 Stops Choir 41 - 50 Stops Great 64 - 78 Accessories
System Exclusive		Y	Y	All stops off
Common	:Song Pos :Song Sel :Tune	N N N	N N N	
System Real Time	:Clock :Commands	N N	N N	
Aux	:Reset All Controller :Local On/OFF :All Notes OFF :Active Sense :Reset	N N N N N	N N Y N N	
Notes		¹ Only note events can be changed ² Except 19-31, 40 and 51-63		

Mode 1: OMNY ON, POLY
Mode 3: OMNY OFF, POLY

Mode 2: OMNY ON, MONO
Mode 4: OMNY OFF, MONO

Y = YES
N = NO

Functions		Transmitted	Recognized	Remarks
Basic Channel	Default Changes ¹	1, 2, 3, 4, 12 1, 2, 3	1, 2, 3, 4, 12 N	1 = Great 2 = Swell 3 = Pedal 12 = Stops
Mode	Default Messages Altered	Mode 3 N * * * * *	Mode 3 N N	
Note Number	True voice	36 - 96 * * * * *	36 - 96 36 - 96	
Velocity	Note ON Note OFF	9nH (v=64) 9nH (v=0)	9nH v=1 - 127 9nH v=0, 8nH v=*	*=irrelevant
After Touch	Keys Channels	N N	N N	
Pitch Bend		N	N	
Control Change	7 11 100/101/6 100/101/6	Y Y Y Y	Y Y N N	General volume Expression pedals Pitch Transposer
Program Change	:True#	0 - 73 ² * * * * *	0 - 73 ² 0 - 73 ²	1 - 12 Stops Pedal 15 - 31 Stops Swell 48 - 63 Stops Great 64 - 73 Accessories
System Exclusive		Y	Y	All stops off
Common	:Song Pos :Song Sel :Tune	N N N	N N N	
System Real Time	:Clock :Commands	N N	N N	
Aux	:Reset All Controller :Local On/OFF :All Notes OFF :Active Sense :Reset	N N N N N	N N Y N N	
Notes		¹ Only note events can be changed ² Except 13-14 and 32-47		

Mode 1: OMNY ON, POLY
Mode 3: OMNY OFF, POLY

Mode 2: OMNY ON, MONO
Mode 4: OMNY OFF, MONO

Y = YES
N = NO

Functions	Transmitted	Recognized	Remarks
Basic Channel Default Changes ¹	1, 2, 3, 4, 12 1, 2, 3, 4	1, 2, 3, 4, 12 N	1 = Choir 2 = Great 3 = Swell 4 = Pedal 12 = Stops
Mode Default Messages Altered	Mode 3 N * * * * *	Mode 3 N N	
Note Number True voice	36 - 96 * * * * *	36 - 96 36 - 96	
Velocity Note ON Note OFF	9nH (v=64) 9nH (v=0)	9nH v=1 - 127 9nH v=0, 8nH v=*	*=irrelevant
After Touch Keys Channels	N N	N N	
Pitch Bend	N	N	
Control Change 7 11 100/101/6 100/101/6	Y Y Y Y	Y Y N N	General volume Expression pedals Pitch Transposer
Program Change :True#	0 - 78 ² * * * * *	0 - 78 ² 0 - 78 ²	1 - 12 Stops Pedal 16 - 31 Stops Swell 32 - 43 Stops Choir 47 Stop Swell ³ 49 - 63 Stops Great 64 - 78 Accessories
System Exclusive	Y	Y	All stops off
Common :Song Pos :Song Sel :Tune	N N N	N N N	
System Real Time :Clock :Commands	N N	N N	
Aux :Reset All Controller :Local On/OFF :All Notes OFF :Active Sense :Reset	N N N N N	N N Y N N	
Notes	¹ Only note events can be changed ² Except 13-15, 45-46 and 48 ³ Rohr Flute 8'		

Mode 1: OMNY ON, POLY
Mode 3: OMNY OFF, POLY

Mode 2: OMNY ON, MONO
Mode 4: OMNY OFF, MONO

Y = YES
N = NO

Registration examples

Registration examples Rembrandt 200

		<i>ppp</i>	<i>pp</i>	<i>p</i>	<i>mf</i>	<i>f</i>	<i>ff</i>	<i>t</i>	Solo on Great	Solo on Swell	Trio 1	Trio 2	Romantic	Plenum	
PEDAL															
Diapason	16'	○	○	○	○	○	●	●	○	○	○	○	○	●	
Subbass	16'	●	●	●	●	●	●	●	●	●	●	●	●	●	
Hohlquint	10 ² / ₃ '	○	○	○	○	○	●	●	○	○	○	○	○	○	
Octave	8'	○	○	○	●	●	●	●	○	○	●	●	○	●	
Gedackt	8'	○	○	●	●	●	●	●	●	○	○	●	○	○	
Choralbass	4'	○	○	○	○	○	●	●	○	○	○	○	○	●	
Contra Trumpet	16'	○	○	○	○	○	○	●	○	○	○	○	○	○	
Trumpet	8'	○	○	○	○	○	○	●	○	○	○	○	○	○	
GREAT															
Bourdon	16'	○	○	○	○	●	●	○	○	○	○	○	○	○	
Principal	8'	○	○	○	●	●	●	●	○	○	●	●	○	●	
Stopped Flute	8'	●	●	●	●	●	●	●	●	●	○	○	●	○	
Octave	4'	○	○	○	●	●	●	●	○	○	○	○	○	●	
Open Flute	4'	○	○	○	●	●	●	●	●	●	○	○	○	○	
Twelfth	2 ² / ₃ '	○	○	○	○	●	●	●	○	○	●	○	○	●	
Super Octave	2'	○	○	○	○	○	●	●	○	○	○	●	○	●	
Cornet	IV	○	○	○	○	○	○	○	●	○	○	○	○	○	
Mixture	IV	○	○	○	○	○	●	●	○	○	○	○	○	●	
Trumpet	8'	○	○	○	○	○	○	●	○	○	○	○	○	○	
SWELL															
Open Diapason	8'	○	○	○	●	●	●	●	○	○	○	○	○	●	
Rohrflute	8'	○	●	●	●	●	●	●	●	●	●	●	●	○	
Viola di Gamba	8'	●	●	●	●	●	●	●	●	○	○	○	●	○	
Vox Celeste	8'	○	●	●	○	○	○	○	○	○	○	○	●	○	
Octave	4'	○	○	○	●	●	●	●	○	○	○	○	○	●	
Koppelflute	4'	○	○	○	●	●	●	●	●	●	●	○	○	○	
Flute Twelfth	2 ² / ₃ '	○	○	○	○	○	●	●	○	●	○	○	○	○	
Wald flute	2'	○	○	○	○	●	●	●	○	●	○	●	○	○	
Tierce	1 ³ / ₅ '	○	○	○	○	○	○	○	○	○	●	○	○	○	
Scharff	III	○	○	○	○	○	○	○	●	○	○	○	○	●	
Oboe	8'	○	○	○	○	○	●	●	○	○	○	○	○	○	
ACCESORIES															
Swell - Great		●	●	●	●	●	●	●	●	○	○	○	○	●	
Great - Pedal		●	●	●	●	●	●	●	○	●	●	○	○	●	
Swell - Pedal		●	●	●	●	●	●	●	●	○	○	○	○	●	
Tremulant Great		○	○	○	○	○	○	○	●	○	○	○	○	○	
Tremulant Swell		○	○	○	○	○	○	○	○	●	●	○	○	○	
Chorus		○	○	○	○	○	○	○	○	○	○	○	○	○	

Personal registrations Rembrandt 200

PEDAL

Diapason	16'	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Subbass	16'	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Hohlquint	10 ² / ₃ '	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Octave	8'	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Gedackt	8'	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Octave	4'	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Contra Trumpet	16'	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Trumpet	8'	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>

GREAT

Bourdon	16'	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Principal	8'	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Stopped Flute	8'	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Octave	4'	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Open Flute	4'	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Twelfth	2 ² / ₃ '	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Octave	2'	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Cornet	IV	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Mixture	IV	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Trumpet	8'	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>

SWELL

Open Diapason	8'	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Rohrflute	8'	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Viola di Gamba	8'	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Vox Celeste	8'	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Octave	4'	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Koppelflute	4'	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Flute Twelfth	2 ² / ₃ '	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Waldflute	2'	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Tierce	1 ³ / ₅ '	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Scharff	III	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Oboe	8'	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>

ACCESSORIES

Swell - Great	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Great - Pedal	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Swell - Pedal	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Tremulant Great	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Tremulant Swell	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Chorus	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>

Registration examples Rembrandt 300

		<i>ppp</i>	<i>pp</i>	<i>p</i>	<i>mf</i>	<i>f</i>	<i>ff</i>	<i>t</i>	Solo on Great	Solo on Swell	Trio 1	Trio 2	Romantic	Plenum
PEDAL														
Diapason	16'	○	○	○	○	●	●	●	○	○	○	○	○	●
Subbass	16'	●	●	●	●	●	●	●	●	●	●	○	○	●
Hohlquint	10 ² / ₃ '	○	○	○	○	○	●	●	○	○	○	○	○	○
Octave	8'	○	○	○	●	●	●	●	○	○	●	○	○	●
Gedackt	8'	○	○	●	●	●	●	●	●	○	●	●	○	○
Octave	4'	○	○	○	○	●	●	●	○	○	○	○	○	●
Contra Trumpet	16'	○	○	○	○	○	○	●	○	○	○	○	○	○
Trumpet	8'	○	○	○	○	○	●	●	○	○	○	○	○	○
GREAT														
Bourdon	16'	○	○	○	●	●	●	○	○	○	○	○	○	○
Principal	8'	○	○	○	●	●	●	●	●	○	●	●	○	●
Stopped Flute	8'	●	●	●	●	●	●	●	●	●	○	○	○	○
Octave	4'	○	○	○	●	●	●	●	○	○	○	○	○	●
Open Flute	4'	○	○	●	●	●	●	●	●	○	○	○	●	○
Twelfth	2 ² / ₃ '	○	○	○	○	●	●	●	○	○	●	○	○	●
Octave	2'	○	○	○	○	○	●	●	○	○	○	○	○	●
Cornet	IV	○	○	○	○	○	○	○	○	○	○	○	○	○
Mixture	V	○	○	○	○	○	○	●	○	○	○	○	○	●
Trumpet	8'	○	○	○	○	○	●	●	●	○	○	○	○	○
SWELL														
Open Diapason	8'	○	○	○	●	●	●	●	○	○	○	○	○	●
Rohrflute	8'	○	●	●	●	●	●	●	●	●	●	○	●	○
Viola di Gamba	8'	●	●	●	●	●	●	●	●	○	○	●	●	○
Vox Celeste	8'	○	●	●	○	○	○	○	○	○	○	○	●	○
Octave	4'	○	○	○	●	●	●	●	○	○	○	○	○	●
Koppelflute	4'	○	○	●	●	●	●	●	●	●	●	○	●	○
Flute Twelfth	2 ² / ₃ '	○	○	○	○	●	●	●	○	○	○	○	●	○
Waldflute	2'	○	○	○	○	●	●	●	○	○	○	○	○	○
Nasard	1 ¹ / ₃ '	○	○	○	○	○	○	●	○	○	●	○	○	●
Fagotto	16'	○	○	○	○	○	○	●	○	○	○	○	○	○
Oboe	8'	○	○	○	○	○	●	●	○	●	○	○	○	○
CHOIR														
Hohlfute	8'	●	●	●	●	●	●	●	●	●	○	●	●	○
Rohrflute	4'	○	○	●	●	●	●	●	●	●	●	○	●	○
Nasard	2 ² / ₃ '	○	○	○	○	○	●	●	○	○	○	○	○	○
Fluite	2'	○	○	○	●	●	●	●	○	○	●	○	○	○
Tierce	1 ³ / ₅ '	○	○	○	○	○	○	○	○	○	○	○	○	○
Sifflet	1'	○	○	○	○	○	●	●	○	○	○	○	○	○
Mixture	III	○	○	○	○	○	●	●	○	○	○	○	○	●
Vox Humama	8'	○	○	○	○	○	○	●	○	○	○	○	○	○
ACCESSORIES														
Choir - Great		○	○	●	●	●	●	●	○	●	○	○	●	●
Swell - Great		○	●	●	●	●	●	●	●	○	○	○	●	●
Swell - Choir		○	○	●	●	●	●	●	●	○	○	○	●	●
Choir - Pedal		○	●	●	●	●	●	●	○	○	○	○	●	●
Great - Pedal		○	○	○	●	●	●	●	○	○	○	○	●	●
Swell - Pedal		○	○	●	●	●	●	●	●	●	○	○	●	●
Tremulant Choir		○	○	○	○	○	○	○	○	○	○	○	●	○
Tremulant Great		○	○	○	○	○	○	○	●	○	○	○	●	○
Tremulant Swell	○	○	○	○	○	○	○	○	●	○	○	●	○	○
Chorus		○	○	○	○	○	○	○	○	○	○	○	●	○

Personal registrations Rembrandt 300

PEDAL

Diapason	16'	○	○	○	○	○	○	○	○	○	○	○	○	○
Subbass	16'	○	○	○	○	○	○	○	○	○	○	○	○	○
Hohlquint	10 ² / ₃ '	○	○	○	○	○	○	○	○	○	○	○	○	○
Octave	8'	○	○	○	○	○	○	○	○	○	○	○	○	○
Gedackt	8'	○	○	○	○	○	○	○	○	○	○	○	○	○
Octaaf	4'	○	○	○	○	○	○	○	○	○	○	○	○	○
Contra Trumpet	16'	○	○	○	○	○	○	○	○	○	○	○	○	○
Trumpet	8'	○	○	○	○	○	○	○	○	○	○	○	○	○

GREAT

Bourdon	16'	○	○	○	○	○	○	○	○	○	○	○	○	○
Principal	8'	○	○	○	○	○	○	○	○	○	○	○	○	○
Stopped Flute	8'	○	○	○	○	○	○	○	○	○	○	○	○	○
Octave	4'	○	○	○	○	○	○	○	○	○	○	○	○	○
Open Flute	4'	○	○	○	○	○	○	○	○	○	○	○	○	○
Twelfth	2 ² / ₃ '	○	○	○	○	○	○	○	○	○	○	○	○	○
Octave	2'	○	○	○	○	○	○	○	○	○	○	○	○	○
Cornet	IV	○	○	○	○	○	○	○	○	○	○	○	○	○
Mixture	V	○	○	○	○	○	○	○	○	○	○	○	○	○
Trumpet	8'	○	○	○	○	○	○	○	○	○	○	○	○	○

SWELL

Open Diapason	8'	○	○	○	○	○	○	○	○	○	○	○	○	○
Rohrflute	8'	○	○	○	○	○	○	○	○	○	○	○	○	○
Viola di Gamba	8'	○	○	○	○	○	○	○	○	○	○	○	○	○
Vox Celeste	8'	○	○	○	○	○	○	○	○	○	○	○	○	○
Octave	4'	○	○	○	○	○	○	○	○	○	○	○	○	○
Koppelflute	4'	○	○	○	○	○	○	○	○	○	○	○	○	○
Flute Twelfth	2 ² / ₃ '	○	○	○	○	○	○	○	○	○	○	○	○	○
Waldflute	2'	○	○	○	○	○	○	○	○	○	○	○	○	○
Nasard	1 ¹ / ₃ '	○	○	○	○	○	○	○	○	○	○	○	○	○
Fagotto	16'	○	○	○	○	○	○	○	○	○	○	○	○	○
Oboe	8'	○	○	○	○	○	○	○	○	○	○	○	○	○

CHOIR

Hohlflute	8'	○	○	○	○	○	○	○	○	○	○	○	○	○
Rohrflute	4'	○	○	○	○	○	○	○	○	○	○	○	○	○
Nasard	2 ² / ₃ '	○	○	○	○	○	○	○	○	○	○	○	○	○
Flute	2'	○	○	○	○	○	○	○	○	○	○	○	○	○
Tierce	1 ³ / ₅ '	○	○	○	○	○	○	○	○	○	○	○	○	○
Sifflet	1'	○	○	○	○	○	○	○	○	○	○	○	○	○
Mixture	III	○	○	○	○	○	○	○	○	○	○	○	○	○
Vox Humana	8'	○	○	○	○	○	○	○	○	○	○	○	○	○

ACCESSORIES

Choir - Great	○	○	○	○	○	○	○	○	○	○	○	○	○	○
Swell - Great	○	○	○	○	○	○	○	○	○	○	○	○	○	○
Swell - Choir	○	○	○	○	○	○	○	○	○	○	○	○	○	○
Choir - Pedal	○	○	○	○	○	○	○	○	○	○	○	○	○	○
Great - Pedal	○	○	○	○	○	○	○	○	○	○	○	○	○	○
Swell - Pedal	○	○	○	○	○	○	○	○	○	○	○	○	○	○
Tremulant Choir	○	○	○	○	○	○	○	○	○	○	○	○	○	○
Tremulant Great	○	○	○	○	○	○	○	○	○	○	○	○	○	○
Tremulant Swell	○	○	○	○	○	○	○	○	○	○	○	○	○	○
Chorus	○	○	○	○	○	○	○	○	○	○	○	○	○	○

Registration examples Rembrandt 2000

		<i>ppp</i>	<i>pp</i>	<i>p</i>	<i>mf</i>	<i>f</i>	<i>ff</i>	<i>t</i>	Solo on Great	Solo on Swell	Trio 1	Trio 2	Romantic	Plenum	
PEDAL															
Diapason	16'	○	○	○	○	○	●	●	○	○	○	○	○	○	●
Subbass	16'	●	●	●	●	●	●	●	●	●	●	○	○	○	●
Hohlquint	10 ² / ₃ '	○	○	○	○	○	●	●	○	○	○	○	○	○	○
Octave	8'	○	○	○	●	●	●	●	○	○	○	○	○	○	●
Gedackt	8'	○	●	●	●	●	●	●	●	○	○	○	○	○	○
Choralbass	4'	○	○	○	○	○	○	○	○	○	○	○	○	○	○
Flute	4'	○	○	○	○	○	●	●	○	○	○	○	○	○	○
Rauschpfeife	IV	○	○	○	○	○	○	○	○	○	○	○	○	○	○
Bombarde	32'	○	○	○	○	○	○	○	○	○	○	○	○	○	○
Contra Trumpet	16'	○	○	○	○	○	○	○	○	○	○	○	○	○	○
Trumpet	8'	○	○	○	○	○	○	○	○	○	○	○	○	○	○
Clarion	4'	○	○	○	○	○	○	○	○	○	○	○	○	○	○
GREAT															
Bourdon	16'	○	○	○	○	○	●	●	○	○	○	○	○	○	○
Principal	8'	○	○	○	○	○	●	●	○	○	○	○	○	○	○
Stopped Flute	8'	○	●	●	●	●	●	●	○	○	○	○	○	○	○
Flute Celeste	8'	○	○	○	○	○	○	○	○	○	○	○	○	○	○
Quintadena	8'	○	○	○	○	○	○	○	○	○	○	○	○	○	○
Gamba	8'	○	○	○	○	○	○	○	○	○	○	○	○	○	○
Octave	4'	○	○	○	○	○	○	○	○	○	○	○	○	○	○
Open Flute	4'	○	○	○	○	○	○	○	○	○	○	○	○	○	○
Twelfth	2 ² / ₃ '	○	○	○	○	○	○	○	○	○	○	○	○	○	○
Super Octave	2'	○	○	○	○	○	○	○	○	○	○	○	○	○	○
Blockflute	2'	○	○	○	○	○	○	○	○	○	○	○	○	○	○
Cornet	IV	○	○	○	○	○	○	○	○	○	○	○	○	○	○
Mixture	VII	○	○	○	○	○	○	○	○	○	○	○	○	○	○
Contra Trumpet	16'	○	○	○	○	○	○	○	○	○	○	○	○	○	○
Trumpet	8'	○	○	○	○	○	○	○	○	○	○	○	○	○	○
Vox Humana	8'	○	○	○	○	○	○	○	○	○	○	○	○	○	○
SWELL															
Open Diapason	8'	○	○	○	○	○	○	○	○	○	○	○	○	○	○
Rohrflute	8'	○	○	○	○	○	○	○	○	○	○	○	○	○	○
Viola di Gamba	8'	○	○	○	○	○	○	○	○	○	○	○	○	○	○
Vox Celeste	8'	○	○	○	○	○	○	○	○	○	○	○	○	○	○
Octave	4'	○	○	○	○	○	○	○	○	○	○	○	○	○	○
Koppelflute	4'	○	○	○	○	○	○	○	○	○	○	○	○	○	○
Flute Twelfth	2 ² / ₃ '	○	○	○	○	○	○	○	○	○	○	○	○	○	○
Octave	2'	○	○	○	○	○	○	○	○	○	○	○	○	○	○
Waldflute	2'	○	○	○	○	○	○	○	○	○	○	○	○	○	○
Tierce	1 ³ / ₅ '	○	○	○	○	○	○	○	○	○	○	○	○	○	○
Nasard	1 ¹ / ₃ '	○	○	○	○	○	○	○	○	○	○	○	○	○	○
Octave	1'	○	○	○	○	○	○	○	○	○	○	○	○	○	○
Scharff	III	○	○	○	○	○	○	○	○	○	○	○	○	○	○
Fagotto	16'	○	○	○	○	○	○	○	○	○	○	○	○	○	○
Festival Trumpet 8'	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○
Cromorne	8'	○	○	○	○	○	○	○	○	○	○	○	○	○	○
Oboe	8'	○	○	○	○	○	○	○	○	○	○	○	○	○	○
ACCESSORIES															
Swell - Great		●	●	●	●	●	●	●	●	○	○	○	○	○	○
Great - Pedal		●	●	●	●	●	●	●	○	○	○	○	○	○	○
Swell - Pedal		●	●	●	●	●	●	●	○	○	○	○	○	○	○
Tremulant Great		○	○	○	○	○	○	○	○	○	○	○	○	○	○
Tremulant Swell		○	○	○	○	○	○	○	○	○	○	○	○	○	○
Chorus		○	○	○	○	○	○	○	○	○	○	○	○	○	○

Personal registrations Rembrandt 2000

PEDAL

Diapason	16'	○	○	○	○	○	○	○	○	○	○	○	○	○
Subbass	16'	○	○	○	○	○	○	○	○	○	○	○	○	○
Hohlquint	10 ^{2/3} '	○	○	○	○	○	○	○	○	○	○	○	○	○
Octave	8'	○	○	○	○	○	○	○	○	○	○	○	○	○
Gedackt	8'	○	○	○	○	○	○	○	○	○	○	○	○	○
Choralbass	4'	○	○	○	○	○	○	○	○	○	○	○	○	○
Flute	4'	○	○	○	○	○	○	○	○	○	○	○	○	○
Rauschpfeife	IV	○	○	○	○	○	○	○	○	○	○	○	○	○
Bombarde	32'	○	○	○	○	○	○	○	○	○	○	○	○	○
Contra Trumpet	16'	○	○	○	○	○	○	○	○	○	○	○	○	○
Trumpet	8'	○	○	○	○	○	○	○	○	○	○	○	○	○
Clarion	4'	○	○	○	○	○	○	○	○	○	○	○	○	○

GREAT

Bourdon	16'	○	○	○	○	○	○	○	○	○	○	○	○	○
Principal	8'	○	○	○	○	○	○	○	○	○	○	○	○	○
Stopped Flute	8'	○	○	○	○	○	○	○	○	○	○	○	○	○
Flute Celeste	8'	○	○	○	○	○	○	○	○	○	○	○	○	○
Quintadena	8'	○	○	○	○	○	○	○	○	○	○	○	○	○
Gamba	8'	○	○	○	○	○	○	○	○	○	○	○	○	○
Octave	4'	○	○	○	○	○	○	○	○	○	○	○	○	○
Open Flute	4'	○	○	○	○	○	○	○	○	○	○	○	○	○
Twelfth	2 ^{2/3} '	○	○	○	○	○	○	○	○	○	○	○	○	○
Super Octave	2'	○	○	○	○	○	○	○	○	○	○	○	○	○
Blockflute	2'	○	○	○	○	○	○	○	○	○	○	○	○	○
Cornet	IV	○	○	○	○	○	○	○	○	○	○	○	○	○
Mixture	VII	○	○	○	○	○	○	○	○	○	○	○	○	○
Contra Trumpet	16'	○	○	○	○	○	○	○	○	○	○	○	○	○
Trumpet	8'	○	○	○	○	○	○	○	○	○	○	○	○	○
Vox Humana	8'	○	○	○	○	○	○	○	○	○	○	○	○	○

SWELL

Open Diapason	8'	○	○	○	○	○	○	○	○	○	○	○	○	○
Rohrflute	8'	○	○	○	○	○	○	○	○	○	○	○	○	○
Viola di Gamba	8'	○	○	○	○	○	○	○	○	○	○	○	○	○
Vox Celeste	8'	○	○	○	○	○	○	○	○	○	○	○	○	○
Octave	4'	○	○	○	○	○	○	○	○	○	○	○	○	○
Koppelflute	4'	○	○	○	○	○	○	○	○	○	○	○	○	○
Flute Twelfth	2 ^{2/3} '	○	○	○	○	○	○	○	○	○	○	○	○	○
Octave	2'	○	○	○	○	○	○	○	○	○	○	○	○	○
Waldflute	2'	○	○	○	○	○	○	○	○	○	○	○	○	○
Tierce	1 ^{3/5} '	○	○	○	○	○	○	○	○	○	○	○	○	○
Nasard	1 ^{1/3} '	○	○	○	○	○	○	○	○	○	○	○	○	○
Octave	1'	○	○	○	○	○	○	○	○	○	○	○	○	○
Scharff	III	○	○	○	○	○	○	○	○	○	○	○	○	○
Fagotto	16'	○	○	○	○	○	○	○	○	○	○	○	○	○
Festival Trumpet 8'	○	○	○	○	○	○	○	○	○	○	○	○	○	○
Cromorne	8'	○	○	○	○	○	○	○	○	○	○	○	○	○
Oboe	8'	○	○	○	○	○	○	○	○	○	○	○	○	○

ACCESSORIES

Swell - Great	○	○	○	○	○	○	○	○	○	○	○	○	○	○
Great - Pedal	○	○	○	○	○	○	○	○	○	○	○	○	○	○
Swell - Pedal	○	○	○	○	○	○	○	○	○	○	○	○	○	○
Tremulant Great	○	○	○	○	○	○	○	○	○	○	○	○	○	○
Tremulant Swell	○	○	○	○	○	○	○	○	○	○	○	○	○	○
Chorus	○	○	○	○	○	○	○	○	○	○	○	○	○	○

Registration examples Rembrandt 3000

		<i>ppp</i>	<i>pp</i>	<i>p</i>	<i>mf</i>	<i>f</i>	<i>ff</i>	<i>t</i>	Solo on Great	Solo on Swell	Trio 1	Trio 2	Romantic	Plenum	
PEDAL															
Diapason	16'	○	○	○	○	●	●	●	○	○	○	○	○	○	○
Subbass	16'	●	●	●	●	●	●	●	●	●	●	●	●	●	●
Hohlquint	10 ² / ₃ '	○	○	○	○	○	○	○	○	○	○	○	○	○	○
Octave	8'	○	○	○	○	○	○	○	○	○	○	○	○	○	○
Gedackt	8'	○	○	○	○	○	○	○	○	○	○	○	○	○	○
Octave	4'	○	○	○	○	○	○	○	○	○	○	○	○	○	○
Flute	4'	○	○	○	○	○	○	○	○	○	○	○	○	○	○
Rauschpfeife	IV	○	○	○	○	○	○	○	○	○	○	○	○	○	○
Bombarde	32'	○	○	○	○	○	○	○	○	○	○	○	○	○	○
Contra Trumpet	16'	○	○	○	○	○	○	○	○	○	○	○	○	○	○
Trumpet	8'	○	○	○	○	○	○	○	○	○	○	○	○	○	○
Clarion	4'	○	○	○	○	○	○	○	○	○	○	○	○	○	○
GREAT															
Open Diapason	16'	○	○	○	○	●	●	●	○	○	○	○	○	○	○
Principal	8'	○	○	○	○	●	●	●	●	●	●	●	●	●	●
Stopped Flute	8'	○	○	○	○	○	○	○	○	○	○	○	○	○	○
Flute Celeste	8'	○	○	○	○	○	○	○	○	○	○	○	○	○	○
Quintadena	8'	○	○	○	○	○	○	○	○	○	○	○	○	○	○
Gamba	8'	○	○	○	○	○	○	○	○	○	○	○	○	○	○
Octave	4'	○	○	○	○	○	○	○	○	○	○	○	○	○	○
Open Flute	4'	○	○	○	○	○	○	○	○	○	○	○	○	○	○
Twelfth	2 ² / ₃ '	○	○	○	○	○	○	○	○	○	○	○	○	○	○
Super Octave	2'	○	○	○	○	○	○	○	○	○	○	○	○	○	○
Cornet	IV	○	○	○	○	○	○	○	○	○	○	○	○	○	○
Mixture	VII	○	○	○	○	○	○	○	○	○	○	○	○	○	○
Contra Trumpet	16'	○	○	○	○	○	○	○	○	○	○	○	○	○	○
Trumpet	8'	○	○	○	○	○	○	○	○	○	○	○	○	○	○
Vox Humana	8'	○	○	○	○	○	○	○	○	○	○	○	○	○	○
SWELL															
Bourdon	16'	○	○	○	○	○	○	○	○	○	○	○	○	○	○
Open Diapason	8'	○	○	○	○	○	○	○	○	○	○	○	○	○	○
Rohrflute	8'	○	○	○	○	○	○	○	○	○	○	○	○	○	○
Viola di Gamba	8'	○	○	○	○	○	○	○	○	○	○	○	○	○	○
Vox Celeste	8'	○	○	○	○	○	○	○	○	○	○	○	○	○	○
Octave	4'	○	○	○	○	○	○	○	○	○	○	○	○	○	○
Koppelflute	4'	○	○	○	○	○	○	○	○	○	○	○	○	○	○
Flute Twelfth	2 ² / ₃ '	○	○	○	○	○	○	○	○	○	○	○	○	○	○
Super Octave	2'	○	○	○	○	○	○	○	○	○	○	○	○	○	○
Waldflute	2'	○	○	○	○	○	○	○	○	○	○	○	○	○	○
Tierce	1 ³ / ₅ '	○	○	○	○	○	○	○	○	○	○	○	○	○	○
Nasard	1 ¹ / ₃ '	○	○	○	○	○	○	○	○	○	○	○	○	○	○
Scharff	III	○	○	○	○	○	○	○	○	○	○	○	○	○	○
Fagotto	16'	○	○	○	○	○	○	○	○	○	○	○	○	○	○
Cromorne	8'	○	○	○	○	○	○	○	○	○	○	○	○	○	○
Oboe	8'	○	○	○	○	○	○	○	○	○	○	○	○	○	○
Clarion	4'	○	○	○	○	○	○	○	○	○	○	○	○	○	○
CHOIR															
Quintaton	16'	○	○	○	○	○	○	○	○	○	○	○	○	○	○
Principal	8'	○	○	○	○	○	○	○	○	○	○	○	○	○	○
Bourdon	8'	○	○	○	○	○	○	○	○	○	○	○	○	○	○
Octave	4'	○	○	○	○	○	○	○	○	○	○	○	○	○	○
Rohrflute	4'	○	○	○	○	○	○	○	○	○	○	○	○	○	○
Nasard	2 ² / ₃ '	○	○	○	○	○	○	○	○	○	○	○	○	○	○
Octave	2'	○	○	○	○	○	○	○	○	○	○	○	○	○	○
Flute	2'	○	○	○	○	○	○	○	○	○	○	○	○	○	○
Octave	1'	○	○	○	○	○	○	○	○	○	○	○	○	○	○
Sesquialter	II	○	○	○	○	○	○	○	○	○	○	○	○	○	○
Mixture	IV	○	○	○	○	○	○	○	○	○	○	○	○	○	○
Krummhorn	8'	○	○	○	○	○	○	○	○	○	○	○	○	○	○
Festival Trumpet 8'	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○
ACCESSORIES															
Choir- Great		○	○	○	○	○	○	○	○	○	○	○	○	○	○
Swell - Great		○	○	○	○	○	○	○	○	○	○	○	○	○	○
Swell - Choir		○	○	○	○	○	○	○	○	○	○	○	○	○	○
Choir -Pedal		○	○	○	○	○	○	○	○	○	○	○	○	○	○
Great -Pedal		○	○	○	○	○	○	○	○	○	○	○	○	○	○
Swell - Pedal		○	○	○	○	○	○	○	○	○	○	○	○	○	○
Tremulant Choir		○	○	○	○	○	○	○	○	○	○	○	○	○	○
Tremulant Great		○	○	○	○	○	○	○	○	○	○	○	○	○	○
Tremulant Swell	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○
Chorus		○	○	○	○	○	○	○	○	○	○	○	○	○	○

Personal registrations Rembrandt 3000

PEDAL														
Diapason	16'	○	○	○	○	○	○	○	○	○	○	○	○	○
Subbass	16'	○	○	○	○	○	○	○	○	○	○	○	○	○
Hohlquint	10 ^{2/3} '	○	○	○	○	○	○	○	○	○	○	○	○	○
Octave	8'	○	○	○	○	○	○	○	○	○	○	○	○	○
Gedackt	8'	○	○	○	○	○	○	○	○	○	○	○	○	○
Choralbass	4'	○	○	○	○	○	○	○	○	○	○	○	○	○
Flute	4'	○	○	○	○	○	○	○	○	○	○	○	○	○
Rauschpfeife	IV	○	○	○	○	○	○	○	○	○	○	○	○	○
Bombarde	32'	○	○	○	○	○	○	○	○	○	○	○	○	○
Contra Trumpet	16'	○	○	○	○	○	○	○	○	○	○	○	○	○
Trumpet	8'	○	○	○	○	○	○	○	○	○	○	○	○	○
Clarion	4'	○	○	○	○	○	○	○	○	○	○	○	○	○
GREAT														
Open Diapason	16'	○	○	○	○	○	○	○	○	○	○	○	○	○
Principal	8'	○	○	○	○	○	○	○	○	○	○	○	○	○
Stopped Flute	8'	○	○	○	○	○	○	○	○	○	○	○	○	○
Flute Celeste	8'	○	○	○	○	○	○	○	○	○	○	○	○	○
Quintadena	8'	○	○	○	○	○	○	○	○	○	○	○	○	○
Gamba	8'	○	○	○	○	○	○	○	○	○	○	○	○	○
Octave	4'	○	○	○	○	○	○	○	○	○	○	○	○	○
Open Flute	4'	○	○	○	○	○	○	○	○	○	○	○	○	○
Twelfth	2 ^{2/3} '	○	○	○	○	○	○	○	○	○	○	○	○	○
Super Octave	2'	○	○	○	○	○	○	○	○	○	○	○	○	○
Cornet	IV	○	○	○	○	○	○	○	○	○	○	○	○	○
Mixture	VII	○	○	○	○	○	○	○	○	○	○	○	○	○
Contra Trumpet	16'	○	○	○	○	○	○	○	○	○	○	○	○	○
Trumpet	8'	○	○	○	○	○	○	○	○	○	○	○	○	○
Vox Humana	8'	○	○	○	○	○	○	○	○	○	○	○	○	○
SWELL														
Bourdon	16'	○	○	○	○	○	○	○	○	○	○	○	○	○
Open Diapason	8'	○	○	○	○	○	○	○	○	○	○	○	○	○
Rohrflute	8'	○	○	○	○	○	○	○	○	○	○	○	○	○
Viola di Gamba	8'	○	○	○	○	○	○	○	○	○	○	○	○	○
Vox Celeste	8'	○	○	○	○	○	○	○	○	○	○	○	○	○
Octave	4'	○	○	○	○	○	○	○	○	○	○	○	○	○
Koppelflute	4'	○	○	○	○	○	○	○	○	○	○	○	○	○
Flute Twelfth	2 ^{2/3} '	○	○	○	○	○	○	○	○	○	○	○	○	○
Super Octave	2'	○	○	○	○	○	○	○	○	○	○	○	○	○
Waldfluit	2'	○	○	○	○	○	○	○	○	○	○	○	○	○
Tierce	1 ^{3/5} '	○	○	○	○	○	○	○	○	○	○	○	○	○
Nasard	1 ^{1/3} '	○	○	○	○	○	○	○	○	○	○	○	○	○
Scharff	III	○	○	○	○	○	○	○	○	○	○	○	○	○
Fagotto	16'	○	○	○	○	○	○	○	○	○	○	○	○	○
Cromorne	8'	○	○	○	○	○	○	○	○	○	○	○	○	○
Oboe	8'	○	○	○	○	○	○	○	○	○	○	○	○	○
Clarion	4'	○	○	○	○	○	○	○	○	○	○	○	○	○
CHOIR														
Quintaton	16'	○	○	○	○	○	○	○	○	○	○	○	○	○
Principal	8'	○	○	○	○	○	○	○	○	○	○	○	○	○
Hohlflute	8'	○	○	○	○	○	○	○	○	○	○	○	○	○
Octave	4'	○	○	○	○	○	○	○	○	○	○	○	○	○
Rohrfluit	4'	○	○	○	○	○	○	○	○	○	○	○	○	○
Nasard	2 ^{2/3} '	○	○	○	○	○	○	○	○	○	○	○	○	○
Octave	2'	○	○	○	○	○	○	○	○	○	○	○	○	○
Flute	2'	○	○	○	○	○	○	○	○	○	○	○	○	○
Octave	1'	○	○	○	○	○	○	○	○	○	○	○	○	○
Sesquialter	II	○	○	○	○	○	○	○	○	○	○	○	○	○
Mixture	IV	○	○	○	○	○	○	○	○	○	○	○	○	○
Krummhorn	8'	○	○	○	○	○	○	○	○	○	○	○	○	○
Festival Trumpet 8'	○	○	○	○	○	○	○	○	○	○	○	○	○	○
ACCESSORIES														
Choir - Great		○	○	○	○	○	○	○	○	○	○	○	○	○
Swell - Great		○	○	○	○	○	○	○	○	○	○	○	○	○
Swell - Choir		○	○	○	○	○	○	○	○	○	○	○	○	○
Choir - Pedal		○	○	○	○	○	○	○	○	○	○	○	○	○
Great - Pedal		○	○	○	○	○	○	○	○	○	○	○	○	○
Swell - Pedal		○	○	○	○	○	○	○	○	○	○	○	○	○
Tremulant Choir		○	○	○	○	○	○	○	○	○	○	○	○	○
Tremulant Great		○	○	○	○	○	○	○	○	○	○	○	○	○
Tremulant Swell		○	○	○	○	○	○	○	○	○	○	○	○	○
Chorus		○	○	○	○	○	○	○	○	○	○	○	○	○