

JOHANNUS

Positive

User Manual

250 / 350

Positive

Classic craftsmanship,
contemporary characteristics

Manufacturer	Global Organ Group b.v.
Address	Keplerlaan 2 6716 BS EDE
Country	The Netherlands
Telephone	+31 (0)318 63 74 03
E-mail	inform@johannus.com
Website	www.johannus.com
Version	1.2
Date	July 2020

© 2020 Global Organ Group b.v.

All rights reserved. Nothing in this publication may be reproduced, stored in a data file or made public in any form or in any way either electronically, mechanically by way of photocopying, recording or in any other way without the prior written permission of Global Organ Group b.v.

CONTENTS

1	SAFETY.....	5
1.1	Safety instructions	5
1.2	Symbols on the organ	6
1.3	Symbols in this manual	6
1.4	Transport and storage	7
1.5	Cautions and important notes	8
1.6	Placement	10
1.7	Repairs and data	10
1.8	Additional precautions	11
2	INSTALLATION	12
2.1	Installation and connection	12
2.2	Switch on	13
3	DESCRIPTION OF THE ORGAN.....	14
3.1	Overview of the components	14
3.1.1	Positive 250	14
3.1.2	Positive 350	15
3.2	Overview of controls.....	16
3.2.1	Positive 250	16
3.2.2	Positive 350	17
3.3	Connect and switch on the peripherals.....	18
3.4	External connections	18
4	OPERATION	19
4.1	Volume controls.....	19
4.2	Expression pedals	19
4.3	Cathedral	19
4.4	Adaptive Ambiance System	20
4.5	Intonations.....	20
4.6	Stops	20
4.7	Couplers.....	21
4.8	Accessories	22
4.9	Pre-programmed memory locations	22
4.10	Capture memory.....	23
4.11	Transposer	23
4.12	Crescendo pedal	23
4.13	Quick Access	24
4.13.1	Programming mode crescendo pedal	24
4.13.2	Keyboard assignment Orchestrals.....	24

5	JOHANNUS MENU.....	26
5.1	Adaptive Ambiance System	26
5.2	Crescendo	26
5.3	Datadump	27
5.4	Demo Songs	28
5.5	Expression Pedals	28
5.6	Keyboard Config	29
5.7	Key Volumes	29
5.8	MIDI Config	31
5.9	Orchestrals.....	32
5.10	Reset Procedures.....	32
5.11	Reverb Settings.....	33
5.12	Startup Settings	33
5.13	Temperaments.....	36
5.14	Tracker Action.....	37
5.15	Tuning	37
5.16	Tweeter Settings.....	38
5.17	Version.....	38
6	OPTIONAL VOICE PACKAGES	39
6.1	Characteristics per voice.....	39
6.2	Exclusions.....	45
7	MAINTENANCE, TROUBLESHOOTING AND WARRANTY.....	46
7.1	Maintenance.....	46
7.1.1	Maintenance of the cabinet	46
7.1.2	Maintenance of the manuals	46
7.2	Problems	46
7.3	Warranty.....	46
8	MIDI IMPLEMENTATIONS.....	47
8.1	MIDI Implementation Chart.....	47
8.2	MIDI Specifications	48

1 SAFETY

1.1 Safety instructions



- To reduce the risk of fire or electric shock, do not expose the organ to liquids, rain or moisture.
- Position the organ on a stable, horizontal surface.
- Connect the organ to a grounded power socket.
- Turn off the organ when it is not in use.
- Do not place the organ in a damp area.
- Follow the instructions and precautionary measures in this user manual.
- Keep this user manual with the organ.
- The organ may only be opened by a technician authorized by Global Organ Group B.V. The organ contains static-sensitive components. The warranty is void if the organ is opened by a non-authorized person.

NOTICE

1. Read these instructions.
2. Keep these instructions.
3. Heed all warnings.
4. Follow all instructions.
5. Do not use this apparatus near water.
6. Clean only with a dry cloth.
7. Do not block any of the ventilation openings.

Install in accordance with the manufacturer's instructions.

8. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
9. Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
10. Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
11. Only use attachments/accessories specified by the manufacturer.
12. Unplug this apparatus during lightning storms or when unused for long periods of time.
13. Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.

1.2 Symbols on the organ

 **CAUTION**
RISK OF ELECTRIC SHOCK
DO NOT OPEN 

注意
感電の恐れがあります キャビネットをあけないでください

警告
为了避免触电, 请勿自行拆开机壳, 内部无用户自行维修的机件。请交乐兰公司指定维修点进行维修事宜。

경고 전기쇼크위험 - 열지 마시오.

ATTENTION: RISQUE DE CHOC ELECTRIQUE NE PAS OUVRIR

WARNING: TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, DO NOT EXPOSE THIS APPLIANCE TO RAIN OR MOISTURE.

AVERTISSEMENT: POUR RÉDUIRE LE RISQUE D'INCENDIE OU DE CHOC ÉLECTRIQUE, N'EXPOSEZ PAS CET APPAREIL À LA PLUIE OU À L'HUMIDITÉ.



- Laite on liitettävä suojamaadoituskoskettimilla varus ettuun pistorasiaan.
- Apparatets stikprop skal tilsluttes en stikkontakt med jord, som giver forbindelse til stikproppens jord
- Apparatet må tilkoples jordet stikkontakt.
- Apparaten skall anslutas till jordat uttag.

THIS DEVICE COMPLIES WITH PART 15 OF THE FCC RULES. OPERATION IS SUBJECT TO THE FOLLOWING TWO CONDITIONS: (1) THIS DEVICE MAY NOT CAUSE HARMFUL INTERFERENCE, AND (2) THIS DEVICE MUST ACCEPT ANY INTERFERENCE RECEIVED, INCLUDING INTERFERENCE THAT MAY CAUSE UNDESIRE OPERATION.

CAN ICES-3(B)/NMB-3(B)

仅适用于非热带气候条件下安全使用
仅适用于海拔2000m以下地区安全使用



Warning: The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the product.



The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



Warning for static-sensitive components. To prevent damage to electronic parts from static electricity, be sure to discharge any static electricity from your own body before handling / touching the instrument.

1.3 Symbols in this manual



Caution, Warning or important information



Do not, or forbidden to do



Note

1.4 Transport and storage

Pay attention to the following during transport and storage:

- Remove the music desk and the pedal board from the organ, before transport.
- Store in an area with 40% to 60% relative humidity. Do not store in area's e.g. baths, washrooms, on wet floors, expose to steam or smoke, salt, humid, rain, moisture, dusty or sandy locations.
- Minimum temperature within the storage area: 0°C
- **Do not expose the Organ to direct sunlight (UV)**, do not place it near devices that radiate heat, or otherwise subject to temperature extremes. Also, do not allow lighting devices that normally are used while their light source is very close to the Organ (such as a piano light), or powerful spotlights to shine upon the same area of the Organ for extended periods of time. Excessive heat can deform or discolor the Organ.
- **Do not allow rubber, vinyl or similar materials to remain on this Organ for long periods of time.** Such objects can discolor or otherwise harmfully affect the finish.
- **Do not paste stickers, decals, or the like to this instrument.** Peeling such matter off the instrument may damage and or discolor the exterior finish.
- Do not bend the power cord or place heavy objects on it.
- **Don't allow foreign objects or liquids to enter Organ; Never place containers with liquid on Organ;** Do not put anything that contains water on this Organ. Also, avoid the use of insecticides, perfumes, alcohol, nail polish, spray cans, etc., near the Organ. Swiftly wipe away any liquid that spills on the Organ using a dry, soft cloth. Never use benzene, thinners, alcohol or solvents of any kind, to avoid the possibility of discoloration and/or deformation.
- **Unplug the power cord from the outlet before cleaning.** Before cleaning the Organ, turn it off and unplug the power cord from the outlet. To clean the Organ, use a dry, soft cloth; or one that is slightly dampened. Try to wipe the entire surface using an equal amount of strength, moving the cloth along with the grain of the wood. Rubbing too hard in the same area can damage the finish.
- **Do not open. Do not disassemble or modify by yourself**
- **Avoid climbing on top of the Organ, or placing heavy objects on it, nor on top of the keyboard nor pedal board. This can lead to dangerous situations** - such as tilting / tipping over - shearing / falling off of heavy objects. This can also lead to malfunctions - such as keys ceasing to produce sound.
- **Do not bend, drop, strong shock or vibration.**
- Never strike or apply strong pressure to the display.
- **Cautions when moving this Organ:** Since this product is very heavy, you must make sure that a sufficient number of people are on hand to help, so you can lift and move it safely, without causing strain. Make sure to have a firm grip, to protect yourself from injury and the instrument from damage. If you need to move the instrument, consult with your retailer, or Global Organ Group B.V.



1.5 Cautions and important notes

Indoor use only.

Connect the power cord to an outlet of the correct voltage. The Organ should be connected to a power supply only of the type described as marked under the keyboard deck of Organ.



Make sure that the power cord is grounded. Connect mains plug of this model to a mains socket outlet with a protective earthing connection.



Do not connect or disconnect the power cord with wet hands. Never handle the power cord or its plugs with wet hands when plugging into, or unplugging from, an outlet.



Turn off the Organ if an abnormality or malfunction occurs. Immediately turn the Organ off, remove the power cord from the outlet, and request servicing by your retailer, or Global Organ Group B.V., when:



- The power-supply cord or the plug has been damaged; or
- If smoke or unusual odor occurs; or
- Objects have fallen into, or liquid has been spilled onto the Organ; or
- The Organ has been exposed to rain (or otherwise has become wet); or
- The Organ does not appear to operate normally or exhibits a marked change in performance.

Do not use overseas, foreign countries. Before using the Organ in a foreign country, consult with your retailer, or Global Organ Group B.V.



Presence of children. For their safety, adults should make sure that children under the age of 16 use the instrument properly and that the organ is in a stable position. An adult should always be present to supervise and guide any use by a child. Due to the weight of the instrument, it is recommended that it be securely fixed to the wall or floor by a professional to prevent tipping over. This is despite the fact that all safety precautions have been taken to avoid accidents.



Do not connect this Organ to same electrical outlet that is being used by an electrical appliance that is controlled by an inverter or a motor (such as a refrigerator, washing machine, microwave oven, or air conditioner). Depending on the way in which the electrical appliance is used, power supply noise may cause this Organ to malfunction or may produce audible noise. If it is not practical to use a separate electrical outlet, connect a power supply noise filter between this Organ and the electrical outlet.



Do not share an outlet with an unreasonable number of other devices. Do not force the Organ's power-supply cord to share an outlet with an unreasonable number of other devices. Be especially careful when using extension cords—the total power used by all devices you have connected to the extension cord's outlet must never exceed the power rating (watts/amperes) for the extension cord. Excessive loads can cause the insulation on the cord to heat up and eventually melt through - therefore always completely unwind an extension cord.



To prevent malfunction and equipment failure, always make sure to turn off the power on all your equipment before you make any connections.



Although the LCD and LEDs are switched off when the Organ is turned off, this does not mean that the Organ has been completely disconnected from the source of power. If you need to turn off the power completely, first turn off the Organ's switch, then unplug the power cord from the power outlet. For this reason, the outlet into which you choose to connect the power cord's plug should be one that is within easy reach and readily accessible.



If there is a possibility of lightning strike, disconnect the power cord from the outlet. Whenever you suspect the possibility of lightning in your area, pull the plug on the power cord out of the outlet.



Periodically clean the power cord's plug. At regular intervals, you should unplug the power plug and clean it by using a dry cloth to wipe all dust and other accumulations away from its prongs. Also, disconnect the power plug from the power outlet whenever the Organ is to remain unused for an extended period of time. Any accumulation of dust between the power plug and the power outlet can result in poor insulation and lead to fire.



The settings you were editing will be lost when the Organ is turned off. If you want to keep your settings, you must save your settings before turning the Organ off.



Place in a well ventilated location. The Organ should be located so that its location or position does not interfere with its proper ventilation.



Manage cables for safety. Try to prevent cords and cables from becoming entangled. Also, all cords and cables should be placed so they are out of the reach of children.



Grasp the plug when connecting or disconnecting the power cord. Always grasp only the plug on the power-supply cord when plugging into, or unplugging from, an outlet.



Precautions concerning use of bench. When using the bench, please observe the following points:

- Do not allow two or more persons to sit on the bench.
- Do not adjust the height while sitting on the bench.



Do not remove the speaker grille and speaker. Do not remove the speaker grille and speaker by any means. Speaker not user replaceable. Shock hazardous voltages and currents are present inside the enclosure.



Disconnecting power from AC mains. To completely disconnect this apparatus from the AC mains, disconnect the power supply cord plug from the AC receptacle.



The power supply cord and/or main power switch must be accessible. The mains plug of the power supply cord shall remain readily accessible. Or, the power switch must be accessible. The main power switch is the main power disconnect device for this Organ. Therefore, the power switch shall be readily accessible.



Do not use internal connections. Do not connect, do not use internal connections for optional external speakers by yourself. Refer all servicing to your retailer, or Global Organ Group B.V.



1.6 Placement

- Using the Organ near power amplifiers (or other equipment containing large power transformers) may induce hum. To alleviate the problem, change the orientation of this Organ; or move it farther away from the source of interference.
- This device may interfere with radio and television reception. Do not use this device in the vicinity of such receivers.
- Noise may be produced if wireless communications devices, such as cell phones, are operated in the vicinity of this Organ. Such noise could occur when receiving or initiating a call, or while conversing. Should you experience such problems, you should relocate such wireless devices so they are at a greater distance from this Organ, or switch them off.
- **Do not expose the Organ to direct sunlight**, place it near devices that radiate heat, or otherwise subject it to temperature extremes. Also, do not allow lighting devices that normally are used while their light source is very close to the Organ (such as a piano light), or powerful spotlights to shine upon the same area of the Organ for extended periods of time. Excessive heat can deform or discolor the Organ.
- **Do not allow rubber, vinyl, or similar materials to remain on this Organ for long periods of time.** Such objects can discolor or otherwise harmfully affect the finish.
- **Do not allow objects to remain on top of the keyboard or pedal board.** This can be the cause of malfunction, such as keys ceasing to produce sound.
- **Do not paste stickers, decals, or the like to this instrument.** Peeling such matter off the instrument may damage the exterior finish.
- **Do not put anything that contains water on this Organ.** Also, avoid the use of insecticides, perfumes, alcohol, nail polish, spray cans, etc., near the Organ. Swiftly wipe away any liquid that spills on the Organ using a dry, soft cloth.
- Due to the weight of the instrument, it is recommended to attach the instrument securely to the wall or floor by a professional, to avoid tipping. This, although all safety measures have been taken to avoid any accident.







1.7 Repairs and data

Please be aware that all data contained in the Organ's memory may be lost when the Organ is sent for repairs. Important data should always be stored, written down on paper (when possible).



During repairs, due care is taken to avoid the loss of data. However, in certain cases (such as when circuitry related to memory itself is out of order), we regret that it may not be possible to restore the data, and Global Organ Group B.V. assumes no liability concerning such loss of data. Refer all servicing to your retailer, or Global Organ Group B.V.

1.8 Additional precautions

- Please be aware that the contents of memory can be irretrievably lost as a result of a malfunction, or the improper operation of the Organ. To protect yourself against the risk of losing important data, we recommend that you periodically write down important setting data (when possible). 
- Unfortunately, it may be impossible to restore the contents of data that was stored in the Organ's memory once it has been lost. Global Organ Group B.V. assumes no liability concerning such loss of data. 
- Use a reasonable amount of care when using the Organ's buttons, sliders, or other controls; and when using its jacks and connectors. Rough handling can lead to malfunctions. 
- Never strike or apply strong pressure to the display.
- A small amount of heat will radiate from the Organ during normal operation.
- To prevent possible hearing damage, do not listen at high volume levels for long periods. This Organ, either alone or in combination with an amplifier and headphones or speakers, may be capable of producing sound levels that could cause permanent hearing loss. Do not operate for a long period of time at a high volume level, or at a level that is uncomfortable. If you experience any hearing loss or ringing in the ears, you should immediately stop using the Organ, and consult an audiologist. 
- To avoid disturbing others nearby, try to keep the Organ's volume at reasonable levels. You may prefer to use headphones, so you do not need to be concerned about those around you.
- When you need to transport the Organ, pack it in shock-absorbent material. Transporting the Organ without doing so can cause it to become scratched or damaged, and could lead to malfunction.
- Do not apply undue force to the music stand while it is in use.
- Some connection cables contain resistors. Do not use cables that incorporate resistors for connecting to this Organ. The use of such cables can cause the sound level to be extremely low, or impossible to hear. For information on cable specifications, contact the manufacturer of the cable.
- Due to the structural design of this instrument, small pets or other animals could end up getting trapped inside it. If such a situation is encountered, you must immediately turn off the Organ and disconnect the power cord from the outlet. You should then consult with the retailer from whom the instrument was purchased, or contact Global Organ Group B.V.
- The explanations in this manual include illustrations that depict what should typically be shown by the display.

Note, however, that your Organ may incorporate a newer, enhanced version of the system (e.g., includes newer sounds), so what you actually see in the display may not always match what appears in the manual.

2 INSTALLATION

2.1 Installation and connection




1. Position the organ on a stable, horizontal surface.
2. Lean the organ slightly backward.
3. Slide the pedal board (C) against the organ.
4. Set the organ upright.
5. Place the organ bench (B) over the pedal board.
6. Make sure the voltage of the organ matches the voltage of the main. See the serial plate (A).
7. Connect the organ to a grounded power socket.

2.2 Switch on

Switch on the organ with the on/off piston at the right, next to the manuals. Wait several seconds. Starting the control functions and the settings will take some time.


The lights of the 0 piston and the as standard set functions lit up. The settings appear on the display.

Romantic in Bovenkerk Kampen	
Mem : 1	
Trans : 0/440	
Temp : Equal	
Amb : Center	
Cresc : Off	
	Sw

3 DESCRIPTION OF THE ORGAN


3.1 Overview of the components

3.1.1 Positive 250

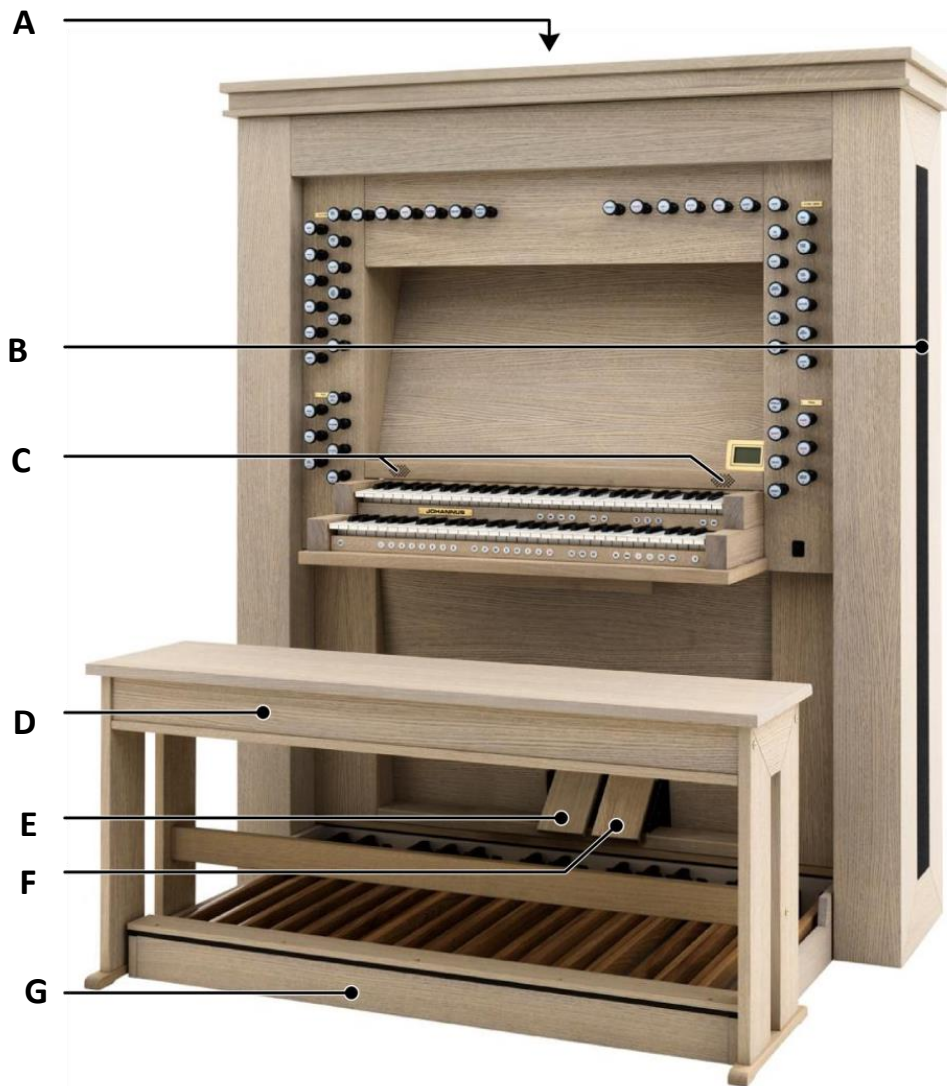

- A Loudspeakers
- B Surround loudspeakers
- C Tweeters
- D Organ bench
- E Swell pedal
- F Crescendo pedal
- G Pedal board


3.1.2 Positive 350

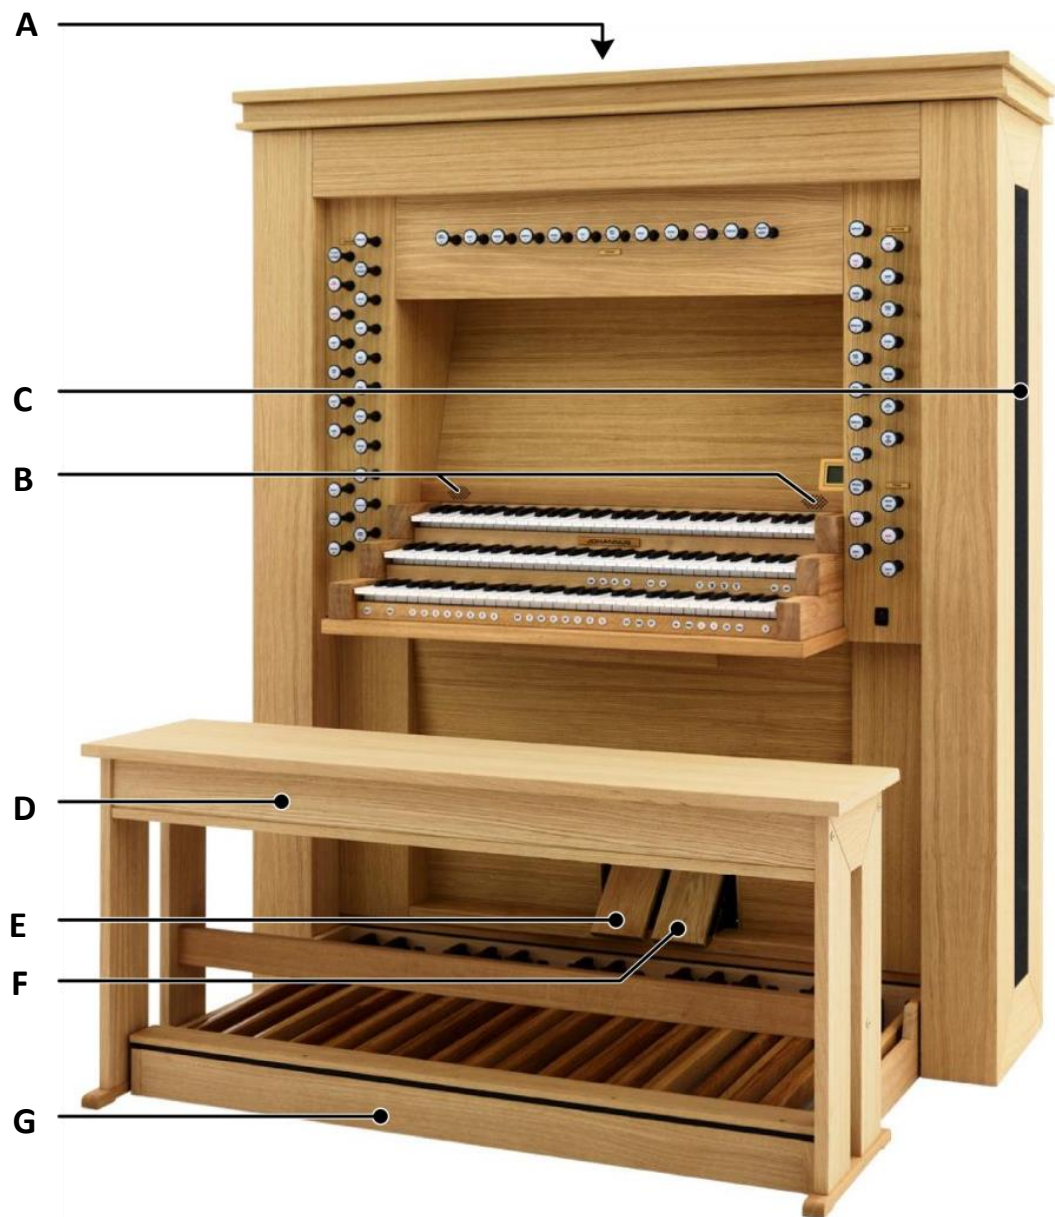

- A** Loudspeakers
- B** Surround loudspeakers
- C** Tweeters
- D** Organ bench
- E** Swell pedal
- F** Crescendo pedal
- G** Pedal board


3.2 Overview of controls

3.2.1 Positive 250

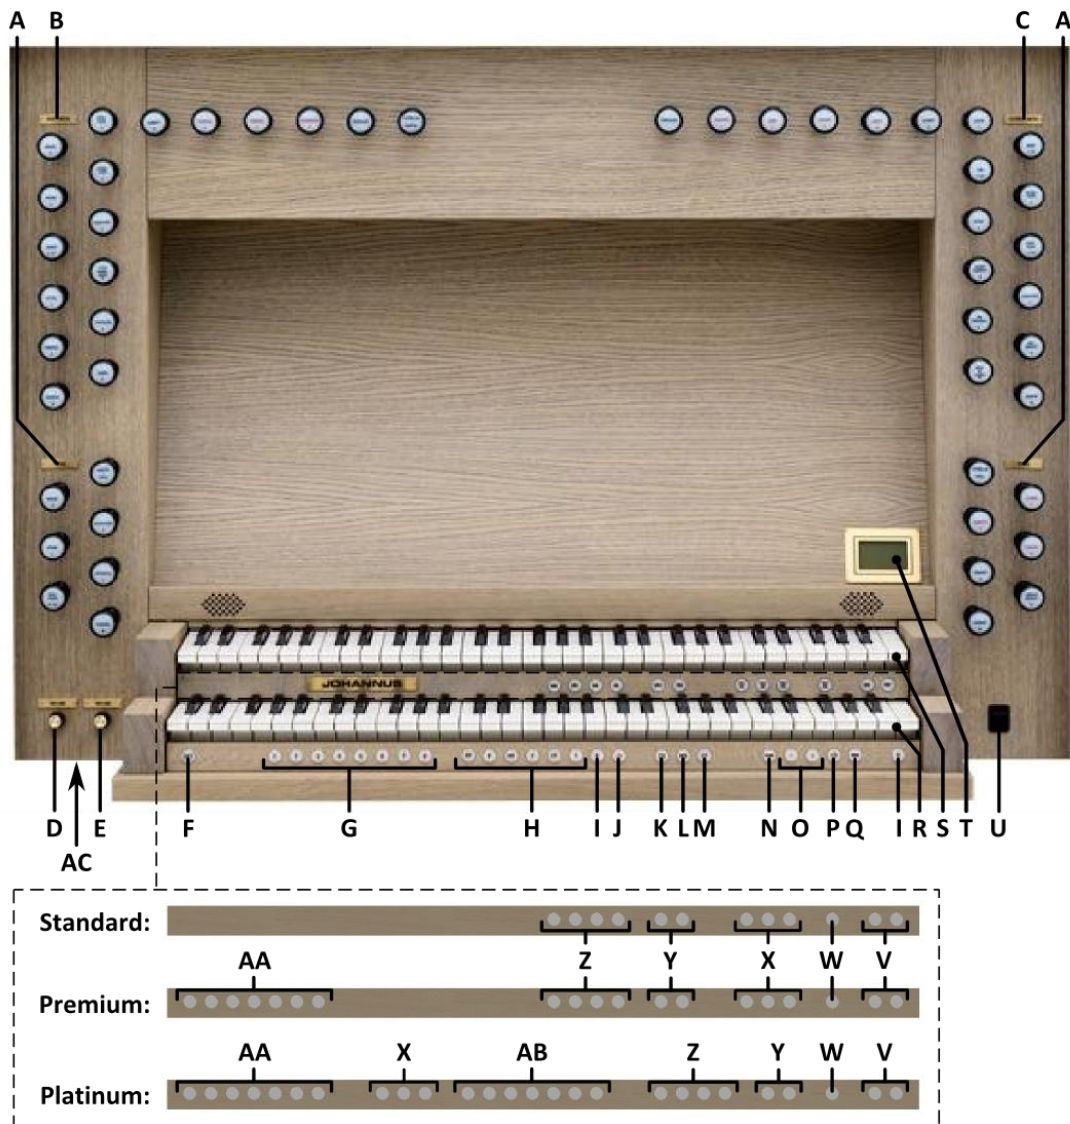

- | | |
|--|-----------------------------------|
| A Pedal stops | P CR: Crescendo |
| B Great stops | Q MENU |
| C Swell stops | R Manual Great |
| D Volume control organ | S Manual Swell |
| E Volume control Cathedral | T Display |
| F SET / ENTER | U On/Off piston |
| G Capture memory locations | V SEQ- and SEQ+ pistons |
| H Pre-programmed memory locations | W S/S: All Swells to Swell |
| I 0: Recall / Reset | X MIDI stops |
| J RO: Reeds Off | Y Intonation variations |
| K CH: Chorus | Z Intonation styles |
| L MB: Manual Bass | AA Orchestral solo voices |
| M CF: Cantus Firmus | AB Orchestral voices |
| N TRANS.: Transposer | AC Headphones |
| O - and + pistons | |

3.2.2 Positive 350

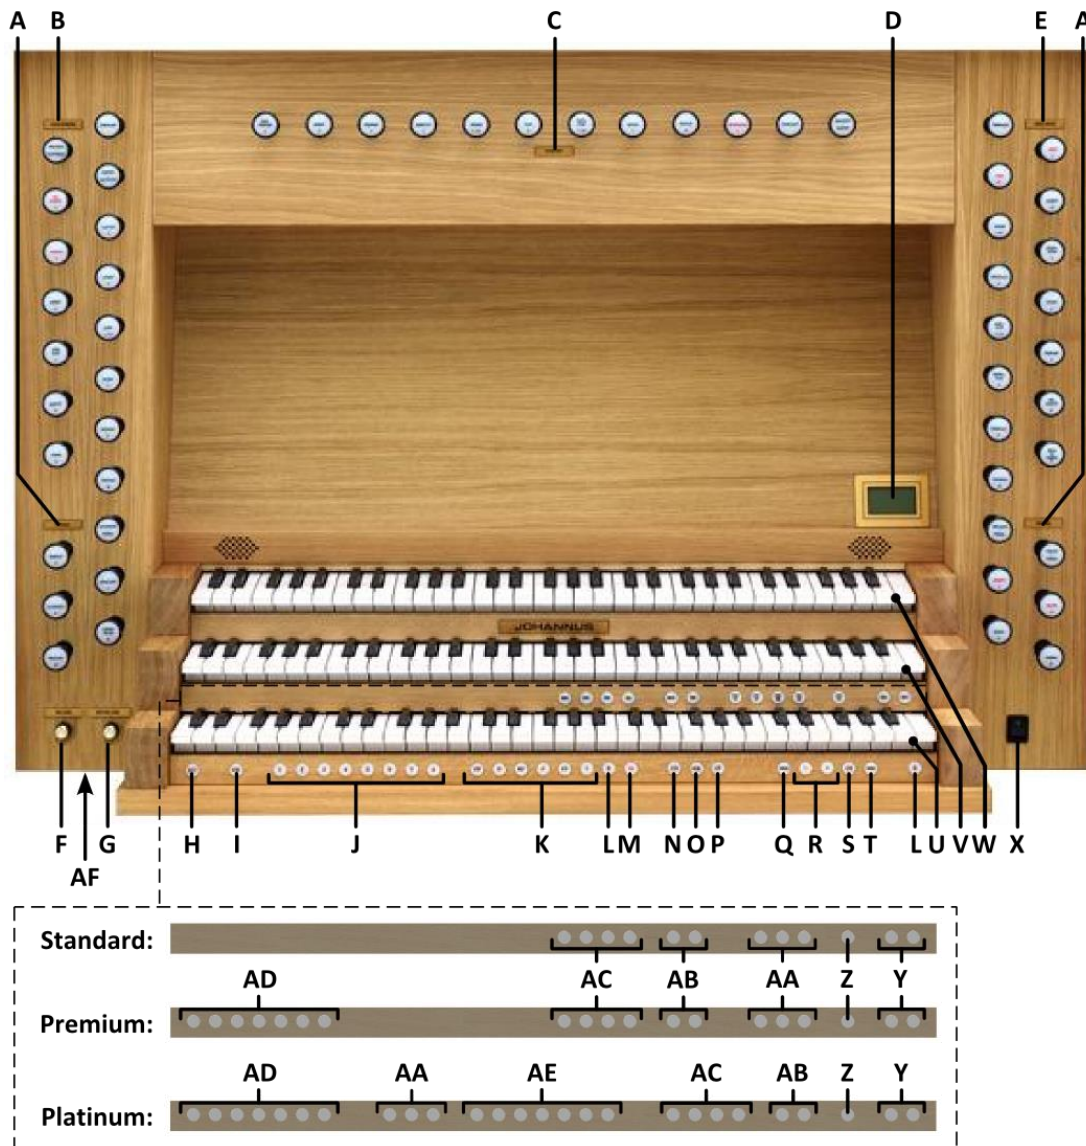

- | | |
|--|-----------------------------------|
| A Pedal stops | Q TRANS.: Transposer |
| B Great stops | R - and + pistons |
| C Choir stops | S CR: Crescendo |
| D Display | T MENU |
| E Swell stops | U Manual Choir |
| F Volume control Organ | V Manual Great |
| G Volume control Cathedral | W Manual Swell |
| H SET / ENTER | X On/Off piston |
| I KT: Keyboard Transfer | Y SEQ- and SEQ+ pistons |
| J Capture memory locations | Z S/S: All Swells to Swell |
| K Pre-programmed memory locations | AA MIDI stops |
| L O: Recall / Reset | AB Intonation variations |
| M RO: Reeds Off | AC Intonation styles |
| N CH: Chorus | AD Orchestral solo voices |
| O MB: Manual Bass | AE Orchestral voices |
| P CF: Cantus Firmus | AF Headphones |

3.3 Connect and switch on the peripherals

You can connect peripherals (for example, a MIDI device) to the organ.




Follow the instructions provided in the documentation for the peripheral.

1. Switch off the organ and the peripheral.
2. Connect the peripheral to the organ.
3. Switch on the peripheral.
4. Switch on the organ.

3.4 External connections

The external connections are on the left backside of the organ.

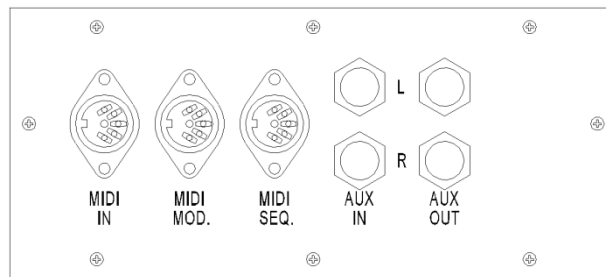

MIDI IN: An input for receiving MIDI codes from other devices.

MIDI MOD: A programmable MIDI output for connecting a sound module or expander, for example.

MIDI SEQ: A non-programmable MIDI output for connecting a sequencer or PC (with the optional Johannus Intonat program), for example.

AUX IN: A stereo audio input for playing the sound of an external device through the amplifiers of the organ. For example, an expander connected to the organ through the MIDI MOD can be played through the instrument's loudspeakers.

AUX OUT: A stereo audio output for connecting an external device (amplifier or recording device, for example).

PHONES: This connection for a (stereo) headphone is suited for a headphone with an impedance of 30 Ω or more (see headphone specifications). Location of the connection: see 'Overview of controls', point AC (*Positive 250*) or AF (*Positive 350*).



When the headphone is used, the loudspeakers of the organ are switched off automatically.

4 OPERATION

4.1 Volume controls

Organ: You can adjust the volume of the organ with the ORGAN volume control.

Cathedral: The reverb volume can be adjusted smoothly with the CATHEDRAL volume control.

4.2 Expression pedals

In the standard version the organ has two expression pedals. One is configured as a swell pedal for the Swell, and one is configured as a crescendo pedal. With use of the Johannus Menu, the function of the expression pedals can be changed, see § 5.5 Expression Pedals.

Using an expression pedal which is set as a swell pedal will next to the volume also changes the timbre of the stops. By this the effect of the swell box shutters of a pipe organ is simulated.

Extra expression pedal (optional)

If the organ has the optional Luxury Package an extra expression pedal is available. This expression pedal standard is configured as swell pedal for the Choir, Great and Pedal. This function can be changed using the Johannus Menu, see § 5.5 Expression Pedals.

4.3 Cathedral

The organ is equipped with the LIVEverb system. This system produces a natural reverb using recordings of the acoustics of existing churches and concert halls.

Turn the volume control CATHEDRAL to adjust the reverb volume.

In the LIVEverb system 12 different churches and concert halls are available which can be chosen using the Johannus Menu, see § 5.11 Reverb Settings.

In order of length these churches and concert halls are:

- St. Salviuskerk, Limbricht 2,5s
- Zuidervermaning, Westzaan 2,5s
- Frogner Kirke, Oslo 3,5s
- Feike Asmazaal, Johannus Ede 3,5s
- Plantagekerk, Zwolle 4,5s
- St. Jozef, Utrecht 4,5s
- Oude Kerk, Ede 5s
- Oude Kerk, Amsterdam 5,5s
- St. Peter, Bonn-Vilich 6s
- Kruisverheffingskerk, Raalte 6,5s
- Bovenkerk, Kampen 7s

4.4 Adaptive Ambiance System

Adaptive Ambiance System is a function which works with LIVEverb to position the organ sound in the church. It lets you choose where to sit in the church to enjoy the sound of the organ.

There is choice out of four locations:

- Location Organ Console: you are sitting at the console of the organ
- Location Front: you are sitting in front of the church
- Location Centre: you are sitting in the middle of the church
- Location Rear: you are sitting at the back of the church

Volume control Cathedral is besides adjusting the volume of the reverb also used to adjust the balance between the organ sound and the ambiance.

Adaptive Ambiance System can be configured using the Johannus Menu. See § 5.1 Adaptive Ambiance System.

4.5 Intonations

The organ has 12 intonations, divided in four styles: Romantic (ROM), Symphonic (SYM), Baroque (BAR) and Historic (HIS) and three variation per style: Standard, Solo (SOLO) and Trio (TRIO).

Select an intonation style by pressing the ROM, SYM, BAR or HIS piston. Select an intonation variation by pressing the SOLO or TRIO piston. If no variation piston is selected, Standard is selected automatically.

4.6 Stops

The stops are activated via stop switches, pre-programmed memory locations, capture memory locations of the crescendo pedal.

The lamp in the stop switch lights when the associated stop is active.

The stops are divided into the following groups:

- Pedal:** Activates the stops associated with the Pedal.
- Choir:** Activates the stops associated with the Choir (*Positive 350 only*).
- Great:** Activates the stops associated with the Great.
- Swell:** Activates the stops associated with the Swell.

Solo- and orchestral voices (*optional*)

If the organ is equipped with the optional Premium or Platinum Voice Package a number of solo- and orchestral voices are available.

These solo- and orchestral voices are activated by thumb pistons on the piston rail between the manuals. The lamp in the thumb piston lights when the associated voice is active.

See chapter 6 OPTIONAL VOICE PACKAGES for more information on solo- and orchestral voices.

Solo- and orchestral voices are standard playable from a factory defined manual. This can be changed via Quick Access, see § 4.13.2 Keyboard assignment Orchestrals, and via the Johannus Menu, see § 5.9 Orchestrals.

4.7 Couplers

Manual couplers:

CHOIR - GREAT (*Positive 350 only*):

Fully couples all keys of the Choir to the Great.

SWELL - GREAT:

Fully couples all keys of the Swell to the Great.

SWELL - CHOIR (*Positive 350 only*):

Fully couples all keys of the Swell to the Choir.

Pedal couplers:

CHOIR - PEDAL (*Positive 350 only*):

Fully couples all keys of the Choir to the Pedal.

GREAT - PEDAL:

Fully couples all keys of the Great to the Pedal.

SWELL - PEDAL:

Fully couples all keys of the Swell to the Pedal.

Manual Bass (MB):

Couples the Pedal monophonic to the Great. Only the lowest key that is played on the Great is coupled from the Pedal to the Great.

If only the lowest key of a chord is released, the pedal key activated by the Manual Bass function is dropped until a new lowest key is played.

Activate the Manual Bass with the MB piston.



It is advisable not to use the Manual Bass while playing the pedal board to avoid double bass tones.

Cantus Firmus (CF):

Cantus firmus: Latin for 'fixed voice' or in organs 'solo voice' or 'melody coupler'.

Couples the Swell monophonic to the Great. Only the highest key that is played on the Great is coupled from the Swell to the Great.

With use of a solo registration on the Swell in this way a solo is heard while playing only on the Great.

If only the highest key of a chord is released, the key activated by the Cantus Firmus function is dropped until a new highest key is played.

Activate the Cantus Firmus with the CF piston.



It is advisable not to use the Cantus Firmus in combination with the coupler SWELL - GREAT because this overrules the solo function of the Cantus Firmus.

4.8 Accessories

Keyboard Transfer (KT) *(Positive 350 only):*

Keyboard Transfer is a function to switch the manuals of the Choir and the Great. When Keyboard Transfer is active manual 1 is the Great manual and manual 2 is the Choir manual. Activate the Keyboard Transfer with the KT piston.

Chorus (CH):

Chorus is a function for lightly detuning the organ stops to give it a broader and livelier sound. Activate the Chorus with the CH piston.

Reeds Off (RO):

Reeds Off is a function to switch off all reed stops simultaneously. As long as this piston is pressed, no reed stops can be activated. When this function is switched off, the reed stops that were on are activated again. Activate the Reeds Off with the RO piston.

Recall / Reset function (0):

The 0 piston cancels stops in two ways:

1. A short press on the 0 piston: Only the last change is cancelled.
2. A long press on the 0 piston: All stops are cancelled.

Sequence - and +

Sequence is a function for sequential selecting capture memory locations.

1. Select a capture memory location to start (for example level 2, location 2).
2. Use the SEQ- or SEQ+ pistons to select the previous or next capture memory location.

4.9 Pre-programmed memory locations

Pre-programmed memory locations are available by operating pistons PP to T. These six memory locations have factory settings (presets) appropriate for the quiet pianissimo to the loud tutti.

Calling up a pre-programmed memory location:

Press a pre-programmed memory location (PP-T). The active stops light up.

Programming a pre-programmed memory location:



The current setting of the pre-programmed memory location will be lost.



Although it is possible to store any registration under a piston of a pre-programmed memory location it is advisable to select a registration matching the text of the piston.

1. Select the desired stops.
2. Press the SET piston. Hold in the piston.
3. Press the desired pre-programmed memory location (PP-T).

4. Release the SET piston.

4.10 Capture memory

Through use of the capture memory, a registration can be activated with just one piston. The capture memory consists of 75 levels.

These levels can be seen on the display (Mem: ...). Each level has eight memory locations (pistons 1-8). The 600 capture memory locations are not pre-programmed and can be programmed by the musician.

Romantic in Bovenkerk Kampen	
Mem : 1	 Sw
Trans : 0/440	
Temp : Equal	
Amb : Center	
Cresc : Off	

Programming a capture memory location:



The current setting of the capture memory location will be lost.

1. Select the desired stops.
2. Use the - and + pistons to select a level (1-75) on the display.
3. Press the SET piston. Hold in the piston.
4. Press the desired memory location (1-8).
5. Release the SET piston.

Calling up a capture memory location:

1. Use the - and + pistons to select the desired level (1-75) on the display.
2. Press the desired memory location (1-8). The active stops light up.



Through use of the SEQ- and SEQ+ pistons previous or next memory locations can be selected in steps of one. The lighted memory location piston and the memory level shown in the display indicate the selected location.

4.11 Transposer

The Transposer function shifts the pitch by half-tone increments (from -8 to +8). The transposer setting can be read on the display (Trans: ...).

1. Press the TRANS piston.
2. Use the - and + pistons to set the pitch.
3. When the transposer change needs to be saved, press the SET piston in the time the TRANS. piston is lit.

Romantic in Bovenkerk Kampen	
Mem : 1	 Sw
Trans : 0/440	
Temp : Equal	
Amb : Center	
Cresc : Off	


4.12 Crescendo pedal

The crescendo pedal can be used to activate 20 registrations step-by-step. These registrations start with very quiet (pianissimo) to very loud (tutti).

The default registrations of the 20 steps can be changed. See § 5.2 Crescendo.

Activating the crescendo pedal

If the crescendo pedal is not activated it is indicated on the displays with `Cresc:Off`.

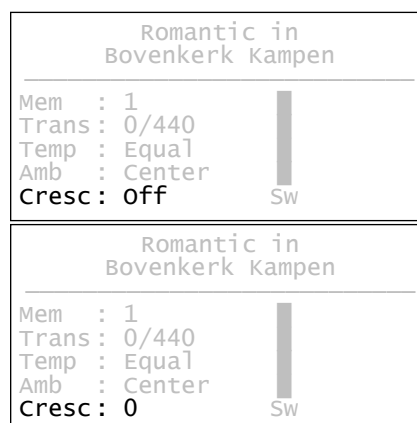

Use the CR piston to activate the crescendo pedal. The display indicates the actual step.

Crescendo pedal as additional swell pedal

The crescendo pedal can also be configured as a swell pedal. See § 5.5 Expression Pedals.

If the crescendo pedal is set as additional swell pedal, all functions of the original crescendo pedal are deactivated.

4.13 Quick Access

Quick Access is a function to quickly access certain function of the organ.

4.13.1 Programming mode crescendo pedal



This function is not available if no expression pedal is set as crescendo pedal.

Pressing the SET and CR piston simultaneously enters the programming mode of the crescendo pedal. See § 5.2 Crescendo, sub 4 for next steps.

4.13.2 Keyboard assignment Orchestral



This function is only available if the organ is equipped with the optional Premium or Platinum Voice Package.

Through use of Quick Access it is possible to assign a solo- or orchestral voice directly to a manual or the pedal.

Press the SET piston simultaneously with a piston of a solo- or orchestral voice, for example Panflute. The actual assignment appears on the display.

Press a key of the manual or the pedal on which the solo- or orchestral voice has to be assigned or press the SET- or MENU-piston to cancel.

Panflute
Assigned to: Great

Select keyboard or
Use SET or MENU

5 JOHANNUS MENU

In the Johannus Menu several functions of the organ can be set. Press the MENU piston to activate the Johannus Menu on the display. Navigating the menu is done with the - and + pistons. Confirmation of a choice is done with the SET piston. Cancel or step back in the menu is done with the MENU piston.

The Johannus Menu consists of the following functions:

Function	More information
Ambiance	§ 5.1
Crescendo	§ 5.2
Datadump	§ 5.3
Demo Songs	§ 5.4
Expression Pedals	§ 5.5
Keyboard Config	§ 5.6
Key Volumes	§ 5.7
MIDI Config	§ 5.8
Orchestra	§ 5.9
Reset Procedures	§ 5.10
Reverb Settings	§ 5.11
Startup Settings	§ 5.12
Temperaments	§ 5.13
Tracker action	§ 5.14
Tuning	§ 5.15
Tweeter settings	§ 5.16
Version	§ 5.17

5.1 Adaptive Ambiance System

Adaptive Ambiance System is a function which works with LIVEverb to position the organ sound in the church. There is choice out of four locations: at the console of the organ, in the front, in the center or in the rear of the church.

1. Press the MENU-piston.
2. Use the - and + pistons to select the *Ambiance* function on the display.
3. Press the SET-piston. The four possible locations appear on the display. The actual location is indicated by an pointer.
4. Use the - and + pistons to select the desired location.
5. Press the SET-piston to confirm.
6. Press the MENU-piston to exit the Johannus Menu.

5.2 Crescendo

The crescendo pedal contains 20 pre-programmed registrations. These registrations start with very quiet (pianissimo) to very loud (tutti). These pre-programmed registrations can be changed.



Step 0 of the crescendo pedal cannot be changed.

-
1. Press the MENU-piston.
 2. Use the - and + pistons to select the `Crescendo` function on the display.
 3. Press the SET piston. The first step of the crescendo pedal appears on the display.
 4. Use the - and + pistons to select the step which has to be changed.
 5. Change the registration and press the SET piston to save the new registration in the memory of the organ.
 6. Repeat steps 5 and 4 if more crescendo pedal steps has to be changed.
 7. Press the MENU piston 2x to exit the Johannes Menu.

5.3 Datadump

The Datadump function sends several settings from the organ to a storage medium (the Johannes Sequencer+, for example) through the MIDI SEQ output. See § 3.4 External connections.

The settings to sent are: the content of all capture memory locations and all settings which can be set via the Johannes Menu, except Key Volumes. Key Volume settings are a part of the intonation data. These data can be received with the optional Johannes Intonat software.

a. Sending data from the organ

1. Press the MENU-piston.
2. Use the - and + pistons to select the `Datadump` function on the display.
3. Press the SET piston. The `Press SET to send data` text appears on the display.
4. Make sure the desired storage medium, the Johannes Sequencer+ for example, is properly connected.
5. Press the SET piston. When data is being sent, `Sending data` appears on the display. Sending data will take some time.

Do not use the organ when the `Sending data` text is on the display.

6. If the data dump is complete, the main menu appears on the display.
7. Press the MENU piston to exit the Johannes Menu.

b. Uploading data to the organ

Receiving a data file has no relation to the Johannes Menu and can be done on every moment the organ is switched on, except when playing a Demo Song.

Make sure to upload only data files which are recorded from the instrument concerned. Uploading a data file from another instrument may jeopardize the functioning of your instrument.

1. Make sure the storage medium, the Johannes Sequencer+ for example, with a previous recorded data file is properly connected.
2. Start sending the data file on the sequencer. A message that a data file is being received appears on the display of the organ.
3. When the upload is completed the main screen of the display appears automatically.

5.4 Demo Songs

The Demo Songs function plays twelve different demo songs.

1. Press the MENU piston.
2. Use the - and + pistons to select the Demo Songs function on the display.
3. Press the SET piston. The titles of the demo songs appear on the display.
4. Use the - and + pistons to select one of the twelve demo songs.
5. Press the SET piston to select the demo song.
6. Use the - and + pistons to choose whether to play only the selected demo song (play one demo) or all demo songs (play all demo's).
7. Press the SET piston to start playing the selected demo song(s). The title and composer of the demo song appears on the display.

While playing a demo song, the operating functions of the organ are disabled except the following functions:

- a. **0 piston:** stop playing the demo song(s).
- b. **Organ volume control:** adjust the volume of the organ.
- c. **Cathedral volume control:** adjust the volume of the reverb.

8. Press the MENU piston 2x after having played the demo song(s) to exit the Johannus Menu.

5.5 Expression Pedals

The organ is equipped with PEPC™ (Programmable Expression Pedal Configuration). This function makes it possible to configure each expression pedal to one's own discretion.

We distinguish two types of expression pedals:

Swell pedal: dynamics by increase or decrease of volume. In a pipe organ this is achieved by closing or opening the swell shutters of a swell box. See also § 4.2 Expression pedal.

Crescendo pedal: dynamics by increase or decrease the amount of stops. See also § 4.12 Crescendo pedal.

- a. An expression pedal can be configured as a swell pedal for several divisions at the same time.
- b. A division can only be connected to one expression pedal at the same time.
- c. An expression pedal cannot be configured as a swell pedal and a crescendo pedal at the same time.

1. Press the MENU piston.
2. Use the - and + pistons to select the Expression Pedals function on the display.
3. Press the SET piston. The available expression pedals appear on the display.
4. Use the - and + pistons to select the expression pedal the function of which must be changed.
5. Press the SET piston. The available possibilities appear on the display. Behind the possibilities the actual setting is marked with a checkmark.
6. Use the - and + pistons to select the desired setting.

Ch : Swell pedal for Choir (*Positive 350 only*)
Gt/Pd : Swell pedal for Great and Pedal
Sw : Swell pedal for Swell
Cresc : Crescendo pedal

7. Press the SET piston. The pointer jumps to the choice position.
8. Use the - and + pistons to select the functionality.
9. Press the SET piston for confirmation.
10. Press the MENU piston to return to the Expression Pedals menu.
11. If necessary, repeat steps 4 to 10 for another expression pedal.
12. Press the MENU piston 2x to exit the Johannus Menu.

5.6 Keyboard Config

The Keyboard Config function sets the operation of the keys.

1. Press the MENU piston.
2. Use the - and + pistons to select the `Keyboard Config` function on the display.
3. Press the SET piston. The available manuals appear on the display.
4. Use the - and + pistons to select the manual the setting of which must be changed.
5. Press the SET piston. The available options appear on the display.
6. Use the - and + pistons to select a setting for the operation of the keys.
 - `Automatic`: The manual has been set to High. When activating a programmable MIDI stop or optional solo- or orchestral voice, the manual will be set to Velocity automatically.
 - `High`: The keys respond when touched very lightly.
 - `Low`: The keys respond when pressed further.
 - `Velocity`: The keys are touch-sensitive.
7. Press the SET piston to program the settings. The available manuals appear on the display again.
8. Repeat steps 4 to 7 to change the setting of another manual or press the MENU piston 2x to exit the Johannus Menu.

5.7 Key Volumes

The Key Volumes function makes it possible to adjust the key volumes of each stop.

The Key Volumes function consists of the following sub functions:

- Adjust
- Reset one stop
- Reset ALL stops

a. Adjust

The Adjust function sets the volume per key, stop and intonation style.

Key volumes of the optional solo- and orchestral voices cannot be adjusted.

1. Switch off all stops.
2. Select an intonation style or variation.
3. Press the MENU piston.

4. Use the - and + pistons to select the *Key Volumes* function on the display.
5. Press the SET piston. The sub functions of the Key Volumes menu appears on the display.

If you are asked to enter a code, the Key Volumes function has been secured at the request of the owner. Contact the owner or dealer to retrieve the code. Enter the code using the pistons of the capture memory locations and press the SET piston.

Enter code:
- - - -

6. Use the - and + pistons to select the sub function *Adjust* and press the SET piston. A question to select a stop to adjust appears on the display.
7. Activate one stop. A question to press a key appears on the display.
8. Press one key on the corresponding division and hold the key. The display will now show following *Key*: the key indicator and following *Vol*: the volume.
9. Use the - and + pistons to set the desired volume.
10. Press the SET piston to save the change. The display requests confirmation. Use the - and + pistons to select *No* or *Yes*.
11. Press the SET piston to confirm.
12. Press the MENU piston to return to the Key Volume menu.
13. If the changes have not been saved, the display will show *Discard changes?*. Use the - and + pistons to select *Yes* for discarding and press the SET piston. Go to step 17.
14. Use the - and + pistons to select *No* if the changes still has to be saved and press the SET piston.
15. Press the SET piston. The display requests confirmation.
16. Use the - and + pistons to select *Yes*. Press the SET piston for confirmation.
17. Press the MENU piston 3x to exit the Johannus Menu.

More key volumes can be changed by pressing another key or by selecting another stop.

b. Reset one stop

The Reset one stop sub function resets the key volumes for one stop in one intonation or variation to the factory setting.

1. Switch off all stops.
2. Select an intonation style or variation.
3. Press the MENU piston.
4. Use the - and + pistons to select the *Key Volumes* function on the display.
5. Press the SET piston. The sub functions of the Key Volumes menu appear on the display.

If you are asked to enter a code, the Key Volumes function has been secured at the request of the owner. Contact the owner or dealer to retrieve the code. Enter the code using the pistons of the capture memory locations and press the SET piston.

Enter code:
- - - -

6. Use the - and + pistons to select the *Reset one stop* sub function on the display.

7. Press the SET piston. A question to select a stop to reset appears on the display.
8. Activate one stop. A question to confirm appears on the display.
9. Use the - and + pistons to select `No` or `Yes`.
10. Press the SET piston to confirm and to return to the Key Volumes menu.
11. Press the MENU pistons 2x to exit the Johannus Menu.

c. Reset ALL stops

The Reset ALL stops function resets the key volumes of all stops in one intonation style or variation to the factory setting.

1. Select an intonation style or variation.
2. Press the MENU piston.
3. Use the - and + pistons to select the `Key Volumes` function on the display.
4. Press the SET piston. The sub functions of the Key Volumes menu appear on the display.

<p>If you are asked to enter a code, the Key Volumes function has been secured at the request of the owner. Contact the owner or dealer to retrieve the code. Enter the code using the pistons of the capture memory locations and press the SET piston.</p>	<p>Enter code: - - - -</p>
--	--------------------------------

5. Use the - and + pistons to select the `Reset ALL stops` sub function on the display.
6. Press the SET piston. A question to confirm appears on the display.
7. Use the - and + pistons to select `No` or `Yes`.
8. Press the SET piston to confirm and to return to the Key Volumes menu.
9. Press the MENU piston 2x to exit the Johannus Menu.

5.8 MIDI Config

MIDI is a protocol for communication between the organ and other devices, such as PC, Johannus Sequencer+ or other musical instruments.

The programmable MIDI stops allow you to control any module voice through any MIDI channel (1-16).

The four parts of the programmable MIDI code are: Channel, Msb, Lsb en Voice.

1. Press the MENU piston.
2. Use the - and + pistons to select the `MIDI Config` function on the display.
3. Press the SET function. A question to select a MIDI stop to configure appears on the display.
4. Activate the MIDI stop which has to be configured. The settings of the corresponding MIDI stop appear on the display. An pointer is located in front of the value of the MIDI channel.
5. Use the - and + pistons to select the desired MIDI channel.
6. Press the SET piston. The pointer jumps to the MSB value.
7. Use the - and + pistons to select the desired MSB value.
8. Press the SET piston. The pointer jumps to the LSB value.
9. Use the - and + pistons to select the desired LSB value.

10. Press the SET piston. The pointer jumps to the Voice value.
11. Use the - and + pistons to select the desired Voice value.
12. Press the SET piston. The selected configuration is now stored in memory. The pointer jumps back to the MIDI channel location.
13. Press the MENU piston 2x to exit the Johannus Menu.

5.9 Orchestrals

The Orchestral menu is only available if the organ is equipped with the optional Premium or Platinum Voice Package.

With the optional Premium or Platinum Voice Package the organ is enlarged with a number of solo- and orchestral voices.

Solo- and orchestral voices are standard playable from a factory defined manual. This can be changed via the Johannus Menu.

Assigning a solo- or orchestral voice to a manual or pedal can also be done with the Quick Access function. See § 4.13 Quick Access.

1. Press the MENU piston.
2. Use the - and + pistons to select the `Orchestrals` function on the display.
3. Press the SET piston. The solo- and orchestral voices appear on the display.
4. Use the - and + pistons to select the solo- or orchestral voice from which the assignment has to be changed.
5. Press the SET piston. The actual assignment of the solo- or orchestral voice appears on the display.
6. Press a key on the manual or pedal on which the solo- or orchestral voice has to be assigned. The new assignment appears on the display.
7. Press the MENU piston 3x to exit the Johannus Menu.

5.10 Reset Procedures

The Reset Procedures function can be used to reset a number of settings to the factory settings.

1. Press the MENU piston.
2. Use the - and + pistons to select the `Reset Procedures` function on the display.
3. Press the SET piston. The available Reset Procedures appear on the display.
4. Use the - and + pistons to select the desired reset procedure:
 - `Crescendo def.:` Resets the factory settings of the 20 steps of the crescendo pedal.
 - `Cust. Temperament def.:` Resets the custom programmable temperament to equal temperament.
 - `Expression Pedals def.:` Resets the factory settings of the expression pedals.
 - `Memory default:` Clears the entire capture memory.

-
- MIDI default: Resets the factory settings of the MIDI stops.
 - Preset default: Resets the factory settings of the pre-programmed memory locations.
 - Reverb default: Resets the factory settings of the reverb.
 - Tracker Action default: Resets the factory settings of the Tracker Action.
 - Tweeter Volume default: Resets the factory settings of the Tweeters.

The following reset procedures are only available if the organ is equipped with the optional Premium or Platinum Voice Package:

- Orchestrals default: Resets the factory setting of the solo- and orchestral voices.
 - Special Stop mode def.: Resets the factory settings of some special settings for some orchestral voices.
5. Press the SET piston. A question to confirm appears on the display.
 6. Use the - and + pistons to select No or Yes. Press the SET piston to confirm and to return to the Reset Procedures menu.
 7. Press the MENU piston 2x to exit the Johannus Menu.

5.11 Reverb Settings

The organ is equipped with the LIVEverb™ system. With this system it is possible to choose a matching reverb for each intonation style and variation.

LIVEverb™ uses recordings of the acoustics of famous churches and concert halls to achieve a very realistic reverb.

1. Use the intonation style and variation pistons to activate an intonation style or variation the reverberation of which has to be changed.
2. Press the MENU piston.
3. Use the - and + pistons to select the Reverb Settings function on the display.
4. Press the SET piston. A list of available churches and concert halls appears on the display. The pointer indicates the actual choice.
5. Use the - and + pistons to select the desired church or concert hall.
6. Press the SET piston to confirm and to return to the Johannus Menu.
7. Press the MENU piston to exit the Johannus Menu.

5.12 Startup Settings

The Startup Settings can be used to select the startup defaults for the following functions:

- a. Chorus On/Off
- b. Default Intonation
- c. Headphone / Aux-Out volume
- d. Side Speakers volume
- e. Special Stops Mode (settings for special orchestral voices)

a. Chorus On/Off

Startup Setting Chorus On/Off determines whether the Chorus function is switched on at startup of the organ.

1. Press the MENU piston.
2. Use the - and + pistons to select the `Startup Settings` function on the display.
3. Press the SET piston. A list with available startup settings appears on the display.
4. Use the - and + pistons to select the `Chorus On/Off` setting.
5. Press the SET piston. The actual setting appears on the display. The default setting is `On`.
6. Use the - and + pistons to select the desired setting.
7. Press the SET piston to confirm and to return to the Startup Settings menu.
8. Press the MENU piston 2x to exit the Johannus Menu.

b. Default Intonation

Startup Setting Default Intonation determines which intonation style is selected at startup of the organ.

1. Press the MENU piston.
2. Use the - and + pistons to select the `Startup Settings` function on the display.
3. Press the SET piston. A list with available startup settings appears on the display.
4. Use the - and + pistons to select the `Default Intonation` function.
5. Press the SET piston. The actual setting appears on the display.
6. Use the - and + pistons to select the desired intonation style.
7. Press the SET piston to confirm and to return to the Startup Settings menu.
8. Press the MENU piston 2x to exit the Johannus Menu.

c. Headphone / Aux-Out

Startup Setting Headphone / Aux-Out determines the volume level of the headphone / Aux-output at startup of the organ.

1. Press the MENU piston.
2. Use the - and + pistons to select the `Startup Settings` function on the display.
3. Press the SET piston. A list with available startup settings appears on the display.
4. Use the - and + pistons to select the `Headphone / Aux Out` function.
5. Press the SET piston. The actual setting appears on the display.
6. Use the - and + pistons to select the desired level.
7. Press the SET piston to confirm and to return to the Startup Settings menu.
8. Press the MENU piston 2x to exit the Johannus Menu.

d. Side Speakers

Startup Setting Side Speakers determines the volume level of the Surround Loudspeakers at startup of the organ.

-
1. Press the MENU piston.
 2. Use the - and + pistons to select the `Startup Settings` function on the display.
 3. Press the SET piston. A list with available startup settings appears on the display.
 4. Use the - and + pistons to select the `Side Speakers` function on the display.
 5. Press the SET piston. The actual settings for the left and the right side speaker appear on the display.
 6. Use the - and + pistons to select side the level has to be changed.
 7. Press the SET piston. The pointer jumps to the set level.
 8. Use the - and + pistons to select the desired level.
 9. Press the SET piston to confirm and to return to the Side Speakers menu.

For a proper balance of the Surround sound it is advisable to keep both sides on an equal level. Use only unequal levels to correct different volumes caused by, for example, reflective surfaces on one side of the organ.

10. Press the MENU piston 3x to exit the Johannes Menu.

e. Special Stops Mode

This function is only available if the organ is equipped with the optional Platinum Voice Package.

Startup Setting Special Stops Mode determines special settings which are used for Harp, Harpsichord and Piano.

Firstly can be determined whether the Special Stops Mode function has to be enabled.

After enabling the following functions are to set:

- Reverb Program
- Reverb Volume
- Tweeter Volume Setting

1. Press the MENU piston.
2. Use the - and + pistons to select the `Startup Settings` function on the display.
3. Press the SET piston. A list with available startup settings appears on the display.
4. Use the - and + pistons to select the `Special Stops Mode` function on the display.
5. Press the SET piston. The possibility to enable or disable the Special Stops Mode function appears on the display. Continue with step 6 if the function has to be enabled. Skip to step 12 if the function has to be disabled.
6. Use the - and + pistons to select `Enabled` to enable the function.
7. Press the SET piston. A list of items appears on the display.
8. Use the - and + pistons to select the item the setting has to be changed.
9. Press the SET piston. The actual setting appears on the display.
10. Use the - and + pistons to select the desired setting. Press the SET piston to confirm and to return to the Special Settings menu.

-
11. Press the MENU piston 2x to return to the Startup Settings menu. Skip to step 14.
 12. Use the - and + pistons to select `Disabled` to disable the Special Stops Mode function.
 13. Press the SET piston to confirm and to return to the Startup Settings menu.
 14. Press the MENU piston 2x to exit the Johannus Menu.

5.13 Temperaments

The Temperaments function sets the temperament. The set temperament can be read on the display behind the `Temp:` text.

There is choice out of eleven different temperaments:

- Equal (normal temperament)
- Young II
- Vallotti
- Kirnberger III
- Kirnberger II
- Neidhardt III
- Werckmeister III
- 1/6 Meantone (1/6 comma meantone)
- 1/5 Meantone (1/5 comma meantone)
- 1/4 Meantone (1/4 comma meantone)
- Pythagorean

Besides these 11 temperaments it is possible to configure a custom temperament:

- Custom (free programmable temperament)

Selecting a temperament

1. Press the MENU piston.
2. Use the - and + pistons to select the `Temperaments` function on the display.
3. Press the SET piston. A list of available temperaments appears on the display. The pointer indicates the actual temperament.
4. Use the - and + pistons to select the desired temperament.
5. Press the MENU piston 2x to exit the Johannus Menu.

Programming a custom temperament

With this function it is possible to create a personal temperament. Every key can be detuned with increments of 1 cent. The minimum value is -50 cents; the maximum value is 50 cents.

The programming can be done using the middle octave of the Great and is automatically calculated for all keys of the organ.

1. Press the MENU piston.
2. Use the - and + pistons to select the `Temperaments` function on the display.
3. Press the SET piston. A list of available temperaments appears on the display. The pointer indicates the actual temperament.

-
4. Use the - and + pistons to select the `Custom Programming` function.
 5. Press the SET piston.
 6. Press and hold a key of the middle octave of the Great. The detune setting of the pressed key appears on the display. The given detuning is compared to the equal temperament.
 7. Use the - and + pistons to select the desired pitch of the pressed key.
 8. If necessary repeat steps 6 and 7 for another key of the middle octave.
 9. Press the MENU piston 2x to exit the Johannus Menu.

Using the reset procedure `Cust. Temperament def.` the Custom Temperament can be reset to equal temperament. See § 5.10 Reset Procedures.

5.14 Tracker Action

Tracker Action plays samples of 'rattle noise' of the key mechanics of a pipe organ when keys are pressed.

With the function Tracker Action the volume of this samples can be set per intonation style and division.

The sound of Tracker Action is disabled if a solo- or orchestral voice is played on the corresponding manual or pedal.

1. Use the ROM, SYM, BAR or HIS pistons to activate an intonation style.
2. Press the MENU piston.
3. Use the - and + pistons to select the `Tracker Action` function on the display.
4. Press the SET piston. A list of available divisions and their actual tracker action volume setting appear on the display.
5. Use the - and + pistons to select the division the volume has to be changed.
6. Press the SET piston. The pointer jumps to the actual volume level.
7. Use the - and + pistons to select the desired level.
8. Press the SET piston to program the new level. The pointer jumps back to the division choice.
9. Repeat steps 5 to 8 to change the setting of another division or select another intonation style to change the tracker action volume of that style.
10. Press the MENU piston 2x to exit the Johannus Menu.

5.15 Tuning

The Tuning function shifts the pitch in steps of 1 Hz from 426 Hz to 454 Hz (standard pitch is a = 440 Hz).

The set pitch can be read on the display directly behind the transposer setting.

1. Press the MENU piston.
2. Use the - and + pistons to select the `Tuning` function on the display.
3. Press the SET piston. The actual Tuning setting appears on the display behind the actual transposer setting.
4. Use the - and + pistons to select the desired pitch.

-
5. Press the SET piston to program the new setting and to return to the Johannus Menu.
 6. Press the MENU piston to exit the Johannus Menu.

5.16 Tweeter Settings

With the Tweeter Settings function the volume and functionality of the tweeters can be set per intonation style.

a. Adjusting tweeter volume

1. Press the MENU piston.
2. Use the - and + pistons to select the `Tweeter Settings` function on the display.
3. Press the SET piston. The actual functionality of the tweeters appears on the display.
4. Use the pistons ROM, BAR, SYM or HIS to select the desired intonation style. Use the - and + pistons to select `On`.
5. Press the SET piston. The actual volume setting of the tweeters appears on display.
6. Use the - and + pistons to select the desired volume.
7. Press the SET piston to program the new setting and to return to the Johannus Menu.
8. Repeat steps 3 to 7 to change the settings of another intonation style or press the MENU piston to exit the Johannus Menu.

a. Adjusting tweeter volume

1. Press the MENU piston.
2. Use the - and + pistons to select the `Tweeter Settings` function on the display.
3. Press the SET piston. The actual functionality of the tweeters appears on the display.
4. Use the pistons ROM, BAR, SYM or HIS to select the desired intonation style. Use the - and + pistons to select `Off`.
5. Press the SET piston to program the new setting and to return to the Johannus Menu.
6. Repeat steps 3 - 5 to change the setting of another intonation style of press the MENU pistons to exit the Johannus Menu.

5.17 Version

The Version function shows the version number of the software of the organ.

1. Press the MENU piston.
2. Use the - and + pistons to select the `Version` function on the display.
3. Press the SET piston. The data of the software of the organ appears on the display.
4. Press the MENU piston 2x to exit the Johannus Menu.

6 OPTIONAL VOICE PACKAGES

If the organ is equipped with the optional Premium or Platinum Voice Package, a number of solo- and orchestral voices are available.

The Premium Voice Package consists of the following solo orchestral voices:

- Chimes
- Flute
- Panflute
- Tuba
- Trumpet
- Oboe
- Clarinet

The Platinum Voice Package consists of the solo orchestral voices of the Premium Voice Package plus the following orchestral voices:

- Strings
- Harp
- Harpsichord
- Piano I
- Piano extended (*Positive 350 only*)
- Gospel Organ I ('full organ' sound, with Leslie effect)
- Gospel Organ II ('jazz organ' sound, with Leslie effect)

Solo- and orchestral voices are standard playable from a factory defined manual. This can be changed by the user via Quick Access, see § 4.13.2 Keyboard assignment Orchestrals, and via the Johannus Menu, see § 5.9 Orchestrals.

6.1 Characteristics per voice

Explanation of used terminology:

- The compass of the solo- or orchestral voices is indicated as follows:

First octave organ manual:	bass octave	C - B
Second octave organ manual:	tenor octave	c - b
Third octave organ manual:	middle octave	c' - b'
Fourth octave organ manual:	treble octave	c'' - b''
Fifth octave organ manual:	top octave	c''' - b'''
Highest c (sixth octave):		c''''

- Velocity behavior: the way the characteristics of a solo- or orchestral voice differs by different key velocities.

Different velocity behavior is only audible when the operation of the manual keys is set to 'Automatic' or 'Velocity'. If the operation of the manual keys is set to 'High' or 'Low' the solo- or orchestral voice sounds always with an average sound and volume. See § 5.6 Keyboard Config for setting the operation of the manual keys.

Chimes		
Compass:	c - c'''	
Use with couplers:	normal	
Velocity behavior:	soft touch:	- low volume - mellow sound
	strong touch:	- strong volume - bright sound
Details:	---	

Flute		
Compass:	c - c''''	
Use with couplers:	normal	
Velocity behavior:	soft touch:	- low volume - mellow sound - long delay for vibration - less chiff
	strong touch:	- strong volume - bright sound - short delay for vibration - more chiff
Details:	---	

Panflute		
Compass:	g - c''''	
Use with couplers:	normal	
Velocity behavior:	soft touch:	- low volume - mellow sound
	strong touch:	- strong volume - bright sound
Details:	---	

Tuba		
Compass:	C - f'''	
Use with couplers:	normal	
Velocity behavior:	soft touch:	- low volume - mellow sound
	strong touch:	- strong volume - bright sound
Details:	---	

Trumpet		
Compass:	c - c''''	
Use with couplers:	normal	
Velocity behavior:	soft touch:	- low volume - mellow sound
	strong touch:	- strong volume - bright sound
Details:	---	

Oboe		
Compass:	c - c''''	
Use with couplers:	normal	
Velocity behavior:	soft touch:	- low volume - mellow sound
	strong touch:	- strong volume - bright sound
Details:	---	

Clarinet		
Compass:	C - c''''	
Use with couplers:	normal	
Velocity behavior:	soft touch:	- low volume - mellow sound
	strong touch:	- strong volume - bright sound
Details:	---	

Strings		
Compass:	C - c''''	
Use with couplers:	- manual tone is coupled to the pedal - an extra 16' Contra Bass is added on the pedal	
Velocity behavior:	soft touch:	- low volume - mellow sound - mild chiff
	strong touch:	- strong volume - bright sound - more chiff
Details:	- fourfold - sound divided over organ and surround loudspeakers	

Harp		
Compass:	C - c'''	
Use with couplers:	normal	
Velocity behavior:	soft touch:	- low volume - thin sound
	strong touch:	- strong volume - strong sound
Details:	Special Stops Mode:	When using the harp, special settings for reverb and tweeters are enabled. See § 5.12 Startup Settings, sub e: Special Stops Mode.
	Damper pedal:	<p>Harp tones naturally rings through a long time. A harpist will regularly damp the strings with his hands to keep a transparent sound.</p> <p>To make this possible on the organ, the f# key on the pedal board can be used as a damper pedal.</p> <p>The underlying f key can be used as a rest for the heel of the foot.</p> <p>The keys C - e of the pedal board remain their normal organ function.</p> <p>The switch to damper pedal will be indicated shortly on the display when the harp is activated.</p>

Harpsichord		
Compass:	C - c'''	
Use with couplers:	normal	
Velocity behavior:	---	
Details:	Special Stops Mode:	When using the harpsichord, special settings for reverb and tweeters are enabled. See § 5.12 Startup Settings, sub e: Special Stops Mode.

Piano I		
Compass:	C - c'''	
Use with couplers:	normal	
Velocity behavior:	soft touch:	- low volume - mellow sound
	strong touch:	- strong volume - bright sound
Details:	Special Stops Mode:	When using the piano, special settings for reverb and tweeters are enabled. See § 5.12 Startup Settings, sub e: Special Stops Mode.
	Sustain pedal:	An essential part of playing the piano is the use of the sustain pedal. To make this possible on the organ, the f# key on the pedal board can be used as a sustain pedal. The underlying f key can be used as a rest for the heel of the foot. The keys C - e of the pedal board remain their normal organ function. The switch to sustain pedal will be indicated shortly on the display when the piano is activated.

Piano Extended (<i>Positive 350 only</i>)		
Compass:	'C - c''''	
Use with couplers:	---	
Velocity behavior:	soft touch:	- low volume - mellow sound
	strong touch:	- strong volume - bright sound
Details:	Compass:	The Piano Extended has a compass of 85 keys, divided over 3 keyboards. The middle keyboard sound at normal pitch. The lower keyboard sounds one octave lower. The upper keyboard sounds one octave higher. In this way it is possible to play the full compass of a piano keyboard.
	Special Stops Mode:	When using the piano, special settings for reverb and tweeters are enabled. See § 5.12 Startup Settings, sub e: Special Stops Mode.
	Sustain pedal:	An essential part of playing the piano is the use of the sustain pedal. To make this possible on the organ, the f# key on the pedal board can be used as a sustain pedal. The underlying f key can be used as a rest for the heel of the foot. The keys C - e of the pedal board remain their normal organ function. The switch to sustain pedal will be indicated shortly on the display when the piano is activated.

Gospel Organ I		
Compass:	C - c'''	
Use with couplers:	<ul style="list-style-type: none"> - Coupling to another manual is not possible - Coupling to the pedal activates a special Gospel Organ Pedal sound on the pedal. The manual sound of the Gospel Organ is not coupled to the pedal. 	
Velocity behavior:	---	
Details:	Sound:	' Full Organ' sound
	Leslie:	<p>The Gospel Organ sound is also characteristic by the tremolo effect of the Leslie box. This effect has two modes: slow and fast.</p> <p>If the Leslie piston is not activated, the Gospel Organ sounds with a slow tremolo effect. By pressing the Leslie piston, the tremolo effect will be passed to the fast mode.</p> <p>Note: if no Gospel Organ piston is activated, the Leslie piston can not be activated either.</p>

Gospel Organ II		
Compass:	C - c'''	
Use with couplers:	<ul style="list-style-type: none"> - Coupling to another manual is not possible - Coupling to the pedal activates a special Gospel Organ Pedal sound on the pedal. The manual sound of the Gospel Organ is not coupled to the pedal. 	
Velocity behavior:	---	
Details:	Sound:	' Jazz Organ' sound with percussion
	Leslie:	<p>The Gospel Organ sound is also characteristic by the tremolo effect of the Leslie box. This effect has two modes: slow and fast.</p> <p>If the Leslie piston is not activated, the Gospel Organ sounds with a slow tremolo effect. By pressing the Leslie piston, the tremolo effect will be passed to the fast mode.</p> <p>Note: if no Gospel Organ piston is activated, the Leslie piston can not be activated either.</p>

6.2 Exclusions

A number of orchestral voices cannot be played simultaneously:

- Harp, Piano I and Piano Extended cannot be played simultaneously.
- Gospel Organ I and Gospel Organ II cannot be played simultaneously.

If one of these orchestral voices is activated, the corresponding orchestral voice(s) will be disabled automatically.

7 MAINTENANCE, TROUBLESHOOTING AND WARRANTY

7.1 Maintenance

Overview

Component	Maintenance	Frequency
Cabinet	Cleaning. See § 7.1.1	As required
Manuals	Cleaning and removing scratches. See § 7.1.2	As required

7.1.1 Maintenance of the cabinet



Do not use furniture polish or teak oil to clean the organ cabinet.
Direct sunlight may discolor the organ cabinet.

1. Clean the cabinet with a damp cloth.
2. Rub the cabinet dry with a lint-free cloth.

7.1.2 Maintenance of the manuals

The manuals are plastic.



Do not use aggressive cleaning agents such as paint thinner or acetone to remove dirt.

1. Clean the manuals with a damp cloth.
2. Rub the manuals dry with a lint-free cloth.
3. Remove any scratches with car polish.

7.2 Problems

Overview

Symptom	Cause	Solution
Pedal board does not work properly	The pedal magnet is making poor contact with the magnetic switch at the rear of the pedal front cover.	Reposition the pedal board. See § 2.1
Organ functions do not work properly	The organ is not grounded.	Connect the organ to a grounded power socket.

7.3 Warranty

The conditions are specified in the warranty certificate. The warranty is void if changes or repairs are made to the organ by persons or organizations that are not authorized by Global Organ Group b.v.

8 MIDI IMPLEMENTATIONS

8.1 MIDI Implementation Chart

JOHANNUS Organs

MIDI Implementation card

Date: September 2008

Version 1.00

Functions		Transmitted	Recognized	Remarks
Basic Channel	Default Changes	See MIDI Specs See MIDI Specs	See MIDI Specs Y ¹	See MIDI Specs
Mode	Default Messages Altered	Mode 3 N * * * * *	Mode 3 N N	
Note Number	True Voice	36 - 96 * * * * *		
Velocity	Note ON Note OFF	9nH v=1 - 127 9nH (v=64) 9nH (v=0)	9nH v=1 - 127 9nH v=1 - 127 9nH v=0, 8nH v=*	Velocity ON Velocity OFF *=irrelevant
After Touch	Keys Channels	N N		
Pitch Bend		N		
Control Change	7 11 100/101/6 100/101/6	Y Y Y Y		General Volume Expr. pedals Pitch Transposer
Program Change	: True#	See MIDI Specs * * * * *	See MIDI Specs See MIDI Specs	See MIDI Specs See MIDI Specs
System Exclusive		See MIDI Specs	See MIDI Specs	See MIDI Specs
Common	: Song Pos : Song Sel : Tune	N N N	N N N	
System Real Time	: Clock : Commands	N N	N N	
Aux	: Reset All Contr. : Local ON/OFF : All Notes OFF : Active Sense : Reset	N N Y N N	N N Y N N	
Notes	¹ Depends on number of divisions			

Mode 1: OMNI ON, POLY
Mode 3: OMNI OFF, POLY

Mode 2: OMNI ON, MONO
Mode 4: OMNI OFF, MONO

Y=YES
N=NO

8.2 MIDI Specifications

This paragraph describes the specifications on the MIDI Implementation Chart in more detail.

Default basic channels (transmitted/recognized)

Positive 250:	1: Great	Positive 350:	1: Choir
	2: Swell		2: Great
	3: Pedal		3: Swell
	12: Stops		4: Pedal
			12: Stops

Basic channel changes (transmitted)

Can be programmed through the MIDI Config. See § 5.8 MIDI Config.

Control changes (transmitted)

Controller 7 (07h) General volume, with volume values 40 (28h) - 127 (7Fh).

Controller 11 (0Bh) Swell pedal, with volume values 55 (37h) - 127 (7Fh).

Controller 6 (06h) Pitch, with pitch values (21h) - 95 (5Fh).

Pitch value 64 (40h) = a = 440Hz.

The following applies to the pitch:

LSB 100 (64h) 1 (01h) and the MSB 101 (65h) 0(00h).

Transposer, with transposer values 56 (38h) - 72 (48h).

Transposer value 64 (40h) = a = 440Hz.

The following applies to the transposer:

LSB 100 (64h) 2 (02H) and the MSB 101 (65h) 0(00h).

Control changes (recognized)

Controller 7 (07h) General volume, with volume values 0 (00h) - 127 (7Fh).

Volume values less than 40 (28h) are treated as 40 (28h).

Controller 11 (0Bh) Swell pedal, with volume values 0 (00h) - 127 (7Fh).

Volume values less than 55 (37h) are treated as 55 (37h).

Program changes (transmitted/recognized)

Organ stops: Depends on the number of stops and the sequence of stops.

MIDI stops (programmable): 1-128. See § 5.8 MIDI Config.

System exclusive messages (transmitted/recognized)

Each 'sys ex' (system exclusive) message largely looks the same. The first 7 bytes and the last byte are always the same. Only the value of the 8th byte varies. This is the 'sys ex message' that Johannus generally uses: F0 00 4A 4F 48 41 53 XX F7 (hexadecimal). The 'sys ex messages' described below only indicates the value of the 8th byte (XX) and the output from which it is transmitted.

All stops off

The 'all stops off' sys ex code is 7F. This sys ex code is transmitted through the MIDI SEQ. output when the 0 piston is pressed for a longer time. When an 'all stops off' sys ex code is received, all stops on the instrument are switched off.

Pushbutton values

When a piston is pressed, a sys ex code is transmitted with the value of the piston that is pressed (for example PP = 00 P = 01) through the MIDI MOD. output. These sys ex codes are only important when the Johannus sound module CSM 128 is connected to your instrument.

Other MIDI codes (transmitted)

Press the 0 piston to transmit the sys ex code, 'all stops off' and all volume settings through the MIDI SEQ. output.

For China:

有关产品中所含有害物质的说明

本资料就本公司产品中所含的特定有害物质及其安全性予以说明。

本资料适用于 2007 年 3 月 1 日以后本公司所制造的产品。

环保使用期限



此标志适用于在中国国内销售的电子信息产品，表示环保使用期限的年数。所谓环保使用期限是指在自制造日期的规定期限内，产品中所含的有害物质不致引起环境污染，不会对人身、财产造成严重的不良影响。环保使用期限仅在遵照产品使用说明书，正确使用产品的条件下才有效。不当的使用，将会导致有害物质泄漏的危险。

产品中有毒有害物质或元素的名称及含量

部件名称	有毒有害物质或元素					
	铅(Pb)	汞(Hg)	镉(Cd)	六价铬(Cr(VI))	多溴联苯(PBB)	多溴二苯醚(PBDE)
外壳(壳体)	×	○	○	○	○	○
电子部件(印刷电路板等)	×	○	×	○	○	○
附件(电源线、交流适配器等)	×	○	○	○	○	○


○：表示该有毒有害物质在该部件所有均质材料中的含量均在 SJ/T11363-2006 标准规定的限量要求以下。
×：表示该有毒有害物质至少在该部件的某一均质材料中的含量超出 SJ/T11363-2006 标准规定的限量要求。
因根据现有的技术水平，还没有什么物质能够代替它。

For EU:

For EU Countries




- UK** This symbol indicates that in EU countries, this product must be collected separately from household waste, as defined in each region. Products bearing this symbol must not be discarded together with household waste.
- DE** Dieses Symbol bedeutet, dass dieses Produkt in EU-Ländern getrennt vom Hausmüll gesammelt werden muss gemäß den regionalen Bestimmungen. Mit diesem Symbol gekennzeichnete Produkte dürfen nicht zusammen mit dem Hausmüll entsorgt werden.
- FR** Ce symbole indique que dans les pays de l'Union européenne, ce produit doit être collecté séparément des ordures ménagères selon les directives en vigueur dans chacun de ces pays. Les produits portant ce symbole ne doivent pas être mis au rebut avec les ordures ménagères.
- IT** Questo simbolo indica che nei paesi della Comunità europea questo prodotto deve essere smaltito separatamente dai normali rifiuti domestici, secondo la legislazione in vigore in ciascun paese. I prodotti che riportano questo simbolo non devono essere smaltiti insieme ai rifiuti domestici. Ai sensi dell'art. 13 del D.Lgs. 25 luglio 2005 n. 151.
- ES** Este símbolo indica que en los países de la Unión Europea este producto debe recogerse aparte de los residuos domésticos, tal como está regulado en cada zona. Los productos con este símbolo no se deben depositar con los residuos domésticos.
- PT** Este símbolo indica que nos países da UE, a recolha deste produto deverá ser feita separadamente do lixo doméstico, de acordo com os regulamentos de cada região. Os produtos que apresentem este símbolo não deverão ser eliminados juntamente com o lixo doméstico.
- NL** Dit symbool geeft aan dat in landen van de EU dit product gescheiden van huishoudelijk afval moet worden aangeboden, zoals bepaald per gemeente of regio. Producten die van dit symbool zijn voorzien, mogen niet samen met huishoudelijk afval worden verwijderd.
- DK** Dette symbol angiver, at i EU-lande skal dette produkt opsamles adskilt fra husholdningsaffald, som defineret i hver enkelt region. Produkter med dette symbol må ikke smides ud sammen med husholdningsaffald.
- NO** Dette symbolet indikerer at produktet må behandles som spesialavfall i EU-land, iht. til retningslinjer for den enkelte regionen. Produkter som er merket med dette symbolet, må ikke kastes sammen med vanlig husholdningsavfall. Apparatet må tilkoples jordat stikkontakt.
- SE** Symbolen anger att i EU-länder måste den här produkten kasseras separat från hushållsavfall, i enlighet med varje regions bestämmelser. Produkter med den här symbolen får inte kasseras tillsammans med hushållsavfall. Apparaten skall anslutas till jordat uttag.
- FI** Tämä merkintä ilmaisee, että tuote on EU-maissa kerättävä erillään kotitalousjätteistä kunkin alueen voimassa olevien määräysten mukaisesti. Tällä merkinnällä varustettuja tuotteita ei saa hävittää kotitalousjätteiden mukana. Laite on liitettävä suojakoskettimilla varustettuun pistorasiaan.
- HU** Ez a szimbólum azt jelenti, hogy az Európai Unióban ezt a terméket a háztartási hulladéktól elkülönítve, az adott régióban érvényes szabályozás szerint kell gyűjteni. Az ezzel a szimbóllumal ellátott termékeket nem szabad a háztartási hulladék közé dobni.
- PL** Symbol oznacza, że zgodnie z regulacjami w odpowiednim regionie, w krajach UE produktu nie należy wyrzucać z odpadami domowymi. Produktów opatrzonych tym symbolem nie można utylizować razem z odpadami domowymi.
- CZ** Tento symbol udává, že v zemích EU musí být tento výrobek sbírán odděleně od domácího odpadu, jak je určeno pro každý region. Výrobky nesoucí tento symbol se nesmí vyhazovat spolu s domácím odpadem.
- SK** Tento symbol vyjadruje, že v krajinách EÚ sa musí zber tohto produktu vykonávať oddelene od domového odpadu, podľa nariadení platných v konkrétnej krajine. Produkty s týmto symbolom sa nesmú vyhazovať spolu s domovým odpadom.
- EE** See sümbol näitab, et EL-i maades tuleb see toode olemprügist eraldi koguda, nii nagu on igas piirkonnas määratletud. Selle sümboliga märgitud tooteid ei tohi ära visata koos olmeprügiga.
- LT** Šis simbolis rodo, kad ES šalyse šis produktas turi būti surenkamas atskirai nuo buitinių atliekų, kaip nustatyta kiekviename regione. Šiuo simboliu paženklinėti produktai neturi būti išmetami kartu su buitiniems atliekomis.
- LV** Šis simbols norāda, ka ES valstīs šo produktu jāievāc atsevišķi no mājsaimniecības atkritumiem, kā noteikts katrā reģionā. Produkts ar šo simbolu nedrīkst izmest kopā ar mājsaimniecības atkritumiem.
- SI** Ta simbol označuje, da je treba proizvod v državah EU zbirati ločeno od gospodinjskih odpadkov, tako kot je določeno v vsaki regiji. Proizvoda s tem znakom ni dovoljeno odlagati skupaj z gospodinjskimi odpadki.
- GR** Το σύμβολο αυτό υποδηλώνει ότι στις χώρες της Ε.Ε. το συγκεκριμένο προϊόν πρέπει να συλλέγεται χωριστά από τα υπόλοιπα οικιακά απορρίμματα, σύμφωνα με όσα προβλέπονται σε κάθε περιοχή. Τα προϊόντα που φέρουν το συγκεκριμένο σύμβολο δεν πρέπει να απορρίπτονται μαζί με τα οικιακά απορρίμματα.

 This product complies with the requirements of EMCD 2014/30/EU and LVD 2014/35/EU.

For the U.K.:

IMPORTANT:

As the colors of the wires in the mains lead of this apparatus may not correspond with the colored markings identifying the terminals in your plug, proceed as follows:

The wire which is colored GREEN-AND-YELLOW must be connected to the terminal in the plug which is marked by the letter E or by the safety earth symbol  or colored GREEN or GREEN-AND-YELLOW.

The wire which is colored BLUE must be connected to the terminal which is marked with the letter N or colored BLACK.

The wire which is colored BROWN must be connected to the terminal which is marked with the letter L or colored RED.

For additional safety, all externally accessible metal parts (such as headphones, Aux-in/out, MIDI, toe pistons, etc.) are floating from safety earth.

THIS APPARATUS MUST BE EARTHED

THE WIRES IN THIS MAINS LEAD ARE COLOURED IN ACCORDANCE WITH THE FOLLOWING CODE.

GREEN-AND-YELLOW: EARTH, BLUE: NEUTRAL, BROWN: LIVE

WARNING:

仅适用于海拔2000m以下地区安全使用。



《2000m تەڭ يەر يۈزىدىن ئېگىزلىكتە بولغان رايونلاردا بۇ ئۈسكۈنىنى قوللىنىشقا بولمايدۇ.》

“تۈركىيە دۆلىتىنىڭ ئېگىزلىكى 2000 مېتىردىن تۆۋەن رايونلاردا بۇ ئۈسكۈنىنى قوللىنىشقا بولمايدۇ.”

Dan hab yungh youq gij digih haijbaz 2000m doxroengz haenx ancienz sawjyungh.

دېڭىز يۈزىدىن 2000 مېتىر تۆۋەن رايونلاردا بۇ ئۈسكۈنىنى قوللىنىشقا بولمايدۇ.



