User's Manual

JOHANNUS

Opus 5, 10, 20 and 30

Document information

Document Code	OPUSV202US.wpd
Document Title	User's Manual JOHANNUS Opus 5, 10, 20 and 30
Issue date	June 1998
Serial number	

© Copyright 1998 JOHANNUS Orgelbouw The Netherlands

All rights reserved. No part of this publication may be reproduced and/or published by print, microfilm, audiotape, electronically, mechanically or any other means, or stored in an information retrieval system, without prior written permission from JOHANNUS Orgelbouw.

The information in this document is subject to change without notice and should not be considered a commitment by Johannus Orgelbouw b.v. No responsibility is assumed for any error which may be appear in this document.

Introduction

Congratulations on your decision to purchase a new JOHANNUS organ. You are now the owner of an instrument with a well-chosen and balanced selection of stops. This organ gives you the opportunity to perform the full repertoire of classical and liturgical organ music.

This User's Manual contains a lot of useful information. First we present an overview of the organ, and then we present tips on use. Finally, we investigate all of your organ's technical possibilities, including how to choose another temperament, using free combinations, MIDI applications and so

In the appendices you will find options, technical information, MIDI implementation charts and registration examples.

Table of Contents

An ove	rview	1
	The organ cabinetry	1
	The console	1
	The music rack	1
	The roll-top	1
	The pedalboard	
	The organ bench	
Set up		3
oct up	Connecting the organ	
	Switching on he organ	
	Switching on the organ	J
The co	naala in datail	
The co	nsole in detail	
	Overview of the controls per type	
	Opus 5	
	Opus 10 and 20	
	Opus 30	
	Accessories	7
	Couplers	7
	Tremulants	7
	Chorus	8
	Intonation 2	8
	Stops	9
	Flue pipes	
	Reeds	
	Overview of stops per type	
		11
		 11
		 11
	, ,	 11
	, ,	' ' 11
		 11
		1 1 11
		1 1 11
	CF = Cantus Firmus	
	FA = Fix Accessories (Freeze Accessories)	
	SET	
	1 thru 8	
	M1 thru M4	12
	PP thru T 1	
	0	
		12
		13
	PITCH 1	13
	TRANSPOSER 1	13
	ACOUSTICS 1	13
	Memory lock	13
	MEMORYLOOK	

	I connections		
	MIDI IN		
	MIDI THRU		
	MIDI OUT		
	AUX IN	 	14
	AUX OUT	 	14
	EXT. REV	 	14
	PHONES		
Choice of temp	erament	 	16
	emperament		
	neister III temperament		
	ne temperament		
Widanto	to tomporament	 	
Using free com	binations (capture system)	 	17
	re free combinations?		
	set free combinations		
Recallin	g the free combinations	 	10
MIDI application	na		40
	ns		
	MIDI?		
How and	d what to connect?	 	19
. .:			
	odule		
	al Crescendo		
Toe Stu	ds	 	20
Expande	ed capture	 	20
External	I Loudspeaker system	 	21
3-positio	on switch	 	21
Maintenance .		 	22
Guarantee		 	22
Appendices		 	23
	al specifications		
	al specifications cabinet		
	plementation charts		
	OPUS 5	 	25
	OPUS 10		
	OPUS 20	 	
	OPUS 30		28
			29
	ation examples		
	Registration examples Opus 5		29
	Personal registrations Opus 5		30
	Registration examples Opus 10		
	Personal registrations Opus 10		
	Registration examples Opus 20		
	Personal registrations Opus 20		
	Registration examples Opus 30		
	Personal registrations Opus 30	 	36

An overview

The organ cabinetry

The organ cabinet consists of the console shell, music-rack, pedalboard and bench. Our standard organ cabinet is designed in dark or light oak with solid wood panels. Your organ may be custom-ordered in another finish, color or wood.

The console

Typically, the console consists of two or three manuals and several accessories. The keyboards have a church organ touch and are normally designed with synthetic key surfaces. You may custom-order wooden keys. For more information, read "The console in detail".

The music rack

The music rack is typically not yet installed at the time of delivery. You can insert the music rack into the groove provided on the top panel of the organ cabinet.

The roll-top

The wooden roll-top cover is provided with a lock and key. The lock is placed behind the music-rack on the top of the organ.

Open the organ in the following way:

- 1. Put the key in the lock.
- 2. Rotate the key a quarter turn; the lock moves upwards.
- 3. Push the roll-top upwards.

Lock the organ in the following way:

- 1. Make certain that you have the key handy (see warning).
- 2. Pull at the roll-top toward you.
- 3. Push in the cover-lock.

Warning

You can lock the organ without using the key. However, the key is necessary to open the organ. Therefore, always take care that the key is not left within the console before depressing the lock.

The pedalboard

Typically, the organ has a 30-note flat pedalboard. Other pedalboards are optional.

The pedalboard is removable. At the front of each pedal key is a magnet. This magnet normally sits in close proximity to a reed switch, which is invisibly mounted behind the black painted front panel at the bottom of the console. When you depress a pedal key, the reed switch is activated by the magnet at the end of the key.

Your new organ has lighting above the pedalboard which is switched on and off automatically with the organ.

The following points are important for installing the pedalboard:

- 1. Make sure that the surface under the console in combination with the pedalboard is flat.
- 2. For the best alignment of the pedalboard, it may be necessary to adjust the console height slightly while positioning the pedalboard.
- 3. Shift the pedalboard against the black painted front panel as close as possible.

The organ bench

Your organ is provided with a bench that contains a music shelf. If you wish, you can order an adjustable-height bench.

Set up

Connecting the organ

Pay close attention to the following points when you connect the organ:

- 1. Check the main voltage before you connect the organ. This voltage must be the voltage as printed on the serial numberplate located on the left side under the keyboards.
- 2. Connect the organ to a grounded outlet. When this is not possible there is a chance some functions will not work properly.

Switching on he organ


Switch on the organ by depressing the main power switch located on the right side of thekeyboards. The red pilot lamp will light up as soon as the organ is switched on. It takes a few seconds before all controls are working. The computer circuit needs this time to initialize.

The console in detail

Overview of the controls per type

The number and the location of the controls are different by type. The following pages show controls of the different Opus models.


Opus 5

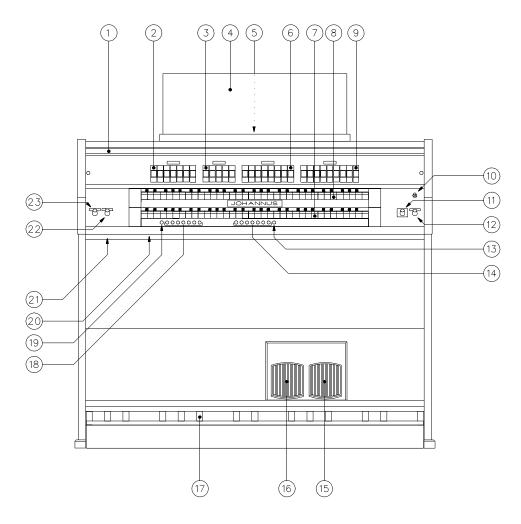

- 1. Roll-top cover
- 2. Accessories
- 3. PEDAL stops
- 4. Music rack
- 5. Roll-top cover lock
- 6. GREAT stops
- 7. Great keyboard
- 8. Swell keyboard
- 9. SWELL stops
- 10. Power switch
- 11. TRANSPOSER control
- 12. PITCH control
- 13. Thumb piston
 - MB (Manual Bass)
- 14. Thumb pistons
 - Presets
- 15. Expression pedal SWELL
- 16. Expression pedal GREAT+PEDAL
- 17. Pedal
- 18. Thumb pistons
 - 1 thru 7
- 19. Thumb piston
 - SET
- 20. Serial number plate
- 21. External connections
- 22. ACOUSTICS control
- 23. VOLUME control

Opus 10 and 20

The Opus 20 has more stops than the Opus 10. De location of the controls is the same.

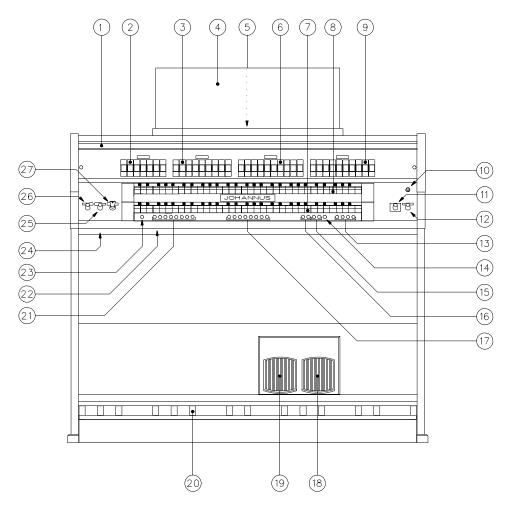


- 1. Roll-top cover
- 2. Accessories
- 3. PEDAL stops
- 4. Music Rack
- 5. Roll-top cover lock
- 6. GREAT stops
- 7. Great keyboard
- 8. Swell keyboard
- 9. SWELL stops
- 10. Power switch
- 11. TRANSPOSER control
- 12. PITCH control

- 13. Thumb pistons
 - M1 thru M4
- 14. Thumb piston
 - FA (Fix Accessories)
- 15. Thumb pistons
 - MB (Manual Bass)
 - CF (Cantus Firmus)
- 16. Thumb pistons
 - WM (Werckmeister)
 - MT (Meantone)
- 17. Thumb pistons
 - Presets

- 18. Expression pedal SWELL
- 19. Expression pedal GREAT+PEDAL
- 20. Pedal
- 21. Thumb pistons
 - 1 thru 8
- 22. Serial number plate
- 23. Thumb piston
 - SET
- 24. External connections
- 25. ACOUSTICS control
- 26. VOLUME control
- 27. Key switch MEMORY LOCK

Opus 30

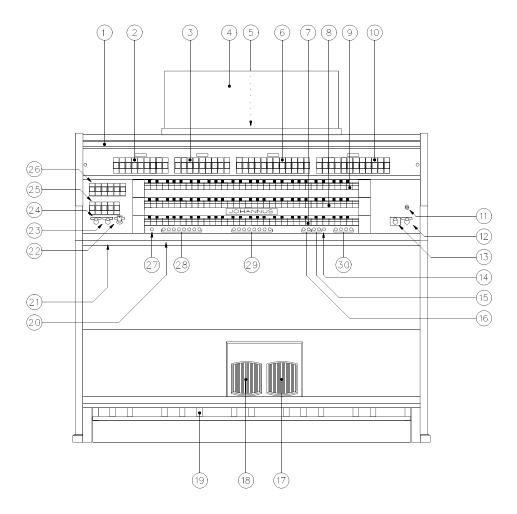

- 1. Roll-top cover
- 2. PEDAL stops
- 3. CHOIR stops
- 4. Music rack
- 5. Roll-top cover
- 6. GREAT stops
- 7. Choir keyboard
- 8. Great keyboard
- 9. Swell keyboard
- 10. SWELL stops
- 11. Power switch
- 12. PITCH control
- 13. TRANSPOSERcontrol

- 14. Thumb piston
 - FA (Fix Accessories)
- 15. Thumb pistons
 - MB (Manual Bass)
 - CF (Cantus Firmus)
- 16. Thumb pistons
 - WM (Werckmeister)
 - MT (Meantone)
- 17. Expression pedal CHOIR+SWELL
- 18. Expression pedal GREAT+PEDAL
- 19. Pedal
- 20. Serial number plate
- 21. External connections

- 22. Key switch MEMORY LOCK
- 23. ACOUSTICS control
- 24. VOLUME control
- 25. Accessories
- 26. Couplers
- 27. Thumb piston
 - SET
- 28. Thumb pistons
 - 1 thru 8
- 29. Thumb pistons
 - Presets
- 30. Thumb pistons
 - M1 thru M4

Accessories

The following accessories are standard:

- Couplers
- Tremulants
- Chorus
- Intonation 2

Couplers

All couplers are full unison couplers. This means all depressed keys are coupled.

Choir - Great (only for Opus 30)

This coupler couples the Choir to the Great. When playing keys on the Great, the corresponding keys on the Choir will be played as well. This way you can add all stops of the Choir to the Great.

Swell - Great

This coupler couples the Swell to the Great. When playing keys on the Great, the corresponding keys on the Swell will be played as well. This way you can add all stops of the Swell to the Great.

Swell - Choir (Only for Opus 30)

This coupler couples the Swell to the Choir. When playing keys on the Choir, the corresponding keys on the Swell will be played as well. This way you can add all stops of the Swell to the Choir.

Choir - Pedal (Only for Opus 30)

This coupler couples the Choir to the Pedal. When playing keys on the Pedal, the corresponding keys on the Choir will be played as well. This way you can add all stops of the Choir to the Pedal.

Great - Pedal

This coupler couples the Great to the Pedal. When playing keys on the Pedal, the corresponding keys on the Great will be played as well. This way you can add all stops of the Great to the Pedal.

Swell - Pedal

This coupler couples the Swell to the Pedal. When playing keys on the Pedal, the corresponding keys on the Swell will be played as well. This way you can add all stops of the Swell to the Pedal.

Tremulants

The tremulants are meant to vibrate the sound of the organ especially with slow or soft music. Every division has its own independent tremulant.

When you use couplers and/or the CF piston the tremulants will be coupled to the corresponding keyboards.

Chorus

To avoid the organ sounding too sterile, the instrument is designed with various stops tuned differently in relation to each other. These small differences give the organ a broader, more lively character. Switching on this stop will intensify the difference in tuning between the various voices.

Intonation 2

Intonation determines the sound of the organ. In pipe organ-building the voicing is a very important part of the building process. Every stop will be adjusted note by note to the room where the organ is installed.

Your organ has two intonations, a romantic and a baroque intonation. In general a romantic organ is wider and sounds symphonic, while a baroque organ is brighter and more tightly tuned. Also see under "Choice of temperament".

Stops

The stops are on so-called tab stops. These are switches that will come back in their middle position after being switched on or off. Therefore, in every tab a light will light up when that stop is switched on. These stop lights also work with the use of presets and free combinations.

The last stop of each group is a MIDI-stop. For the use of these stops see chapter "MIDI applications".

On a pipe organ you switch a rank of pipes on or off with the stops. By varying the combinations of stops the organist can create dynamic and colorful changes. This means that some knowledge of the traditional pipe organ is necessary to make good stop combinations. You should know a little bit about the different sounds of the different organ stops. That is why we give a brief explanation about these different kinds of organ stops.

In the appendices you will find extensive examples of registrations.

Organ pipes can be divided in two main groups:

- Flues
- Reeds

Flue pipes

Flue pipes occur in two versions: open or (half) stopped. An example of a half-stopped pipe is the Rohrflute. On the canister-stopper a small open tube has been soldered. An example of an open flue pipe is the Principal. Normally the pipes of this stop are located in the facade of a pipe organ. Flues can be subdivided in the following categories:

Principals

Principals are the Principal, Octave, Twelfth, Superoctave, Mixture, Scharff, Cymbal, Rauschpfeife and Sesquialter. The last 5 stops sound with more than one pipe of different pitch together per note. So called multi rank stops.

Strings

These are the narrow scaled, open flue pipes like: Viola di gamba, Vox Celeste and Salicional.

Flutes

Flute stops, open as well as stopped, are made of metal or wood. For example: Stopped Flute, Gedackt, Bourdon, Subbass, Nazard, Waldflute, Gemshorn and Rohrflute.

Reeds

In a reed pipe the wind is blown into the pipe bringing a reed into resonance. This resonance is 'amplified' and 'colored' by a tube (resonator). Reeds with a conical resonator are: Bombarde, Trumpet, Schalmei, etc. The group of cylindrical resonators are: Fagotto, Cromorne, Krummhorn, etc. The following reeds have a short resonator: Regal, Vox Humana, Ranket, etc.

Overview of stops per type

You will find an overview of stops per organ in the appendix under examples of registrations. Next to the stopnames you normally find the length, e.g. 8'. This means that the body of this pipe for the lowest C key is 8' (appr. 240 cm). A stop with 16' sounds one octave lower.

Volume adjustment

The volume is adjustable in the following ways:

VOLUME control

With the VOLUME control you adjust the General Volume, independent of the position of the expression pedals. Therefore, this control has influence on each keyboard.

Expression pedal Great + Pedal

With the left expression pedal you adjust the Great and Pedal volume at the same time.

Expression pedal Swell + Choir

With the right expression pedal you adjust the volume of the Swell and Choir at the same time (the last part for Opus 30 only).

Both expression pedals work independently of the position of the VOLUME control.

Thumb pistons

WM = Werckmeister

By pushing this piston you choose for the Werckmeister temperament. See under chapter "Choice of temperament".

MT = Meantone

By pushing this piston you choose for the Meantone temperament. See under chapter "Choice of temperament".

MB = Manual Bass

By pushing this piston the pedal will be coupled to the Great keyboard automatically. When you play a chord on the Great, the lowest key of this chord will be coupled from the Pedal to the Great.

CF = Cantus Firmus

By pushing this piston the Swell will be coupled to the Great keyboard. When you play a chord on the Great, the highest key of this chord will be coupled from the Swell to the Great. This way the effect of an automatic solo can be achieved. In case the Swell to Great coupler is already in use the CF function has no effect.

FA = Fix Accessories (Freeze Accessories)

When you use the couplers and tremulants in the fixed combinations (presets) or in the free combinations (capture system) or by using the thumb piston "0" (cancel) these will change too. You can avoid this by using the FA thumb piston. As long as this piston is switched on, you can only switch the couplers and tremulants on or off by hand.

SET

A thumb piston to program free combinations. See under chapter "Using the free combinations".

1 thru 8

Thumb pistons to store a personal registration into the capture memory by giving these registrations a number (1 thru 8) within a memory level (bank). These thumb pistons you need again to call these stored registrations from the capture memory. See under chapter "Using the free combinations".

M1 thru M4

Thumb pistons with which you store a personal registration into the capture memory (M1 thru M4). These thumb pistons you need again to call these stored registrations from thecapture memory. See under chapter "Using the free combinations".

PP thru T

The fixed combinations (presets) are registrations, preset according to musical standards, starting by PP (Pianissimo: very soft) thru T (Tutti: full organ).

The Tutti piston has two functions. When you play a stop combination chosen by yourself or from the presets (PP thru F) the T piston calls the full organ: the normal function of this piston. However, when you push the T once more you will recall the previous registration.

These presets have been fixed in the factory and cannot be changed by the user.

When you push one of the preset pistons the factory programmed stops will light up accordingly. It is always possible to switch stops on or off by hand.

The "0" (cancel) piston is located to the right of the T piston.

The piston has two functions. It may happen that you switch on a preset or add a stop by hand by mistake. By pushing the "0" once quicky you will undo the latest change.

You play the registration of Flute 8', Flute 4', and Flute 2'. After some time you add the Principal 8' and Principal 4'. There is always a very short time between switching on the Principal 8' and the Principal 4'. By pushing the 0 piston briefly only the Principal 4' will be switched off (undo the last change). Not the Principal 8' as well as the Principal 4' will be switched off (according to the organist this would be his last change). Actually the organ sees the Flute 8', Flute 4', Flute 2' and the Principal 8' as the previous registration and the organist the combination Flute 8', Flute 4', and Flute 2' as the last one.

When pushing the "0" piston longer all stops will be switched off at once. Exceptions are: the couplers and the tremulants when the FA piston is switched on and the stops Chorus, Intonation 2 and the MIDI.

RO = reeds off

Located to the far right of the presets is the RO (Reeds Off) thumb piston. By pushing this piston all reeds will be switched off at once. As long as the RO piston is switched on no reeds can be switched on.

Controls

PITCH

With this control you can adjust the temperament of the organ in quarter steps.

This control has a central position indication, which means that, when turning, you can feel this control click in this central position. This central position is meant to tune the organ (with the TRANSPOSER control on position 0) on A=440 Hz

TRANSPOSER

With this control it is possible to transpone the organ. This means that the organ can be transposed 1, 2 or 3 set half steps lower or higher. When the position of the control is 0, the standard pitch for the organ is A=440 Hz, on the condition that the PITCH control is in central position.

When using the TRANSPOSER in combination with the PITCH control it is possible to adjust the organ 3 half steps higher or lower.

ACOUSTICS


The build-in digital acoustics provide a spacial reverberation of the organ sound. With this ontrol the volume of the reverberation can be adjusted. To completely switch off the reverberations you turn the control to the left.

Memory lock

MEMORY LOCK

To save your registrations or to modify stored registrations, this switch must be switched on. See chapter "Using free combinations".

External connections

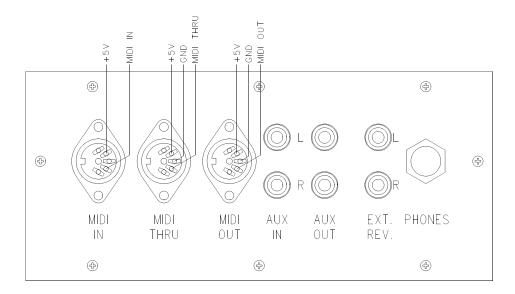

The following external conceptions are located left under the console:

MIDI IN

To receive MIDI-codes from the otherdevices.

MIDI THRU

For relaying incoming MIDI codes from other devices.

MIDI OUT

To send MIDI-codes to other devices.

This input can be used to amplify the sound of an external device through the speakers of the organ. E.g., it is possible to play the sound of an expander module that is controlled by the organ's MIDI out through the organ's speakers.

The volume of the device that is connected to the AUX IN cannot be adjusted by the expression pedals or the VOLUME control (except external devices that are controlled by the organ's MIDI OUT).

AUX OUT

This output is meant to connect an external stereo amplifier.

EXT. REV.

The connection EXTERN REVERB is specifically for the JOHANNUS external surround acoustics device. This system, that works with 4 independent loudspeaker boxes in the room, creates a realistic acoustical impression of a concert hall, church or cathedral. It is not recommended to use this output for other purposes.

PHONES

This is the connection for a stereo headphone and suited for up to 2000 ohm. Using a low impedance headphone (e.g. 8 ohm) may give a too loud a volume. This can be regulated with the VOLUME control.

When using a headphone the organ loudspeakers will be automatically switched off. All loudspeaker channels will be divided stereophonically through the two headphone channels.

Choice of temperament

The temperament is the way the different notes within an octave are tuned. This has been changed through the ages, depending on taste, different instruments and new instruments.

On this JOHANNUS organ you may choose from 3 different temperaments:

- Equal temperament
- Werckmeister III temperament
- Meantone temperament

Equal temperament

Today the most widely used and accepted temperament is the "equal temperament". This is a tuning where all 12 quints have been undertuned and all tierces have been overtuned to keep the octave pure. Equal temperament is standard on the Johannus organ. In addition you have a choice out of a Romantic voicing and a Baroque voicing. On an instrument with Equal temperament you may play in any key.

Werckmeister III temperament

Andreas Werckmeister introduced his tuning approximately in 1691 in Germany. Within this temperament the often used tierces are more or less pure tuned. Every key has his own specific character. This effect has been used extensively in the baroque age and even after that. Johann Mattheson writes in 1713 that e.g. f-flat is used to express a resigned, deep and desperate agony. According to him C major is impertinent, but not unsuitable to also express feelings of joy. This temperament is recommended with "intonation 2".

Meantone temperament

In Meantone the often used tierces are tuned pure. E.g. c-e, d-f#, etc. Because the tierces in chords with quints and tierces are determining the purity of a chord we experience these pure chords as very restful. Playing a chromatic scale it appears there are clear differences between the half steps. It is impossible to play pure sounding chords on the a#, f#, g# and b in a Meantone temperament.

This Meantone temperament was in use until appr. 1650. Music from this period of time is based on this temperament. Because all the half steps the chromatical parts of the music sounds violent. This possibility has often been used to create special feelings among the listeners. The more false the chords, the deeper the emotion.

From the period of time of appr. 1550-1650 there are many examples where also the less pure chords have been used for expressive purposes. Composers that lived and worked then were e.g. Michael Praetorius (1571-1621) and Jan Pieterszoon Sweelinck (1562-1621).

In fact this music needs a Meantone temperament to give it an extra dimension. In our modern equal temperament this music sounds accentless and the true dimension gets lost. This Meantime temperament sounds best with the "intonation 2" switched on.

Using free combinations (capture system)

What are free combinations?

Free combinations are a special kind of presets. The combination of stops in presets are fixed. With free combinations you are able to store your choice of stop combinations into the memory and recall them when needed. This, of course, is especially helpful when many different registrations occur in a piece of music. It makes the help of assistants redundant.

The memory of free combinations is protected so that is cannot be erased when you switch off the organ or when you unplug the organ from the main power.

The capture system consists of the following:

- Key switch MEMORY LOCK
- Thumb pistons M1 M4 (except with Opus 5)
- Thumb piston SET
- Thumb pistons 1 thru 8 (Opus 5: thumb pistons 1 thru 7)

With the capture system you can program 32 personal registrations. These registrations can be recalled at any time. The capture system has four memory banks to be chosen with the thumb pistons M1 thru M4). Every memory bank can store 8 combinations, accessible by the pistons 1 thru 8. On every setter location you may store a personal registration. Only the accessories Chorus, Intonation 2 and the MIDI-stops cannot be stored in the capture system.

On the Opus 5 you can store 7 personal registrations.

How to set free combinations

A free combination is programmed as follows:

- 1. Make the memory accessible by turning the MEMORY LOCK a quarter turn to the right.
- 2. Choose the registration you want to store in the capture system.
- 3. Choose a memory bank (e.g. memory bank M2).
- 4. Push on SET (keep on pushing) and choose the memory number (e.g. piston number 3).
- 5. First release the piston for the memory number (in this example number 3) and then the SET piston.
- 6. Close the memory by turning the key switch MEMORY LOCK a quarter turn to the left and remove, if necessary, the key from the switch.
- 7. Write the programmed combination (e.g. M2-3) in your music paper where you want to use it.

The personal registration has now been stored in memory bank 2 in number 3.

On the Opus 5 a free combination is programmed as follows:

- 1. Choose the registration you want to store in the capture system.
- 2. Push on SET (keep on pushing) and choose the memory number (e.g. piston number
- 3. First release the piston for the memory number (in this example number 3) and then the SET piston.

The personal registration has now been stored in memory number 3.

Recalling the free combinations

To recall the personal registrations it is not necessary to make the capture system accessible with the key switch MEMORY LOCK. Recalling goes as follows:

- 1. Determine the setter combination you want to recall (e.g. M2-3).
- 2. Choose the memory bank (e.g. M2).
- 3. Then choose the memory number (e.g. push piston 3).

In the registration you recalled you may add or remove stops by hand,

On the Opus 5 the recalling of a personal registration goes as follows:

- 1. Determine the setter combination you want to recall (e.g. 3).
- 2. Choose the memory number (e.g. 3).

MIDI applications

What is MIDI?

MIDI is the abbreviation of Musical Instruments Digital Interface. With MIDI different musical instruments can be connected with each other or a computer. For example, it is possible to play on your organ and at the same time on a synthesizer or an expander module. The MIDI standard is partly based on hardware. Next to that it is a worldwide agreement about the way music and sound are being interpreted and communicated between devices that have MIDI capability. The MIDI codes sent by a Johannus organ tell e.g. which key is played.

MIDI consists of the following parts:

- MIDI-connections (MIDI IN, MIDI THRU, MIDI OUT)
- MIDI-stops
- A device (e.g. synthesizer) that you want to connect through MIDI
- Connection cables

The MIDI-stops are the last in the group of stops of the Pedal, Great, Swell and Choir (only for Opus 30).

The MIDI stops have a number. The MIDI number for Great on the OPUS 5, 10 and 20 is number 1 (for Opus 30 the MIDI Great is number 2). This number indicates the MIDI channel used to transfer key information when playing the Great. MIDI has at least 16 channel to transfer data. The MIDI stops determine from which keyboard(s) you send key information to other device(s).

How and what to connect?

Imagine you want to connect 3 expanders to your organ. One you want to play from the Great, the other from the Swell and the third from the Pedal.

The following has to be done:

- 1. Connect the expanders with the MIDI cables (DIN).
- 2. Switch on MIDI stop Great 1. The expander must be configured so that it can only receive data through channel 1.
- 3. Switch on MIDI Swell 2. Set the second expander for channel 2.
- 4. Switch on MIDI stop Pedal 3. Set the third expander for channel 3.

Options

Depending on your choice the instrument may have some options.

Voice module

The stops can be played from the Swell (Opus 5, 10 en 20) or from the Choir (Opus 30). These stops can be seen as extensions of the division.

Generaal Crescendo

This extension means that the instrument has an extra swell pedal: the general crescendo pedal.

With the general crescendo you can add stops in 10 steps from very soft (pianissimo) to full organ (Tutti). The 10 steps are preset according to musical standards.

The general crescendo always has priority above the manual registration, fixed combination or free combination. Also the stops switched on by the general crescendo cannot be canceled with the 0 piston. Within a stop combination of the general crescendo it is possible to add extra stops. Reeds which have been switched on by the general crescendo can be switched off by the RO (Reeds Off) switch.

The standard stop combination of each step within the general crescendo cannot be changed by the user.

Toe Studs

Depending on your choice the organ may have the following Toe Pistons/Studs:

COUPLER pistons

With these toe study you can control couplers. When a coupler is switched off, you can switch it on with the toe studs. Reverse is also possible.

TUTTI piston

This toe stud has the same function as the T thumb piston of the fixed combinations.

CAPTURE pistons

These toe studs have the same function as the memory pistons 1 thru 8.

Expanded capture


A standard Opus configuration has 32 general free programmable combinations. This can be expanded with 32 free combinations per division. This means 32 memories for the Pedal, 32 for the Great, 32 for the Swell and for the Opus 30 32 for the Choir.

The so-called separates (divisionals) can be programmed independently. The programming of the divisionals is the same as the description under "Using the free combinations".

External Loudspeaker system

The organ can be extended with an external loudspeaker system, for example a pipe facade with several speaker boxes behind it. At the back side (or kept internally) is an connector (octal socket). With a special cable you connect the loudspeaker system to the instrument. In that case there will be a 3-position switch on the instrument too.

The 8 pins of the octal socket are connected as follows:

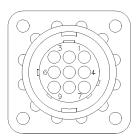

Number	Channel	Organ model
1	Ground (–) ch. 1	Opus
2	Signal (+) ch. 1	5,10,20,30
3	Ground (–) ch. 2	Opus
4	Signal (+) ch. 2	5,10,20,30
5	Ground (–) ch. 3	Opus
6	Signal (+) ch. 3	5,10,20,30
7	Ground (–) ch. 4	Opus
8	Signal (+) ch. 4	10,20,30

3-position switch

This switch enables you to choose between loudspeakers in the organ and the external loudspeakers.

The switch has the following positions:

Position A

The organ sound comes from the loudspeakers in the organ console and not from the external loudspeakers.

Position AB

The organ sound comes from the loudspeakers in the organ console as well as from the external loudspeakers. However, the sound from the loudspeakers in the organ console is softer than the A-position.

Position B

The organ sound comes from the external speakers and not from the console speakers.

Maintenance

The console consists of wooden veneer and solid wooden parts.

To clean the cabinet use a normal duster or a light wet cloth or chamois and polish with a dry cloth.

We do not recommend furniture- or teak oil, because it may be harmful for the lacquer. Direct sunlight may change the color of the cabinet, especially light oak consoles.

The keys can be treated the same as the woodwork. Little scratches that may originate from playing can be removed with car polish. NEVER try to remove spots with aggressive liquors like thinner, acetone, etc. These will irrevocably damage the instrument.

Guarantee

With the purchase of your JOHANNUS Organ you received a limited warrantee card. Please read the conditions carefully and send the bottom part to JOHANNUS Orgelbouw b.v. in Ede as soon as possible. Again we want to emphasize that modifications on the organ or incompetent handling will end the warrantee.

Appendices

Technical specifications

	Opus 5	Opus 10	Opus 20	Opus 30
Voices: Romantic Baroque	19 19	26 26	34 34	38 38
Keyboards (church organ touch): 5 octaves (C-c''') synthetic 5 octaves (C-c''') wood	2 option	2 option	2 option	3 option
Amplifiers/channels (50 Watt max. 8Ω each)	3	4	4	4
Acoustics (adjustable volume)	•	•	•	•
Transposer (6 steps +/- 3 half steps)	•	•	•	•
Pitch (+/- 1/4 tone adjustable)	•	•	•	•
Fixed combinations (Presets) PP-P-MF-F-FF-T	•	•	•	•
Free combinations (Capture system)	7	32	32	32
General volume (MIDI controlled)	•	•	•	•
Expression pedals (MIDI controlled)	2	2	2	2
3-position switch for external loudspeakers	option	option	option	option
Toe studs	option	option	option	option
13 note (C-c) 27 note straight (C-d') 30 note straight (C-f') 30 note concave (C-f') 32 note concave (C-g') 32 note RACO (C-g') 32 note AGO (C-g')	option option option option option option	option option option option option option	option option option option option option option	option option option option
Accessories: Couplers Tremulants Chorus MB = Manual Bass CF = Cantus Firmus FA = Fix Accessoires RO = Reeds off 0 = Cancel	3 2 • •	3 2	3 2	6 3
Temperament: Equal Werckmeister III Meantone	• -	•	•	•
External connections: MIDI In-Thru-Out Headphone Stereo up to $2k\Omega$ External Reverb $470\Omega/300mV$ Aux In $1k\Omega/70mV$ (stereo) Aux Out $470\Omega/300mV$ (stereo) Loudspeaker Outputs 8Ω	• • • • option	• • • option	• • • option	option

Technical specifications cabinet

	Opus 5	Opus 10	Opus 20	Opus 30
Furniture:				
Dark oak or light oak	•	•	•	•
Other colors or kinds of wood	option	option	option	option
Wooden roll cover	•	•	•	•
Wooden expression pedals	option	option	option	option
Pedal lights	•	•	•	•
Bench with storage space	•	•	•	•
Bench with lid	option	option	option	option
Bench with adjustable height	option	option	option	option
Dimensions:				
Height (without music rack)	117 cm	117 cm	117 cm	124 cm
Height (with music rack)	139 cm	139 cm	139 cm	146 cm
Width (27 note straight pedal)	114 cm	114 cm	114 cm	-
Width (30 note straight pedal)	132 cm	132 cm	132 cm	139 cm
Depth (without pedalboard)	63 cm	63 cm	63 cm	74 cm
Depth (with 27/30 note straight pedal)	91 cm	91 cm	91 cm	94 cm

MIDI Implementation charts

JOHANNUS Organ OPUS 5

MIDI Implementation Chart

Date: June 1998 Version 3.00

	Functions	Transmitted	Recognized	Remarks
Basic Channel	Default Changes ¹	1, 2, 3, 12 1, 2, 3	1, 2, 3, 12 N	1 = Great 2 = Swell 3 = Pedal 12 = Stops
Mode	Default Messages Altered	Mode 3 N * * * * * * * *	Mode 3 N N	
Note Number	True voice	36 - 96	36 - 96 36 - 96	
Velocity	Note ON Note OFF	9nH (v=64) 9nH (v=0)	9nH v=1 - 127 9nH v=0, 8nH v=*	*=irrelevant
After Touch	Keys Channels	ZZ	N N	
Pitch Ben	d	N	N	
Control Change	7 11 100/101/6 100/101/6	Y Y Y	Y Y N N	General volume Expression pedals Pitch Transposer
Program Change	:True#	0 - 30 2	0 - 30 ² 0 - 30 ²	0 - 4 Stops Pedal 6 - 13 Stops Great 15 - 23 Stops Swell 24 - 30 Accessories ³
System Ex	xclusive	Υ	Υ	All stops off
Common	:Song Pos :Song Sel :Tune	222	N N N	
System Real Time	:Clock :Commands	Z Z	N N	
Aux	:Reset All Controller :Local On/OFF :All Notes OFF :Active Sense :Reset	Z Z Z Z Z	N N Y N N	
Notes	3	¹ Only note events ca ² Except 5 and 14 ³ Couplers, Tremular	an be changed nts, Chorus and Inton	ation 2

Mode 1: OMNY ON, POLY Mode 3: OMNY OFF, POLY

Mode 2: OMNY ON, MONO Mode 4: OMNY OFF, MONO Y = YES N = NO

MIDI Implementation Chart

Date: June 1998

Version 3.00

	Functions	Transmitted	Recognized	Remarks
Basic Channel	Default Changes ¹	1, 2, 3, 12 1, 2, 3	1, 2, 3, 12 N	1 = Great 2 = Swell 3 = Pedal 12 = Stops
Mode	Default Messages Altered	Mode 3 N * * * * * * * *	Mode 3 N N	
Note Number	True voice	36 - 96 * * * * * * * *	36 - 96 36 - 96	
Velocity	Note ON Note OFF	9nH (v=64) 9nH (v=0)	9nH v=1 - 127 9nH v=0, 8nH v=*	*=irrelevant
After Touch	Keys Channels	N N	N N	
Pitch Bend	d	N	N	
Control Change	7 11 100/101/6 100/101/6	Y Y Y	Y Y N N	General volume Expression pedals Pitch Transposer
Program Change	:True#	0-382	0 - 38 ² 0 - 38 ²	0 - 8 Stops Pedal 10 - 19 Stops Great 21 - 30 Stops Swell 32 - 38 Accessories ³
System Ex	cclusive	Υ	Υ	All stops off
Common	:Song Pos :Song Sel :Tune	N N N	N N N	
System Real Time	:Clock :Commands	N N	N N	
Aux	:Reset All Controller :Local On/OFF :All Notes OFF :Active Sense :Reset	N N N N N	N N Y N	
Notes		¹ Only note events ca ² Except 9, 20 and 3 ³ Couplers, Tremular	an be changed 1 nts, Chorus and Inton	ation 2

Mode 1: OMNY ON, POLY Mode 2: OMNY ON, MONO Y = YES Mode 3: OMNY OFF, POLY Mode 4: OMNY OFF, MONO N = NO

MIDI Implementation Chart

Date: June	1998
Version	3.00

	Functions	Transmitted	Recognized	Remarks
Basic Channel	Default Changes ¹	1, 2, 3, 12 1, 2, 3	1, 2, 3, 12 N	1 = Great 2 = Swell 3 = Pedal 12 = Stops
Mode	Default Messages Altered	Mode 3 N * * * * * * * *	Mode 3 N N	
Note Number	True voice	36 - 96 * * * * * * * *	36 - 96 36 - 96	
Velocity	Note ON Note OFF	9nH (v=64) 9nH (v=0)	9nH v=1 - 127 9nH v=0, 8nH v=*	*=irrelevant
After Touch	Keys Channels	N N	N N	
Pitch Bend	d	N	N	
Control Change	7 11 100/101/6 100/101/6	Y Y Y	Y Y N N	General volume Expression pedals Pitch Transposer
Program Change	:True#	0-462	0 - 46 ² 0 - 46 ²	0 - 8 Stops Pedal 10 - 23 Stops Great 25 - 38 Stops Swell 40 - 46 Accessories ³
System Ex	clusive	Υ	Υ	All stops off
Common	:Song Pos :Song Sel :Tune	ZZZ	N N N	
System Real Time	:Clock :Commands	N N	N N	
Aux	:Reset All Controller :Local On/OFF :All Notes OFF :Active Sense :Reset	N N N N	N N Y N N	
Notes		¹ Only note events ca ² Except 9, 24, and 3 ³ Couplers, Tremular	an be changed 9 nts, Chorus and Inton	ation 2

Mode 1: OMNY ON, POLY Mode 3: OMNY OFF, POLY Mode 2: OMNY ON, MONO Mode 4: OMNY OFF, MONO Y =YES N = NO

MIDI Implementation Chart

Date: June	1998
Version	3.00

	Functions	Transmitted	Recognized	Remarks
Basic Channel	Default Changes ¹	1, 2, 3, 4, 12 1, 2, 3, 4	1, 2, 3, 4, 12 N	1 = Choir 2 = Great 3 = Swell 4 = Pedal 12 = Stops
Mode	Default Messages Altered	Mode 3 N * * * * * * * *	Mode 3 N N	
Note Number	True voice	36 - 96	36 - 96 36 - 96	
Velocity	Note ON Note OFF	9nH (v=64) 9nH (v=0)	9nH v=1 - 127 9nH v=0, 8nH v=*	*=irrelevant
After Touch	Keys Channels	N N	N N	
Pitch Ben	d	N	N	
Control Change	7 11 100/101/6 100/101/6	Y Y Y	Y Y N N	General volume Expression pedals Pitch Transposer
Program Change	:True#	0-60 ² * * * * * * *	0 - 60 ² 0 - 60 ²	0 - 8 Stops Pedal 10 - 18 Stops Positif 20 - 31 Stops Great 33 - 44 Stops Swell 48 - 53 Accessories ³ 56 - 60 Accessories ⁴
System Ex	cclusive	Υ	Υ	All stops off
Common	:Song Pos :Song Sel :Tune	N N N	N N N	
System Real Time	:Clock :Commands	N N	N N	
Aux	:Reset All Controller :Local On/OFF :All Notes OFF :Active Sense :Reset	N N N N N	N N Y N N	
Notes		¹ Only note events ca ² Except 9, 19, 32, 4 ³ Couplers ⁴ Tremulants, Chorus	5-47 and 54-55	

Mode 1: OMNY ON, POLY Mode 2: OMNY ON, MONO Y =YES Mode 3: OMNY OFF, POLY Mode 4: OMNY OFF, MONO N = NO

Registration examples

Registration examples Opus 5

									Solo on Great	Swell			0	
) on (Solo on S	-	7	Romantic	шш
		ddd	dd	d	mf	4	Ħ	t	Solc	Solc	Trio 1	Trio 2	Ron	Plenum
PEDAL														
Subbass	16'	•	•	•	•	•	•	•	•	•	•	0	•	•
Octave	8'	0	0	0	•	•	•	•	0	0	0	0	0	•
Gedackt	8'	0	0	•	•	•	•	•	•	0	•	•	0	0
Fagotto	16'	0	0	0	0	0	0	•	0	0	0	0	0	0
GREAT														
Principal	8'	0	0	0	•	•	•	•	•	0	0	0	0	•
Rohrflute	8'	•	•	•	•	•	•	•	0	•	•	•	•	0
Octave	4'	0	0	0	•	•	•	•	0	0	0	0	0	•
Octave	2'	0	0	0	0	0	•	•	0	0	•	0	0	•
Sesquialter	П	0	0	0	0	0	0	0	•	0	0	0	0	0
Mixture	II-IV	0	0	0	0	0	0	•	0	0	0	0	0	•
Trumpet	8'	0	0	0	0	0	0	•	0	0	0	0	0	0
SWELL														
Stopped Flute	8'	0	•	•	•	•	•	•	•	0	•	0	•	•
Viola di Gamba		•	•	•	•	•	•	•	0	0	0	•	•	0
Vox Celeste	8'	0	0	0	0	0	0	0	0	0	0	0	•	0
Koppelflute	4'	0	0	•	•	•	•	•	•	0	•	0	0	•
Flute Twelfth	2 ² /3'	0	0	0	0	•	•	•	0	0	•	0	0	•
Waldflute	2'	0	0	0	0	•	•	•	0	0	0	0	0	•
Nazard	1 ¹ /3'	0	0	0	0	0	0	•	0	0	•	0	0	•
Oboe	8'	0	0	0	0	•	•	•	0	•	0	0	0	0
ACCESSORIE	S													
Swell-Great		0	•	•	•	•	•	•	•	0	0	0	•	•
Great-Pedal		0	0	•	•	•	•	•	0	•	0	0	•	•
Swell-Pedal		•	•	•	•	•	•	•	•	0	0	0	•	•
Tremulant Gre	at	0	0	0	0	0	0	0	0	0	0	0	•	0
Tremulant Swe	ell	0	0	0	0	0	0	0	0	•	0	0	•	0
Chorus		0	0	0	0	0	0	0	0	0	0	0	•	0

Personal registrations Opus 5

PEDAL														
Subbass	16'	0	0	0	0	0	0	0	0	0	0	0	0	0
Octave	8'	0	0	0	0	0	0	0	0	0	0	0	0	0
Gedackt	8'	0	0	0	0	0	0	0	0	0	0	0	0	0
Fagotto	16'	0	0	0	0	0	0	0	0	0	0	0	0	0
. agono	10	O	Ü	Ü	Ü	Ü	Ü	Ü	Ü	Ü	Ü	O	Ü	Ü
GREAT														
Principal	8'	0	0	0	0	0	0	0	0	0	0	0	0	0
Rohrflute	8'	0	0	0	0	0	0	0	0	0	0	0	0	0
Octave	4'	0	0	0	0	0	0	0	0	0	0	0	0	0
Octave	2'	0	0	0	0	0	0	0	0	0	0	0	0	0
Sesquialter	II	0	0	0	0	0	0	0	0	0	0	0	0	0
Mixture	II-IV	0	0	0	0	0	0	0	0	0	0	0	0	0
Trumpet	8'	0	0	0	0	0	0	0	0	0	0	0	0	0
SWELL														
Stopped Flute	8'	0	0	0	0	0	0	0	0	0	0	0	0	0
Viola di Gamba	8'	0	0	0	0	0	0	0	0	0	0	0	0	0
Vox Celeste	8'	0	0	0	0	0	0	0	0	0	0	0	0	0
Koppelflute	4'	0	0	0	0	0	0	0	0	0	0	0	0	0
Flute Twelfth	2 ² / ₃ '	0	0	0	0	0	0	0	0	0	0	0	0	0
Waldflute	2'	0	0	0	0	0	0	0	0	0	0	0	0	0
Nazard	1 ¹ / ₃ '	0	0	0	0	0	0	0	0	0	0	0	0	0
Oboe	8'	0	0	0	0	0	0	0	0	0	0	0	0	0
ACCESSORIES	3													
Swell-Great		0	0	0	0	0	0	0	0	0	0	0	0	0
Great-Pedal		0	0	0	0	0	0	0	0	0	0	0	0	0
Swell-Pedal		0	0	0	0	0	0	0	0	0	0	0	0	0
Tremulant Grea		0	0	0	0	0	0	0	0	0	0	0	0	0
Tremulant Swe	II	0	0	0	0	0	0	0	0	0	0	0	0	0
Chorus		0	0	0	0	0	0	0	0	0	0	0	0	0

Registration examples Opus 10

									Solo on Great	n Swell			ntic	E
		ddd	dd		mf				olo oı	Solo on	Trio 1	Trio 2	Romantic	Plenum
		Q	Q	d	2	f	Ħ	ţ	S	(f)	-	-	Ľ	ш
PEDAL														
Principal	16'	0	0	0	0	•	•	•	0	0	0	0	0	•
Subbass	16'	•	•	•	•	•	•	•	•	•	•	0	•	•
Octave	8'	0	0	0	•	•	•	•	0	0	•	0	0	•
Gedackt	8'	0	0	•	•	•	•	•	•	0	0	•	0	0
Choralbass	4'	0	0	0	0	0	•	•	0	0	0	0	0	•
Nachthorn	2'	0	0	0	0	0	•	•	0	0	0	0	0	•
Contra Trumpet	16'	0	0	0	0	0	0	•	0	0	0	0	0	0
Trumpet	8'	0	0	0	0	0	•	•	0	0	0	0	0	0
GREAT														
Principal	8'	0	0	0	•	•	•	•	0	0	0	0	0	•
Rohrflute	8'	•	•	•	•	•	•	•	•	•	•	•	•	0
Octave	4'	0	0	0	•	•	•	•	0	0	0	0	0	•
Open Flute	4'	0	0	•	•	•	•	•	•	0	0	0	0	0
Twelfth	2 ² /3'	0	0	0	0	•	•	•	0	0	0	0	0	•
Octave	2'	0	0	0	0	0	•	•	0	0	•	0	0	•
Cornet	IV	0	0	0	0	0	0	0	•	0	0	0	0	0
Mixture	V	0	0	0	0	0	0	•	0	0	0	0	0	•
Trumpet	8'	0	0	0	0	0	0	•	0	0	0	0	0	0
SWELL														
Stopped Flute	8'	0	•	•	•	•	•	•	•	0	•	0	0	•
Viola di Gamba	8'	•	•	•	•	•	•	•	•	0	0	•	•	0
Vox Celeste	8'	0	0	0	0	0	0	0	0	0	0	0	•	0
Koppelflute	4'	0	0	•	•	•	•	•	•	0	•	0	0	•
Flute Twelfth	$2^2/_3$	0	0	0	0	•	•	•	0	0	•	0	0	•
Waldflute	2'	0	0	0	0	•	•	•	0	0	0	0	0	•
Tierce	1 ³ / ₅ '	0	0	0	0	0	0	0	0	0	•	0	0	0
Scharff	III	0	0	0	0	0	•	•	0	0	0	0	0	•
Oboe	8'	0	0	0	0	•	•	•	0	•	0	0	0	0
ACCESSORIES														
Swell-Great		0	•	•	•	•	•	•	•	0	0	0	•	•
Great-Pedal		0	0	•	•	•	•	•	0	•	0	0	•	•
Swell-Pedal		•	•	•	•	•	•	•	•	0	0	0	•	•
Tremulant Great		0	0	0	0	0	0	0	0	0	0	0	•	0
Tremulant Swell		0	0	0	0	0	0	0	0	•	0	0	•	0
Chorus		0	0	0	0	0	0	0	0	0	0	0	•	0

Personal registrations Opus 10

PEDAL														
Principal	16'	0	0	0	0	0	0	0	0	0	0	0	0	0
Subbass	16'	0	0	0	0	0	0	0	0	0	0	0	0	0
Octave	8'	0	0	0	0	0	0	0	0	0	0	0	0	0
Gedackt	8'	0	0	0	0	0	0	0	0	0	0	0	0	0
Choralbass	4'	0	0	0	0	0	0	0	0	0	0	0	0	0
Nachthorn	2'	0	0	0	0	0	0	0	0	0	0	0	0	0
Contra Trumpet	16'	0	0	0	0	0	0	0	0	0	0	0	0	0
Trumpet	8'	0	0	0	0	0	0	0	0	0	0	0	0	0
GREAT														
Principal	8'	0	0	0	0	0	0	0	0	0	0	0	0	0
Rohrflute	8'	0	0	0	0	0	0	0	0	0	0	0	0	0
Octave	4'	0	0	0	0	0	0	0	0	0	0	0	0	0
Open Flute	4'	0	0	0	0	0	0	0	0	0	0	0	0	0
Twelfth	22/3'	0	0	0	0	0	0	0	0	0	0	0	0	0
Octave	2'	0	0	0	0	0	0	0	0	0	0	0	0	0
Cornet	IV	0	0	0	0	0	0	0	0	0	0	0	0	0
Mixture	V	0	0	0	0	0	0	0	0	0	0	0	0	0
Trumpet	8'	0	0	0	0	0	0	0	0	0	0	0	0	0
SWELL														
Stopped Flute	8'	0	0	0	0	0	0	0	0	0	0	0	0	0
Viola di Gamba	8'	0	0	0	0	0	0	0	0	0	0	0	0	0
Vox Celeste	8'	0	0	0	0	0	0	0	0	0	0	0	0	0
Koppelflute	4'	0	0	0	0	0	0	0	0	0	0	0	0	0
Flute Twelfth	22/3'	0	0	0	0	0	0	0	0	0	0	0	0	0
Waldflute	2'	0	0	0	0	0	0	0	0	0	0	0	0	0
Tierce	1 ³ /5'	0	0	0	0	0	0	0	0	0	0	0	0	0
Scharff	Ш	0	0	0	0	0	0	0	0	0	0	0	0	0
Oboe	8'	0	0	0	0	0	0	0	0	0	0	0	0	0
ACCESSORIES														
Swell-Great		0	0	0	0	0	0	0	0	0	0	0	0	0
Great-Pedal		0	0	0	0	0	0	0	0	0	0	0	0	0
Swell-Pedal		0	0	0	0	0	0	0	0	0	0	0	0	0
Tremulant Great		0	0	0	0	0	0	0	0	0	0	0	0	0
Tremulant Swell		0	0	0	0	0	0	0	0	0	0	0	0	0
Chorus		0	0	0	0	0	0	0	0	0	0	0	0	0

Registration examples Opus 20

									Great	Swell			O	
		۵							Solo on Great	Solo on Swell	-	0 2	Romantic	Plenum
		ddd	dd	d	mf	f	#	t	S	S	Trio	Trio	8	P
PEDAL														
Principal	16'	0	0	0	0	•	•	•	0	0	0	0	0	•
Subbass	16'	•	•	•	•	•	•	•	•	•	•	0	•	•
Octave	8'	0	0	0	•	•	•	•	0	0	•	0	0	•
Gedackt	8'	0	0	•	•	•	•	•	0	0	0	•	0	0
Choralbass	4'	0	0	0	0	0	•	•	0	0	0	0	0	•
Nachthorn	2'	0	0	0	0	0	•	•	0	0	0	0	0	•
Contra Trumpet	16'	0	0	0	0	0	0	•	0	0	0	0	0	0
Trumpet	8'	0	0	0	0	0	•	•	0	0	0	0	0	0
GREAT														
Bourdon	16'	0	0	0	0	0	0	•	0	0	0	0	0	0
Principal	8'	0	0	0	•	•	•	•	0	0	0	0	0	•
Stopped Flute	8'	0	•	•	•	•	•	•	•	•	•	•	•	0
Gamba	8'	•	•	•	•	•	•	•	0	0	0	0	0	0
Octave	4'	0	0	0	•	•	•	•	0	0	0	0	0	•
Open Flute	4'	0	0	•	•	•	•	•	0	0	0	0	0	0
Twelfth	2 ² / ₃ '	0	0	0	0	•	•	•	0	0	0	0	0	•
Octave	2'	0	0	0	0	0	•	•	0	0	•	0	0	•
Cornet	IV	0	0	0	0	0	0	0	0	0	0	0	0	•
Mixture	VII	0	0	0	0	0	0	•	0	0	0	0	0	0
Trumpet	16'	0	0	0	0	0	0	•	0	0	0	0	0	0
Trumpet	8'	0	0	0	0	0	0	•	0	0	0	0	0	0
Vox Humana	8'	0	0	0	Ο	•	•	•	•	0	0	0	0	0
SWELL					_	_	_	_						_
Principal	8'	0	0	0	•	•	•	•	0	0	0	0	0	•
Rohrflute	8'	0	•	•	•	•	•	•	•	•	•	0	•	0
Viola di Gamba	8' 0'	•	•	•	•	•	•	•	•	0	0	•	•	0
Vox Celeste Octave	8' 4'	0	0	0	0	0	0	0	0	0	0	0	•	0
Koppelflute	4 4'	0	0	•					0	0	•	0	0	0
Flute Twelfth	2 ² / ₃ '	0	0	0	0				0	0	•	0	0	
Waldflute	2'	0	0	0	0	•	•	•	0	0	0	0	0	•
Tierce	1 ³ /₅'	0	0	0	0	0	0	0	0	0	•	0	0	0
Nazard	1 ¹ / ₃ '	0	0	0	0	0	•	•	0	0	0	0	0	•
Scharff	III	0	0	0	0	0	0	•	0	0	0	0	0	•
Cromorne	8'	0	0	0	0	•	•	•	0	0	0	0	0	0
Oboe	8'	0	0	0	0	0	•	•	0	•	0	0	0	0
ACCESSORIES														
Swell-Great		0	•	•	•	•	•	•	•	0	0	0	•	•
Great-Pedal		0	0	•	•	•	•	•	0	•	0	0	•	•
Swell-Pedal		•	•	•	•	•	•	•	•	0	0	0	•	•
Tremulant Great		0	0	0	0	0	0	0	•	0	0	0	•	0
Tremulant Swell		0	0	0	0	0	0	0	0	•	0	0	•	0
Chorus		0	0	0	0	0	0	0	0	0	0	0	•	0

Personal registrations Opus 20

PEDAL														
Principal	16'	0	0	0	0	0	0	0	0	0	0	0	0	0
Subbass	16'	0	0	0	0	0	0	0	0	0	0	0	0	0
Octave	8'	0	0	0	0	0	0	0	0	0	0	0	0	0
Gedackt	8'	0	0	0	0	0	0	0	0	0	0	0	0	0
Choralbass	4'	0	0	0	0	0	0	0	0	0	0	0	0	0
Nachthorn	2'	0	0	0	0	0	0	0	0	0	0	0	0	0
Contra Trumpet	16'	0	0	0	0	0	0	0	0	0	0	0	0	0
Trumpet	8'	0	0	0	0	0	0	0	0	0	0	0	0	0
GREAT														
Bourdon	16'	0	0	0	0	0	0	0	0	0	0	0	0	0
Principal	8'	0	0	0	0	0	0	0	0	0	0	0	0	0
Stopped Flute	8'	0	0	0	0	0	0	0	0	0	0	0	0	0
Gamba	8'	0	0	0	0	0	0	0	0	0	0	0	0	0
Octave	4'	0	0	0	0	0	0	0	0	0	0	0	0	0
Open Flute	4'	0	0	0	0	0	0	0	0	0	0	0	0	0
Twelfth	2 ² / ₃ '	0	0	0	0	0	0	0	0	0	0	0	0	0
Octave	2'	0	0	0	0	0	0	0	0	0	0	0	0	0
Cornet	IV	0	0	0	0	0	0	0	0	0	0	0	0	0
Mixture	VII	0	0	0	0	0	0	0	0	0	0	0	0	0
Trumpet	16'	0	0	0	0	0	0	0	0	0	0	0	0	0
Trumpet	8'	0	0	0	0	0	0	0	0	0	0	0	0	0
Vox Humana	8'	0	0	0	0	0	0	0	0	0	0	0	0	0
VOXTIGITIATIA	O	O	O	O	O	O	O	O	O	O	O	O	O	O
SWELL														
Principal	8'	0	0	0	0	0	0	0	0	0	0	0	0	0
Rohrflute	8'	0	0	0	0	0	0	0	0	0	0	0	0	0
Viola di Gamba	8'	0	0	0	0	0	0	0	0	0	0	0	0	0
Vox Celeste	8'	0	0	0	0	0	0	0	0	0	0	0	0	0
Octave	4'	0	0	0	0	0	0	0	0	0	0	0	0	0
Koppelflute	4'	0	0	0	0	0	0	0	0	0	0	0	0	0
Flute Twelfth	2 ² / ₃ '	0	0	0	0	0	0	0	0	0	0	0	0	0
Waldflute	2'	0	0	0	0	0	0	0	0	0	0	0	0	0
Tierce	1 ³ /5'	0	0	0	0	0	0	0	0	0	0	0	0	0
Nazard	1 ¹ / ₃ '	0	0	0	0	0	0	0	0	0	0	0	0	0
Scharff	Ш	0	0	0	0	0	0	0	0	0	0	0	0	0
Cromorne	8'	0	0	0	0	0	0	0	0	0	0	0	0	0
Oboe	8'	0	0	0	0	0	0	0	0	0	0	0	0	0
ACCESSORIES														
Swell-Great		0	0	0	0	0	0	0	0	0	0	0	0	0
Great-Pedal		0	0	0	0	0	0	0	0	0	0	0	0	0
Swell-Pedal		0	0	0	0	0	0	0	0	0	0	0	0	0
Tremulant Great		0	0	0	0	0	0	0	0	0	0	0	0	0
Tremulant Swell		0	0	0	0	0	0	0	0	0	0	0	0	0
Chorus		0	0	0	0	0	0	0	0	0	0	0	0	0

Registration examples Opus 30

								Solo on Great	on Swell		0.1	antic	Ę
	ddd	dd	d	mf	+	Ħ	t	Solo	Solo	Trio 1	Trio 2	Romantic	Plenum
PEDAL Principal 16' Subbass 16' Octave 8' Gedackt 8' Choralbass 4' Nachthorn 2' Contra Trumpet 16' Trumpet 8'	0 0 0 0 0 0 0	0 0 0 0 0 0	0 • 0 0 0 0	0	•	•	•	0	0 • 0 0 0 0	0 • • 0 0 0 0	0 • 0 0 0 0	0 • 0 0 0 0	• • • • •
CHOIR Bourdon 8' Flute 4' Nazard 2 ² / ₃ ' Flute 2' Tierce 1 ³ / ₅ ' Sifflute 1' Mixture II-IV Vox Humana 8'	• 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0	• 0000000	• 0 0 0 0 0	• 0 0 0 0 0	•	•	• • • •	• • • • • • • • • • • • • • • • • • • •	• 0 0 0 0 0	•	• 0 0 0 0 0 0	• 0 0 0 0 0 0	• • • • •
GREAT Bourdon 16' Principal 8' Stopped Flute 8' Gamba 8' Octave 4' Open Flute 4' Twelfth 2²/₃' Octave 2' Cornet IV Mixture VII Trumpet 8'	0 0 0 0 0 0 0 0 0 0	0 0 0 0 0 0 0 0 0	0 0 0 0	0000000	000000			0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0	0 0 0 0 0 0 0 0 0	0 0 0 0 0 0 0 0 0	0 0 0 0 0 0 0 0 0	0 0 0 0 0 0 0 0 0	
SWELL Principal 8' Rohrflute 8' Viola di Gamba 8' Vox Celeste 8' Octave 4' Koppelflute 4' Flute Twelfth 2²/₃' Waldflute 2' Nazard 1¹/₃' Cromorne 8' Oboe 8'	0 0 0 0 0 0 0 0 0 0	0 0 0 0 0 0 0 0 0	0	•	• • • • • • • •		• • • • •	0 0 0 0 0 0 0 0				0	• 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
ACCESSORIES Choir-Great Swell-Great Swell-Choir Choir-Pedal Great-Pedal Swell-Pedal Tremulant Choir Tremulant Great Tremulant Swell Chorus	•	•	•	•	• • • • • •	• • • • • •	• • • • • •	• • • • • • •	0 0 0 0 0 0 0 0 0	0 0 0 0 0 0 0 0 0	0 0 0 0 0 0 0 0 0	•	• • • • • •

Personal registrations Opus 30

ACCESSORIES Choir-Great Swell-Great Swell-Choir Choir-Pedal Great-Pedal Swell-Pedal Tremulant Choir Tremulant Great Tremulant Swell Chorus	SWELL Principal Rohrflute Viola di Gamba Vox Celeste Octave Koppelflute Flute Twelfth Waldflute Nazard Cromorne Oboe	GREAT Bourdon Principal Stopped Flute Gamba Octave Open Flute Twelfth Octave Cornet Mixture Trumpet	CHOIR Bourdon Flute Nazard Flute Tierce Sifflute Mixture Vox Humana	PEDAL Principal Subbass Octave Gedackt Choralbass Nachthorn Contra Trumpet Trumpet
t	8' 8' 8' 4' 4' 2 ² / ₃ ', 2' 1 ¹ / ₃ ', 8'	16' 8' 8' 4' 4' 2 ² / ₃ ' 2' IV VII 8'	8' 4' 2 ² / ₃ ' 2' 1 ³ / ₅ ' 1' II-IV 8'	16' 16' 8' 8' 4' 2' 16' 8'
0 0 0 0 0 0 0 0 0	0 0 0 0 0 0 0 0 0 0	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0	0 0 0 0 0 0 0	0 0 0 0 0 0 0 0
0 0 0 0 0 0 0 0	000000000000	0 0 0 0 0 0 0 0 0	0 0 0 0 0 0 0	0000000
0 0 0 0 0 0 0 0	000000000000	0 0 0 0 0 0 0 0 0	0 0 0 0 0 0 0	0000000
0 0 0 0 0 0 0 0	0 0 0 0 0 0 0 0 0 0	0 0 0 0 0 0 0 0 0	0 0 0 0 0 0 0	00000000
0 0 0 0 0 0 0 0	0 0 0 0 0 0 0 0 0 0	0 0 0 0 0 0 0 0 0	0 0 0 0 0 0 0	0000000
0 0 0 0 0 0 0 0	0 0 0 0 0 0 0 0 0 0	0 0 0 0 0 0 0 0 0	0 0 0 0 0 0 0	00000000
0 0 0 0 0 0 0 0	0 0 0 0 0 0 0 0 0 0	0 0 0 0 0 0 0 0 0	0 0 0 0 0 0 0	00000000
0 0 0 0 0 0 0 0	0 0 0 0 0 0 0 0 0 0	0 0 0 0 0 0 0 0 0	0 0 0 0 0 0 0	0 0 0 0 0 0 0
0 0 0 0 0 0 0 0	000000000000	0 0 0 0 0 0 0 0 0	0 0 0 0 0 0 0	0000000
0 0 0 0 0 0 0 0	0 0 0 0 0 0 0 0 0 0	0 0 0 0 0 0 0 0 0	0 0 0 0 0 0 0	0000000
0 0 0 0 0 0 0 0	0 0 0 0 0 0 0 0 0 0	0 0 0 0 0 0 0 0 0	0 0 0 0 0 0 0	0 0 0 0 0 0 0
0 0 0 0 0 0 0 0	0 0 0 0 0 0 0 0 0 0	00000000000	0 0 0 0 0 0 0	0 0 0 0 0 0 0
0 0 0 0 0 0 0 0	00000000000	0 0 0 0 0 0 0 0 0	0 0 0 0 0 0 0	0 0 0 0 0 0 0

